

## DEFINE.X – version 06.12.29

---

### Description

---

**DEFINE.X** contains default definitions for Define Variables that are used by all of ODOT's standard criteria files. These default values are used to define text sizes and element symbology for the proposed cross section graphics.

### Inclusion Sequence

---

**DEFINE.X** must always be included first in any criteria run.

### Define Variables

---

#### “XS annotation scale”

This variable is used to control the text size for annotation placed by all of ODOT's criteria files. Enter a value of 10 for a 10:1 cross section sheet; enter a value of 5 for a 5:1 cross section sheet. The default value is 5.

### Define DGN Variables

---

There are no **DEFINE\_DGN** variables associated with **DEFINE.X**.

### Marked Points

---

No marked points are stored by **DEFINE.X**.

### Additional Processing Notes

---

With the exception of “**XS annotation scale**”, the variables contained in **DEFINE.X** have been defined to meet ODOT standards and should not be changed by the user. Since these variables represent design standards, they have been designated as "hidden" variables, and will not show up in the GEOPAK Undefined Variable Names dialog box when preparing a criteria run.