


412	411	410	
	496	495	
	589	588	


Distribution Atlas Index

Legend

- Area Light
- H-Frame Pole
- Non-Wood Power Pole
- Non-Wood Streetlight Pole
- Tower Pole
- Wood Power Pole
- Wood Streetlight Pole
- Overhead Transformer
- Power Transformer
- Step Transformer
- Underground Transformer
- Overhead Switch
- Underground Switch
- Manhole
- Vault
- Single Phase Primary Overhead
- Three Phase Primary Overhead
- Single Phase Primary Underground
- Three Phase Primary Underground
- Three Phase Secondary Overhead
- Single Phase Secondary Overhead
- Three Phase Secondary Underground
- Single Phase Secondary Underground
- Duct Bank
- County
- Not City of Columbus

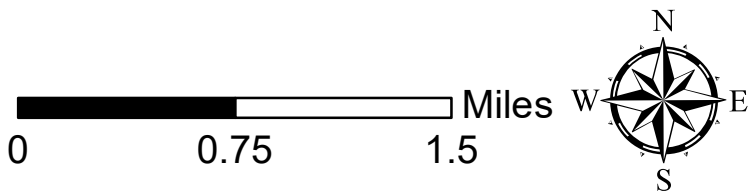

While every reasonable effort has been made to ensure the accuracy of this information, it is provided without warranty of any kind, whether expressed or implied. The City of Columbus assumes no liability arising from any use of this information and is not responsible for its accuracy or completeness. Those using this information for any reason are solely responsible for its use and do so at their own risk.

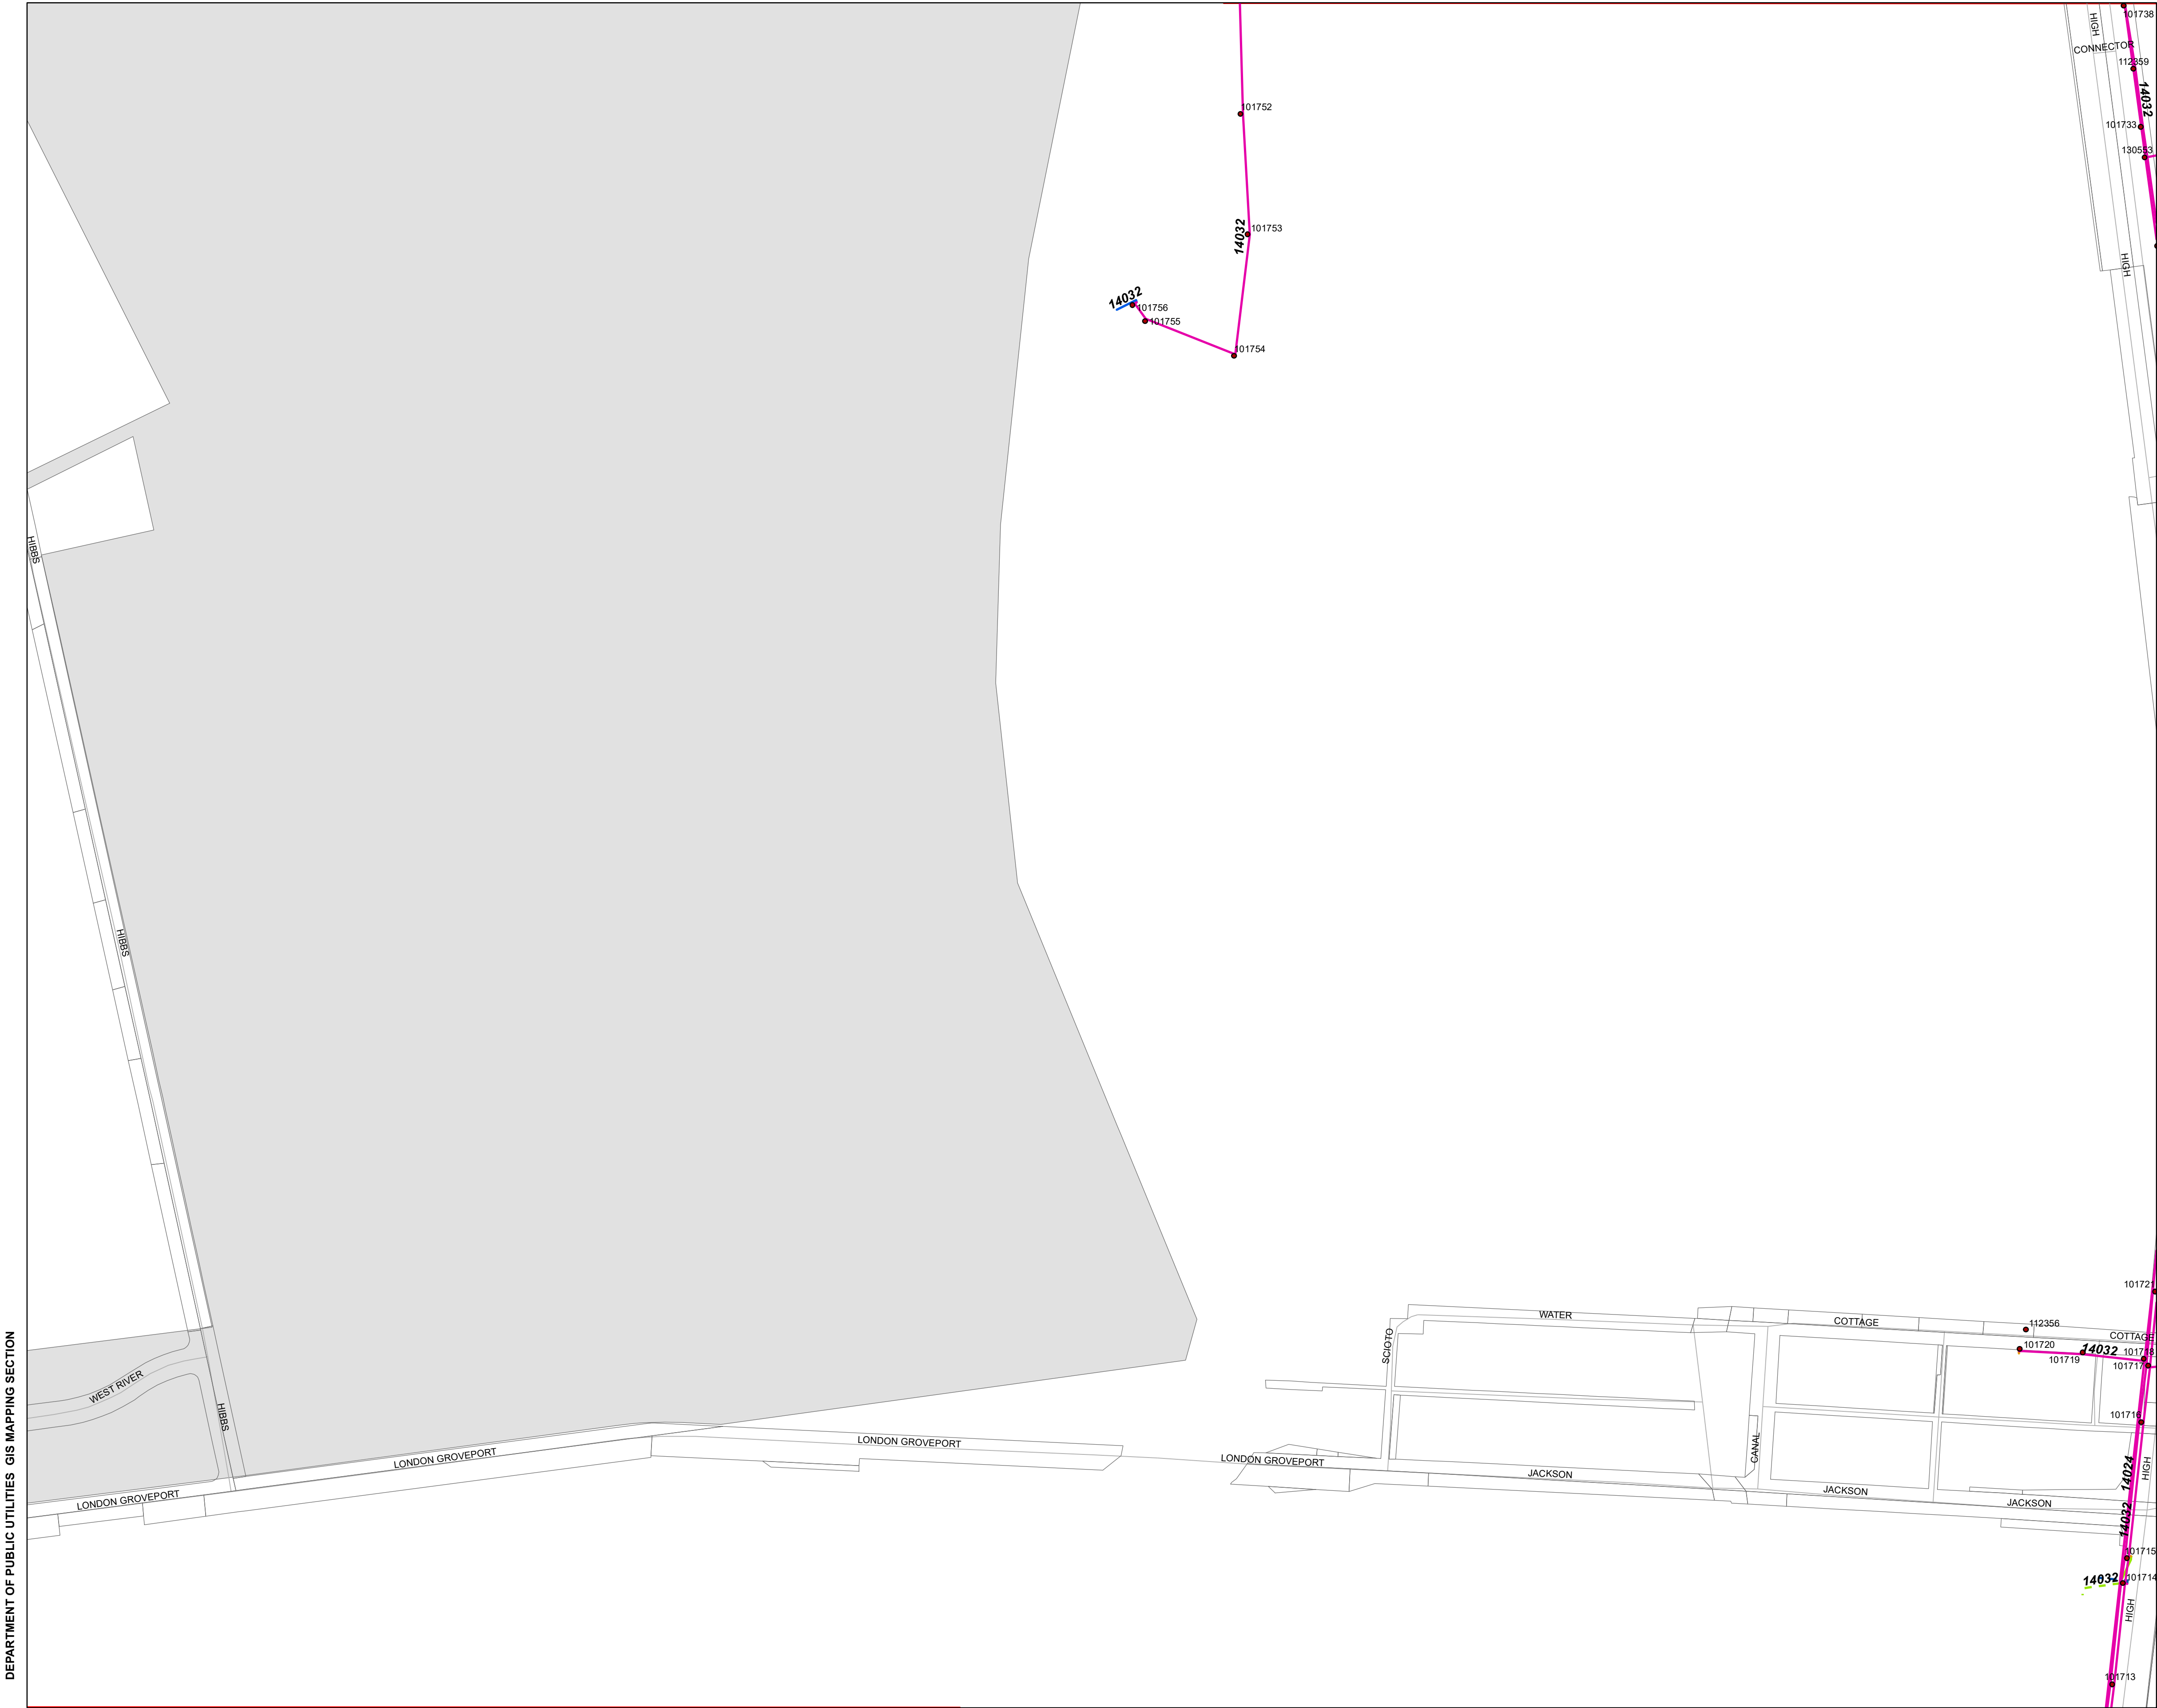

CREATED: 6/10/2025

Distribution Atlas 496