Revision Date: January 11, 2015

Documentation:

ODOTcaddL.pltcfg - Printer Driver Settings

General

Driver:

Bentley Windows printer driver

Notes:

This printer driver is a MicroStation wrapper around the Windows printing system. It is the preferred driver for creating physical printed output.

The Bentley Windows printer driver operates in conjunction with an operating system device driver, provided by either the plotter hardware vendor, Microsoft, Bentley, or another driver developer.

The advantages of printing through a device-specific driver include access to manufacturer-specific features such as host-based color correction and paper handling (stapling, folding, etc.), as well as efficient printing of OLE objects.

The disadvantage of the Windows printing system is that large amounts of raster data can cause less sophisticated device drivers to consume large amounts of host memory and possibly fail.

Rather than use a single printer driver configuration for all Windows printers, Bentley recommends creating a separate printer driver configuration file for each Windows printer you intend to use. Inside each printer driver configuration, specify the appropriate Windows printer name (and other default settings) in the Windows Printer properties.

The printer driver configuration may be also be customized to produce a plot file on disk, or a Windows Enhanced Metafile, rather than printing directly to a plotter.

Base Properties Genera	s I	
	Automatic Centering = True Automatic Open Plot File After Creation = False Default Color Mode = Grayscale Default Line Cap = Square Default Line Join = Bevel Default Number of Copies = 1 Default Output Mode = No Preference Default Pen Table File Name = ODOTcadd_Pen.tbl Default Design Script File Name = Print Style Name =	[Default] [Default] [ODOT setting] [ODOT setting] [ODOT setting] [Default] [ODOT setting] [Default] [Default] [Default]
Windov	vs Printer	
	Default Windows Printer Name = Default Form Name = Default Tray Name = Full Sheet Mode = True Orientation = Default Orientation	[Default] [Default] [Default] [Default] [Default]

	Default Create Metafile = False	[Default]
Default	Print File Name File Name = Extension = Auto Increment Extension = False Auto Overwrite File = False	[Default] [Default] [Default] [Default]
Print Bo	brder Border On = False Border Outline On = False Include File Name in Border Text = False Include Model Name in Border Text = False Include Date/Time in Border Text = False Border Comment = Border Comment = Border Text Offset (cm) = 0.0 x = 0 y = 0 Border Pen = 1 Border Text Height (cm) = 0.254 Border Width (cm) = 0.025 Fence Outline On = False Fence Outline Pen = 1	[Default] [ODOT setting] [Default] [Default] [Default] [Default] [Default] [Default] [Default] [Default] [Default] [Default] [Default]
Raster	Printing Raster Quality Factor (0-100%) = 100 Raster Brightness = 0 Raster Contrast = 0 Print Raster = True Print Raster in Grayscale = False Ignore Color Rule for Monochrome Raster = False	[Default] [Default] [Default] [Default] [Default]
Advanc	Automatic Rotation Direction = Rotate 90 cw Enable Driver Clipping = True Enable Output Width = True Enable Path Support = Not defined Level of Detail Mode = Show Range Minimum Level of Detail = 4 Maximum Miter Angle (degrees) = 90 Always Rasterize OLE Attachments = False Optimize Raster Color Depth = True Print Points = True Rasterize Quality Factor (0-100%) = 100 Scale Adjustment Factor = 1,1 x = 1 y = 1 Enable Merging of Background Rasters = True Windows Printer Simple GDI = False Windows Printer Select Form No Clip = False	[Default] [ODOT setting] [Default] [Default] [ODOT setting] [Default] [ODOT setting] [Default] [Default] [Default] [Default] [Default] [Default] [Default] [Default] [Default] [Default] [Default] [Default] [Default] [Default] [Default] [Default]

Paper Sizes

Define paper sizes = **on**

[ODOT setting]

Name	Size	Margins	Is Default	Print Scale	Weight Scale	Style Scale	Auto Rotate	Windows Name
Letter	11,8.5 in.		True		0.5	0.5		

Color Maps

Define maps from design color to print symbology = off

[Default]

Weight Maps

Define maps from design weight to print width = on

[Default]

Design Weight	Print Width
0	0.006 in.
1	0.014 in.
2	0.026 in.
3	0.036 in.
4	0.046 in.
5	0.056 in.
6	0.066 in.
7	0.076 in.
8	0.086 in.
9	0.096 in.
10 - 31	0.106 in.

Note: Thicknesses for weights 10 to 31 are the same to avoid printing abnormally thick lines.

Line Styles

Define print line style patterns = on

[Default]

Style Number	Software	On/Off Pattern
1		0.35 1.05 mm
2		1.75 1.05 mm
3		4.2 1.4 mm
4		2.8 1.05 0.7 1.05 mm
5		1.4 1.4 mm
6		2.1 0.7 0.7 0.7 0.7 0.7 mm
7		2.8 0.7 1.4 0.7 mm

Font Maps

Define maps from design fonts to hardware (or Windows TrueType) fonts = **disabled**

[ODOT setting]

Programs

Define pre-print and post-print program commands = off [Default]

Contact Information:

If you have any questions, suggestions, or problems please contact the ODOT Office of CADD and Mapping Services CADD Support team or use the following form on the ODOT web site at:

http://www.dot.state.oh.us/Divisions/Engineering/CADDMapping/CADD/Pages/suggestions.aspx