

* CONTINGENCY QUANTITY TO BE USED AS DIRECTED BY THE ENGINEER.
SEE NORTHEAST GATEWAY GENERAL NOTES FOR SEEDING QUANTITIES.

