

The Great Lakes Construction Co.

**TRANSMITTAL
No. 038**

10737 Medallion Drive
Cincinnati, Ohio 45241

PROJECT: ODOT 150085 HAM 71-1.34 **DATE:** January 11, 2016

TO: ODOT District 8 **REF:** Carbon Monoxide Detection System
505 South SR 741 Submittals - REVISED (REV 2)
Lebanon, OH 45036

ATTN: Marvin Lennon

WE ARE SENDING		SUBMITTED FOR:		ACTION TAKEN:	
<input type="checkbox"/>	Shop Drawings	X	Approval	<input type="checkbox"/>	Approved as Submitted
<input type="checkbox"/>	Letter	<input type="checkbox"/>	Your Use	<input type="checkbox"/>	Approved as Needed
<input type="checkbox"/>	Prints	<input type="checkbox"/>	As Requested	<input type="checkbox"/>	Returned after Loan
<input type="checkbox"/>	Change Order	<input type="checkbox"/>	Review and Comment	<input type="checkbox"/>	Resubmit
<input type="checkbox"/>	Plans	<input type="checkbox"/>		X	Submit
<input type="checkbox"/>	Samples	SENT VIA:		<input type="checkbox"/>	Returned
<input type="checkbox"/>	Specifications	X	Attached	<input type="checkbox"/>	Returned for Correction
X	Other: Submittals per Plan Notes	<input type="checkbox"/>	Separate Cover:	<input type="checkbox"/>	Due Date:

<u>SUBMITTAL</u>	<u>COPIES</u>	<u>DATE</u>	<u>DESCRIPTION</u>
CO Det Sys - REV 2	1 pdf	1/11/2016	Carbon Monoxide System - REV 2 - Dated 1/22/15

REMARKS: This Submittal provides the following items per the Submittal Notes on sheet 381/555
Action Submittals - 1.06 - D
This Submittal includes responses & revision due to the HMM Comments provided on
the submittal included with TR85.15 - 023. Please review/approve or comment by
1/18/16.

Signed:



Ryan W. Jones, P.E.

LYTLE TUNNEL RENOVATION &UPGRADES

**Carbon Monoxide Detection System
REV 2
ITEM NO. 281
HAM-71-01.34**

GLENWOOD ELECTRIC, INC.
12250 CHANDLER DRIVE
WALTON, KY 41094
(859)485-3700

I HEREBY CERTIFY THAT THE EQUIPMENT/MATERIAL SHOWN AND MARKED IN THIS SUBMITTAL IS IN COMPLIANCE WITH THE CONTRACT DRAWING AND SPECIFICATIONS, CAN BE INSTALLED IN THE ALLOCATED SPACE, WILL BE STORED IN ACCORDANCE WITH THE MANUFACTURERS RECOMMENDATION, WILL BE INSTALLED PER NEC, AND IS SUBMITTED FOR APPROVAL.

CERTIFIED BY: Phil Thaman

DATE: 12/22/2015

Lytle Road Tunnel

Submittal Reference: 85.15-Item 281-Carbon Monoxide Detection System

Date: December 3, 2015

Reviewed By: Norris Harvey and Karim Khattab

Status: Revise and Resubmit

Comments: (Responses in red)

1. All submittal information shall be in English. The Certification and other information that is in a foreign language is not acceptable. This requires re-submission in English.
Pages in manual with foreign languages have been marked "Irrelevant".
2. Certifications to foreign standards are not acceptable unless excepted in the specifications. This material is not relevant and should be removed from the submittal. This product is being installed in the United States. Resubmit with correct certifications.
Foreign standards certifications have been marked "Irrelevant".
3. The warrantee period by the specification is 1-year from project acceptance, not purchase of product.
Warranty page in manual has been revised to address this request.
4. We have marked up the submittal to effectively remove extraneous information. This submittal needs to be amended and resubmitted to verify that the information that we assume is not relevant is actually not relevant.
Extraneous information has been marked out and labeled "Irrelevant".
5. Calibration of the sensor should only be accomplished with a calibration gas that has certified pre-defined gas levels.
The calibration procedure listed on drawing 2571-C01 is per the manufacturer's listed procedure. Honeywell provides the span gas used to calibrate the sensor.
6. Background air shall not be used for calibration. A compressed air cylinder shall be used for calibration of the CO detectors. [Page 4]
On drawing 2571-C01, the calibration note has been revised to address this concern.
7. CO detectors are utilize 4-20mA connection/output that shall connect to the PLC. [Page 4]
Drawing 2571-C01 revised to show only the 4-20mA connection method.
8. The submittal is missing the information on the Toxic Calibration Kit XCDTOXKIT, mentioned in Page 4.
Unfortunately, no additional information is available for this item beyond a listing in the price book.

9. A conductor size #14 shall be used as per the contract documents. Products marked on the drawings, Belden 1119A and 1528A, are to be revised. [Page 5]

A #14 conductor has been chosen to replace the Belden 1119A that was listed previously and is shown on drawing 2571-EL01. The reference to Belden 1528A has been removed entirely as it was for use with the relay contact method of interfacing the detector as opposed to the 4-20mA connection method.

10. The submittal contains extraneous material that has been partially crossed-out, see attached file reflecting edits.

Corrections have been made in the manual.

LYTLE TUNNEL RENOVATIONS &
UPGRADES
SUBMITTED 12/22/15,
MANUFACTURER: 3S INC.
BID ITEM 281

GLENWOOD ELECTRIC
12250 CHANDLER DRIVE
WALTON, KY 41094

**OHIO DEPARTMENT OF TRANSPORTATION
I-71 LYTLE TUNNEL
CO DETECTION SYSTEM**



8686 Southwest Parkway Harrison, OH 45030
Phone: 812-656-8045 Fax: 812-656-8545

3S Incorporated Job # 15-2571

TABLE OF CONTENTS

SYSTEM DATA SHEETS

1. HONEYWELL ANALYTICS – SPXCDULNCX

TECHNICAL MANUAL

1. SENSEPOINT XCD GAS DETECTOR

Sensepoint XCD

LYTLE TUNNEL RENOVATIONS &
UPGRADES
SUBMITTED 12/22/15,
MANUFACTURER: 3S INC.
BID ITEM 281

Honeywell



**Flammable, toxic and
oxygen gas detector for
industrial applications**

Sensepoint XCD



One-Stop Shop

- Flammable (catalytic or infrared), toxic and oxygen versions available
- New and retrofit applications
- Suitable for indoor or outdoor use
- Stainless steel or aluminium explosion-proof housing options
- IP66 as standard

Proven and Reliable Sensor Technology

- Surecell™ electrochemical sensors
- Poison immune infrared sensors
- Poison resistant catalytic bead sensors
- Long life sensors

Global Approvals

- US and Latin America, European, Canadian and Asian
- Compliant with UL, INMETRO, ATEX, IECEx, CSA, KTL, PA, GB and CCCF standards

Easy to Use

- User friendly and intuitive tri-color backlit display with digits, bar graph and icons
- Fully configurable via magnetic switches
- Optional remote sensor mounting
- Selectable sink or source 4-20mA output
- Auto-inhibit during maintenance
- MODBUS communications for remote diagnostics/configuration

Cost Effective

- Common transmitter platform
- Minimal training required
- Reduced spares
- Non-intrusive, one-man operation
- Plug-in sensor replacement
- MODBUS multi drop option offers cabling savings

Simple Installation

- Plug-in display module removes to give access to terminal area
- Integral mounting bracket
- 2 x M20 or ¾" NPT cable/conduit entries (certification dependent)
- Removable plug/socket type terminal blocks for ease of wiring
- Sink/source switch to suit preferred wiring topology

Range of Optional Accessories

- Remote sensor mounting kit
- Remote sensor gassing kit
- Duct mounting kit
- Calibration gas flow housing
- Collecting cone

Typical Applications

- Industrial manufacturing facilities
- Power plants
- Waste water facilities
- Utilities
- Food and beverage production
- Refineries and chemical plants
- Onshore oil and gas terminals
- Production platforms
- Exploration and drilling

The Sensepoint XCD range provides comprehensive monitoring of flammable, toxic and Oxygen gas hazards in potentially explosive atmospheres, both indoors and outdoors. Users can modify detector operation using the LCD and magnet switches without ever needing to open the unit. This enables one-man, non-intrusive operation and reduces routine maintenance time and costs.


A tri-color backlit LCD clearly indicates the unit's status at a glance, even from a distance. A steady green backlight indicates normal operation, flashing yellow indicates fault and flashing red indicates an alarm.

All detectors are supplied pre-configured and include 2 programmable alarm relays, 1 programmable fault relay as well as an industry standard 4-20mA output (sink or source selectable) and MODBUS.

The scale, range, relay operation, alarm set point and electronic tag number of the detector can be adjusted using the transmitter's LCD and non-intrusive magnetic switches. Outputs are automatically inhibited during adjustment, thereby reducing the risk of false alarm at the control panel during maintenance.


Sensepoint XCD has an integral mounting plate for surface mounting or can be mounted to a horizontal or vertical pipe using the optional pipe mounting bracket. Electrical installation can be made using either conduit or cable with suitable mechanical protection. Two M20 or ¾" NPT entries are provided (depending on certification). A weatherproof cap is also included for use in the harshest outdoor conditions. Other optional accessories include a sunshade/deluge protection, duct mounting kit, collecting cone and remote mounting sensor socket.

Sensepoint XCD ensures easy installation and the fastest routine operation by removing the need for hot work permits in hazardous areas. Using easy to replace plug-in sensors, downtime is also reduced and on-going costs are minimized through the use of poison resistant flammable sensors, poison immune infrared Hydrocarbon sensors and patented Surecell™ toxic sensors.

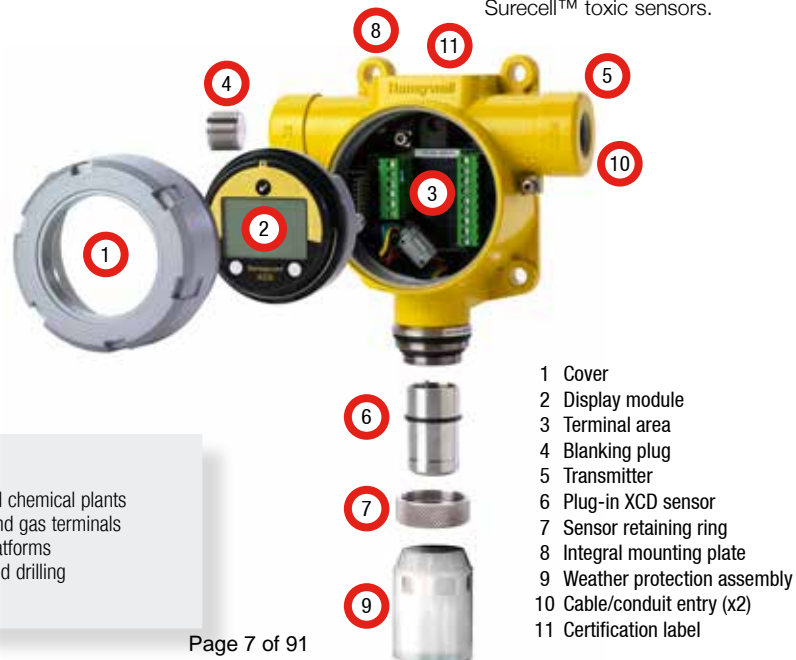

- 1 Cover
- 2 Display module
- 3 Terminal area
- 4 Blanking plug
- 5 Transmitter
- 6 Plug-in XCD sensor
- 7 Sensor retaining ring
- 8 Integral mounting plate
- 9 Weather protection assembly
- 10 Cable/conduit entry (x2)
- 11 Certification label

Sensepoint XCD Overview

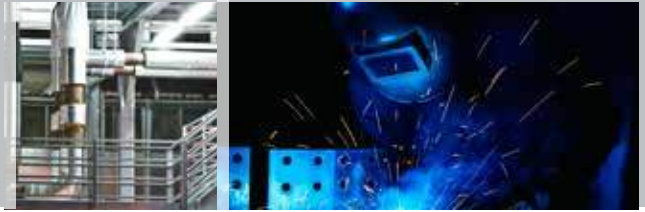

There are three different types of the XCD transmitter for use with three different families of sensors.


The mV type transmitter is for use with the mV family of XCD sensors including catalytic sensors to detect flammable gases in the range 0-100%LEL and infrared (IR) sensors for detection of Hydrocarbon gases in the range 0-100%LEL and 0-100%Vol*, as well as Carbon Dioxide (CO₂) in the range 0-2%Vol.

The EC type transmitter is for use with the EC family of XCD sensors including Carbon Monoxide (CO), Hydrogen Sulfide (H₂S) and Hydrogen (H₂).

The Oxygen transmitter is for use with the Oxygen (O₂) XCD sensors.

A transmitter can auto-recognize any sensor from within its sensor family. The sensor simply plugs into the bottom of the transmitter and the transmitter automatically configures itself accordingly.

Sensepoint XCD Sensor Families, Gases and Ranges								
	Gas	User Selectable Full Scale Range	Default Range	Steps	Selectable Cal Gas Range	Default Cal Point		
Sensor Family	Catalytic Bead Sensors							
	mV	Flammable 1 to 8*	20.0 to 100.0%LEL	100%LEL	10%LEL	30 to 70% of selected full scale range	50%LEL	
		Infrared Sensors						
		Methane	20.0 to 100.0%LEL	100%LEL	10%LEL		50%LEL	
	Propane				50%Vol.			
	Carbon Dioxide	2%Vol.	2%Vol.	0.1%Vol.	1%Vol.			
	Electrochemical Sensors							
EC	Hydrogen Sulfide	10.0 to 100.0ppm	50.0ppm	0.1ppm	10ppm			
	Carbon Monoxide	100 to 1,000ppm	300ppm	100ppm	100ppm			
	Hydrogen	1,000ppm only	1,000ppm	n/a	500ppm			
O ₂	Oxygen	25.0%Vol. only	25.0%Vol.	n/a	20.9%Vol. (Fixed)	20.9%Vol.		

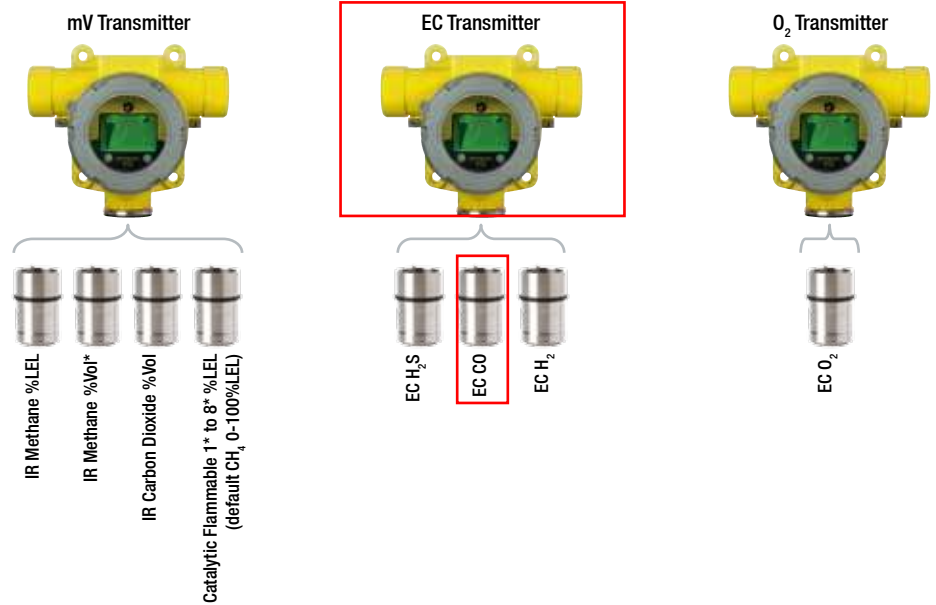







Ready, Steady, Go!

Sensepoint XCD uses three instantly recognizable 'traffic light' colors to indicate its status. The large tri-color backlit LCD is steady green to indicate normal operation, flashes yellow to indicate a fault/warning and flashes red to indicate an alarm. This allows anyone in the area to clearly see at a glance the status of any detector. This can be particularly useful to identify detector status if the detector is located in a difficult to access area or if a number of detectors are located in the same area.



XCD is the right choice for a variety of demanding industrial applications

	Building Environment	Specific Area	Gases Present (Detected by XCD)
	Chemical Plants	<ul style="list-style-type: none"> • Raw material storage • Process Areas • Laboratories • Pump rows • Compressor stations • Loading/unloading areas 	<ul style="list-style-type: none"> • General Hydrocarbons • H₂S • NH₃ • O₂
	Oil & Gas	<ul style="list-style-type: none"> • Exploration drilling rigs • Production platforms • Onshore oil and gas terminals • Refineries 	<ul style="list-style-type: none"> • General Hydrocarbons • H₂S • CO • O₂
	Power Stations	<ul style="list-style-type: none"> • Around the boiler pipework and burners • Turbines • Coal silos and conveyor belt areas in older coal/oil fired stations 	<ul style="list-style-type: none"> • Flammable • CH₄ • H₂ • O₂
	Waste Water Treatment Plants	<ul style="list-style-type: none"> • Digesters • Plants sumps • H₂S scrubbers • Pumps 	<ul style="list-style-type: none"> • General Hydrocarbons • H₂S • CO • O₂
	Boiler Rooms	<ul style="list-style-type: none"> • Incoming gas main • Boiler and gas piping 	<ul style="list-style-type: none"> • General Hydrocarbons • H₂S • CO • O₂
	Hospitals	<ul style="list-style-type: none"> • Laboratories • Refrigeration plants • Boiler rooms 	<ul style="list-style-type: none"> • General Hydrocarbons • H₂S • CO • O₂

LYTLE TUNNEL RENOVATIONS & UPGRADES
SUBMITTED 12/22/15,
MANUFACTURER: 3S INC.
BID ITEM 281

Find out more

www.honeywellanalytics.com

Contact Honeywell Analytics:

Americas

Honeywell Analytics, Inc.
 405 Barclay Blvd.
 Lincolnshire, IL 60069
 USA
 Tel: 847.955.8200
 Toll-free: 800.538.0363
 Fax: 847.955.8210
detectgas@honeywell.com

Technical Services

ha.service@honeywell.com

www.honeywell.com

Please Note:

While every effort has been made to ensure accuracy in this publication, no responsibility can be accepted for errors or omissions. Data may change, as well as legislation, and you are strongly advised to obtain copies of the most recently issued regulations, standards, and guidelines. This publication is not intended to form the basis of a contract.

Europe, Middle East, Africa

Life Safety Distribution AG
 Javastrasse 2
 8604 Hegnau
 Switzerland
 Tel: +41 (0)44.943.4300
 Fax: +41 (0)44.943.4398
gasdetection@honeywell.com

Honeywell Analytics Serves Every Business

We offer the industry's most complete range of gas detection products and services to meet all customer needs.

Industrial

Honeywell Analytics and renowned legacy Sieger, Fire Sentry and Manning gas detection systems with advanced electrochemical, infrared and open path sensing technologies

- » Applications: oil and gas, cold storage, water/wastewater treatment, chemicals, engine rooms, plastics and fibers, agriculture, printing and light industrial

Commercial

Honeywell Analytics and legacy Vulcain gas detection from standalone units to fully engineered, multi-point systems, all offering cost-effective regulatory compliance

- » Applications: parking structures, chillers, mechanical rooms, office towers, commercial buildings, shopping centers, swimming pools, golf courses, schools and universities, laboratories

Portables

Single or multi-gas BW Technologies, Sperian (Biosystems), Lumidor and other premium detectors with compact, lightweight designs ranging from simple alarm only units to advanced, fully configurable and serviceable instruments

- » Applications: underground utility and electricity ducts, boiler rooms, post-fire sites, sewers, industrial plants, industrial hygiene, first responder teams, remote fleets

High Tech/Government

A complete portfolio of gas and chemical detection instrumentation including infrared spectroscopy with no cross interference (MST Technologies), to Chemcassette paper-based solutions (MDA Scientific) offering detection down to parts per billion

- » Applications: semiconductor manufacturing and nanotechnology, aerospace propulsion and safety, specialty chemicals industry, research laboratories, emergency response

Technical Services

24/7 global network includes post-sales service and Systems Integration teams

- » Emergency call out, service contracts, on/off-site repair, training and commissioning
- » Complete range of spares, consumables and accessories

Asia Pacific

Honeywell Analytics, Asia Pacific
 #508, Kolon Science Valley (1)
 187-10 Guro-Dong, Guro-Gu
 Seoul, 152-050
 Korea
 Tel: +82 (0)2.2025.0307
 Fax: +82 (0)2.2025.0329
analytics.ap@honeywell.com





Sensepoint XCD

Flammable, toxic and oxygen gas detector for industrial applications

Use	3 wire, 4-20mA and RS485 MODBUS output fixed point detector with in-built alarm and fault relays for the protection of personnel and plant from flammable, toxic and Oxygen hazards. Incorporates a transmitter with local display and fully configurable via non-intrusive magnetic switch interface.											
Electrical												
Input Voltage Range	12 to 32VDC (24VDC nominal)											
Max Power Consumption	Maximum power consumption is dependent on the type of gas sensor being used. Electrochemical cells = 3.7W, IR = 3.7W and catalytic = 4.9W. Maximum inrush current = 800mA at 24VDC											
Current Output Relays	Sink or source 3 x 5A@250VAC. Selectable normally open or normally closed (switch) and energized/de-energised (programmable) Alarm relays default normally open/de-energized. Fault relay default normally open/energized											
Communication	RS485, MODBUS RTU											
Construction												
Material	Housing: Epoxy painted aluminium alloy ADC12 or 316 stainless steel Sensor: 316 stainless steel											
Weight (approx)	Aluminium Alloy LM25: 4.4lbs 316 Stainless Steel: 11 lbs											
Mounting	Integral mounting plate with 4 x mounting holes suitable for M8 bolts. Optional pipe mounting kit for horizontal or vertical pipe Ø1.5 to 3" (2" nominal)											
Cable Entries	UL\cUL versions: 2 x ¾"NPT conduit entries. Suitable blanking plug supplied for use if only 1 entry used. Seal to maintain IP rating; ATEX/IECEx versions: 2 x M20 cable entries											
Environmental												
IP Rating	IP66 in accordance with EN60529:1992											
Certified Temperature Range	40°F to +149°F (-40°C to +65°C)											
Detectable Gases and XCD Sensor Performance												
Gas	User Selectable Full Scale Range	Default Range	Steps	User Selectable Cal Gas Range	Default Cal Point	Response Time (T90) Secs	Accuracy	Operating Temperature Min Max		Default Alarm Points A1 A2		
Electrochemical Sensors												
Oxygen	25.0%Vol. only	25.0%Vol.	n/a	20.9%Vol. (Fixed)	20.9%Vol.	<30	<±0.5%Vol.	-20°C / -4°F	55°C / 131°F	19.5%Vol. ▼	23.5%Vol. ▲	
Hydrogen Sulfide*	10.0 to 100.0ppm	50.0ppm	0.1ppm		25ppm	<50	<±1ppm	-20°C / -4°F	55°C / 131°F	10ppm ▲	20ppm ▲	
Carbon Monoxide**	100 to 1,000ppm	300ppm	100ppm		100ppm	<30	<±6ppm	-20°C / -4°F	55°C / 131°F	30ppm ▲	100ppm ▲	
Hydrogen	1,000ppm only	1,000ppm	n/a		500ppm	<65	<±25ppm	-20°C / -4°F	55°C / 131°F	200ppm ▲	400ppm ▲	
Nitrogen Dioxide***	10.0 to 50.0ppm	10.0ppm	5.0ppm		5.0ppm	<40	<±3ppm	-20°C / -4°F	55°C / 131°F	5.0ppm ▲	10.0ppm ▲	
				30 to 70% of selected full scale range								
Catalytic Bead Sensors												
Flammable 1 to 8	20.0 to 100.0%LEL	100%LEL	10%LEL			50%LEL	<25	<±1.5%LEL	-20°C / -4°F	55°C / 131°F	20%LEL ▲	40%LEL ▲
Infrared Sensors												
Methane	20.0 to 100.0%LEL	100%LEL	10%LEL			50%LEL	<30	<±1.5%LEL	-20°C / -4°F	50°C / 122°F	20%LEL ▲	40%LEL ▲
Propane	20 to 100%LEL	100%LEL	10%LEL			50%LEL	<30	<±1%LEL	-20°C / -4°F	50°C / 122°F	20%LEL ▲	40%LEL ▲
Carbon Dioxide	2%Vol. only	2%Vol.	n/a			1%Vol.	<30	<±0.04%Vol.	-20°C / -4°F	50°C / 122°F	0.4%Vol. ▲	0.8%Vol. ▲
NOTE: For Cat Bead and Infrared sensors, Lowest Detectable Limit is 5% LEL and Lowest Alarm Level is 10% LEL. ▲ - Rising Alarm ▼ - Falling Alarm												
Certification												
US, Latin America, Canada	UL/c-UL - Class I, Division 1, Groups B, C and D, Class I, Division 2, Groups B, C & D, Class II, Division 1, Groups E, F & G, Class II, Division 2, Groups F & G. -40°C to +65°C											
European International	ATEX Ex II 2 GD Ex d IIC Gb T6 (Ta -40°C to +65°C) Ex tb IIIC T85°C Db IP66 IEC Ex d IIC Gb T6 (Ta -40°C to +65°C) Ex tb IIIC T85°C Db IP66											
EMC	CE: EN50270:2006 EN6100-6-4:2007											
Performance	UL508; CSA 22.2 No. 152 (flammable gasses, excludes infrared sensors); ATEX, IEC/EN60079-29-1:2007, EN45544, EN50104, EN50271; China: PA Pattern Measurement (for transmitter and toxic gas sensors) "CCCC" Shenyang for Flammable (fire dept approval)											

Find out more

www.honeywellanalytics.com

Toll-free: 800.538.0363

Please Note:

While every effort has been made to ensure accuracy in this publication, no responsibility can be accepted for errors or omissions. Data may change, as well as legislation, and you are strongly advised to obtain copies of the most recently issued regulations, standards, and guidelines. This publication is not intended to form the basis of a contract.



Sensepoint XCD Gas Detector

1 Safety

Ensure that this Technical Manual is read and understood **BEFORE** installing / operating / maintaining the equipment. Pay particular attention to **Warnings** and **Cautions**. All document **Warnings** are listed here and repeated where appropriate at the start of the relevant chapter(s) of this Technical Manual. **Cautions** appear in the sections/sub-sections of the document where they apply.

WARNINGS

Sensepoint XCD is designed for installation and use in Zone 1 or 2 hazardous areas in many countries including Europe and for Class 1 Division 1 or 2 area applications in North America.

Installation must be in accordance with the recognized standards of the appropriate authority in the country concerned.

Access to the interior of the detector, when carrying out any work, must only be conducted by trained personnel.

Before carrying out any work ensure local regulations and site procedures are followed. Appropriate standards must be followed to maintain the overall certification of the detector.

For installations where conduit is used, and the sensor is mounted directly to the Sensepoint XCD, there must be a "Seal Fitting" installed for each of the cable gland entries within 18 inches of the Sensepoint XCD. The total distance of the location of these Seal Fittings is 18 inches. (e.g. If all 3 gland entries are to be used, 3 Seal Fittings should be located, each within 6 inches of the wiring entrance).

If using an anti-seize compound, the threads should be thinly coated with an approved silicone free compound e.g. petroleum jelly

To reduce the risk of ignition of hazardous atmosphere, de-classify the area or disconnect the equipment from the supply circuit before opening the detector enclosure. Keep assembly tightly closed during operation.

Never attempt to open a junction box/enclosure or replace/refit the sensor in potentially hazardous atmospheres while power is still applied to the transmitter.

The detector must be earthed/grounded for electrical safety and to limit the effects of radio frequency interference. Earth/ground points are provided inside and outside the unit. The internal grounding shall be used as the primary equipment ground. The external terminal is only a supplemental bonding connection where local authorities permit or require such a connection.

Ensure that all screens/instrument earth/clean earth wiring is earthed/grounded at a single point (either at the controller or detector - BUT NOT BOTH) to prevent false readings or alarms that may occur due to potential earth/ground loops.

*Take care when handling sensors as they may contain corrosive solutions.
Do not tamper with or in any way disassemble the sensor.*

Do not expose to temperatures outside the recommended ranges.

Do not expose sensors under storage conditions to organic solvents or flammable liquids.

At the end of their working life, replacement electrochemical sensors for oxygen and toxic gas must be disposed of in an environmentally safe manner. Disposal should be according to local waste management requirements and environmental legislation. Alternatively, old replaceable sensors may be securely packaged and returned to Honeywell Analytics clearly marked for environmental disposal.

Electrochemical sensors should NOT be incinerated as this action may cause the cell to emit toxic fumes.

Refer to the local or national regulations relative to the installation at the site. For Europe see EN60079-29-2, EN60079-14 and EN61241-14.

Only assessed for ATEX for ignition hazards.

This equipment is designed and constructed as to prevent ignition sources arising, even in the event of frequent disturbances or equipment operating faults.

The sensor head must be fitted with the supplied weather protection, and mounted so that the sinter is pointing downward to provide ingress protection IPX6.

The weather protection is a potential electrostatic charging hazard. The manufacturer's instructions should be observed.

NOTE: The control card must have a suitably rated fuse.

2 Information

This manual is for use with the Sensepoint XCD range transmitters only.

The Start-up/Surge/In rush current is dependant on the type of power supply used. The typical start-up current for Sensepoint XCD is less than 800mA. Measure the start-up current using the specific power supply before installation to ensure suitability for your application.

Honeywell Analytics can take no responsibility for installation and/or use of its equipment if not done so in accordance with the appropriate issue and/or amendment of the Technical Manual.

The reader of this Technical Manual should ensure that it is appropriate in all details for the exact equipment to be installed and/or operated. If in doubt, contact Honeywell Analytics for advice.

The following types of notices are used throughout this Technical Manual:

WARNING

Identifies a hazardous or unsafe practice which could result in severe injury or death to personnel.

Caution: Identifies a hazardous or unsafe practice which could result in minor injury to personnel, or product or property damage.

Note: Identifies useful/additional information.

Every effort has been made to ensure the accuracy of this document, however, Honeywell Analytics can assume no responsibility for any errors or omissions in this document or their consequences.

Honeywell Analytics would greatly appreciate being informed of any errors or omissions that may be found in the content of this document.

For information not covered in this document, or if there is a requirement to send comments/corrections about this document, please contact Honeywell Analytics using the contact details given on the back page.

Honeywell Analytics reserve the right to change or revise the information supplied in this document without notice and without obligation to notify any person or organization of such revision or change. If information is required that does not appear in this document, contact the local distributor/agent or Honeywell Analytics.

3 Table of contents

1 Safety	2
2 Information	3
4 Introduction	6
4.1 Transmitter.....	7
4.2 Flammable, Toxic Oxygen Gas sensors	7
4.3 Accessories.....	8
4.4 Options	10
4.4.1 Modbus®	10
5 Installation	12
5.1 Mounting and location.....	13
5.2 Mounting the transmitter	13
5.3 Installing the sensor	15
6 Electrical connections	16
6.1 Transmitter Wiring.....	17
6.2 Terminal connections	18
6.3 Power.....	19
6.4 Cabling.....	20
6.5 Cable and Earth/Ground regimes	20
6.6 Ground Terminal Wiring	21
7 Default configuration	22
8 Normal Operation	23
8.1 Display Screen.....	23
8.2 System Status.....	24
8.3 Magnetic Wand Activation.....	25
8.4 Mode Structure	25
9 First time switch on (Commissioning)	26
10 Response Check and Calibration	28
10.1 Zeroing and span calibration	28
11 General Maintenance	32
11.1 Operational Life.....	32
12 Servicing	33
12.1 Sensor replacement.....	33
12.2 Replacing Modules within the Transmitter	35
12.3 Faults and Warnings	36
13 Menu’s and Advanced Configuration	37
13.1 Abort Function.....	37
13.2 Configuration Mode	37
13.3 Sensor / Gas Selection	43
13.4 Review Mode	45
14 General specification	48
15 Ordering information	49
16 Warranty statement	52
17 Installation Drawing	53

17.1 Mechanical Installation Drawing	53
17.2 Electronic Connection Drawing.....	54
17.3 Duct Mounting Drawing	55
17.4 Collecting Cone Drawing	56
17.5 Mounting Bolt Assy Drawing	57
17.6 Mounting Bracket Drawing.....	58
18 Certification.....	59
18.1 China GB Ex and PA.....	59
18.2 Korea KTL.....	62
18.3 European ATEX	63
18.4 International IEC	65
18.5 Sensepoint XCD ATEX Name Plate	67
18.6 Sensepoint XCD UL Name Plate	68
18.7 Sensepoint XCD Warning Tag	69
18.8 Sensor Cartridges Label.....	71
19 Cross Interference and Cross Calibration	72
19.1 Cross Interference Table for Toxic and Oxygen	72
19.2 Cross Calibration Flammable Gas Detector	73
19.3 Meter Multiplication Factors for Sensepoint XCD-IR Propane.....	76

4 Introduction


The Sensepoint XCD (“Exceed”) comprises a gas detector transmitter and a choice of sensors for detecting flammable gas, toxic gas and oxygen. The construction of Sensepoint XCD allows it to be used in hazardous area locations; it may also be used in other areas not classified as hazardous.

As well as a comprehensive range of Sensepoint XCD sensors, a wide range of existing Honeywell Analytics sensors may be used with the Sensepoint XCD transmitter to detect a broader range of target gases (please contact Honeywell Analytics for further details).

The transmitter features a display and three programmable relays for controlling external equipment e.g. alarms, sirens, valves or switches. The transmitter provides an industry standard 3-wire, 4-20mA source or sink output for connection to a dedicated gas detection control system or PLC.

Calibration and maintenance is carried out using a Magnetic Wand, this allows a single user to undertake routine maintenance without needing to access internal components. Sensepoint XCD is suitable for use in Zone 1 or 2 hazardous areas (International) or Class I Division 1 or 2 area applications (North America).

Sensepoint XCD comprises of the main parts as shown below.

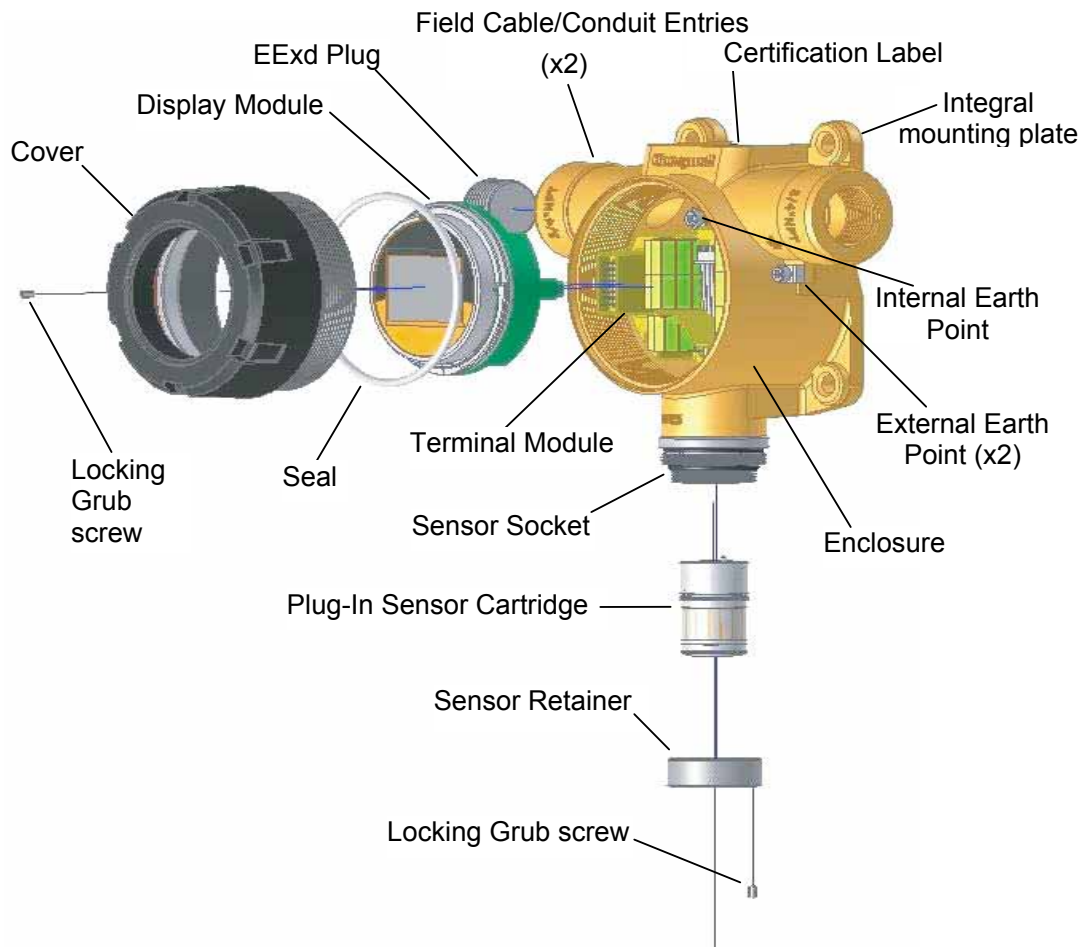

4.1 Transmitter

The transmitter enclosure has three threaded entries. The two cable/conduit entries either side of the upper part of the transmitter housing are for connecting the power source, signal output and relay contacts to associated signalling equipment. The bottom entry allows direct connection of the sensor socket. There is a mounting plate incorporated into the transmitter housing allowing for various mounting configuration options.

A local LCD provides gas type, concentration, alarm and operating status. The display provides numerical, bar graph and icon information.

Diagnostic information may also be displayed when the transmitter is interrogated using a magnet. The transmitter cover has a glass window which allows use of the Magnetic Wand to activate the three user interface magnetic switches that are located on the front of the display module. The magnet also enables a non intrusive, one-man calibration and configuration facility for the Sensepoint XCD.

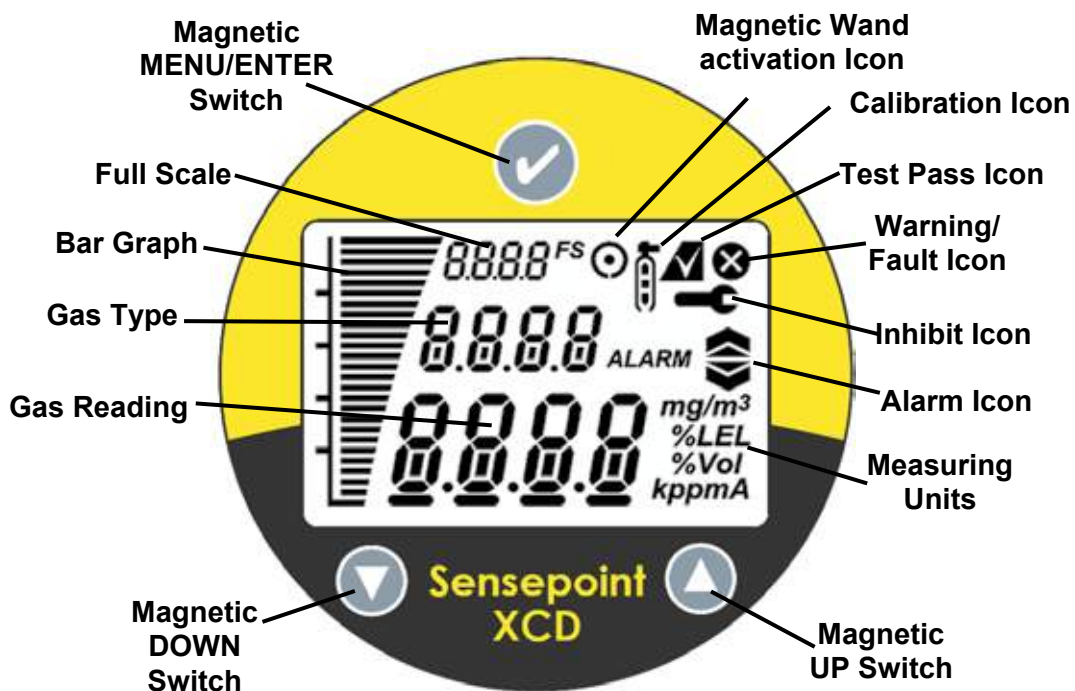


Diagram 2: Sensepoint XCD Display and Magnetic Switches

4.2 Flammable, Toxic Oxygen Gas sensors

The Sensepoint XCD transmitter is designed to work with a variety of gas sensors for detecting flammable gases. Sensepoint XCD sensors use NDIR infrared and electro-catalytic technologies.

In addition, the Sensepoint XCD transmitter is designed to work with a wide range of toxic gas sensors. Sensepoint XCD sensors for monitoring toxic gas oxygen use electro-chemical cell (ECC) technology.


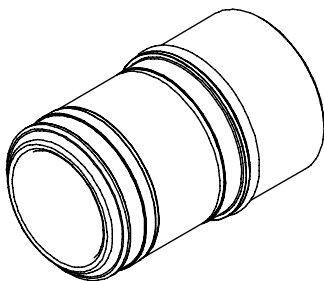


Diagram 3: Sensepoint XCD Flammable, Toxic and Oxygen Sensor Cartridge


4.3 Accessories

A range of accessories are available to allow use of Sensepoint XCD in a wide variety of applications. These including mounting brackets, maintenance tools, weather housings, flow housing, collecting cone, duct mounting kit and sensor junction boxes.

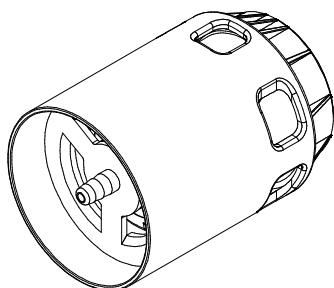


Standard Weather Protection

The Standard Weather Protection (P/N: SPXCDWP) is designed to protect the sensor from changes in environmental conditions. This is recommended to be fitted to a Sensepoint XCD sensor for outdoor exposed applications, (supplied with XCD kit).

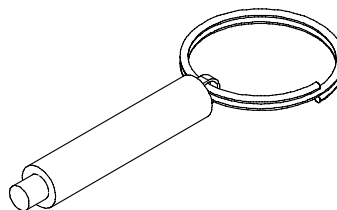

Magnetic wand


The magnetic wand (P/N: SPXCDMAG) is used as a tool to allow the user to communicate with the Sensepoint XCD transmitter for the purpose of configuration, calibration and interrogating system status, (supplied with XCD kit).

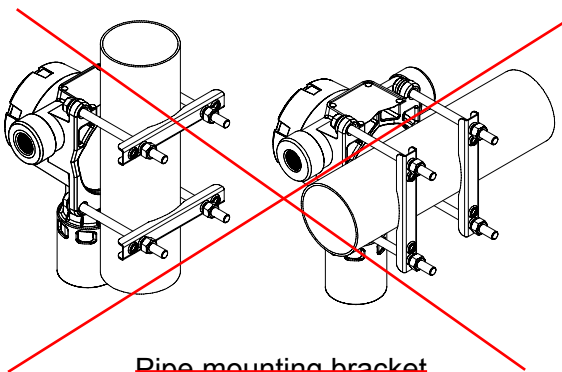

~~Pipe mounting bracket~~


~~The Pipe Mounting Bracket (P/N: SPXCMTBR) is an optional accessory and may be used to allow the Sensepoint XCD to be installed onto a dedicated mounting post or existing structure at the desired location.~~

IRRELEVANT

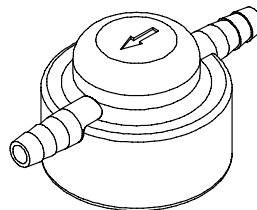


Gassing Cap

The Gassing Cap (P/N: S3KCAL) is an optional accessory that may be temporarily fitted to the sensor in place of the Weather Protection for Gas Response checking during commissioning and routine maintenance.

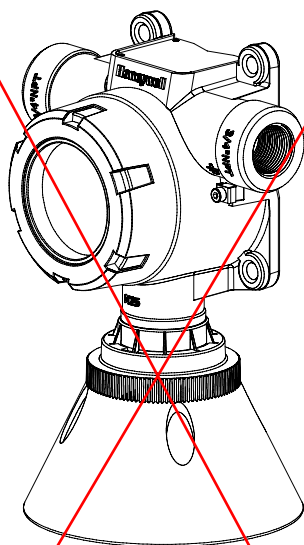


~~Collecting cone~~

~~The Collecting Cone (P/N: SPXCDC) is an optional accessory that may be fitted to the Weather Protection. The collecting cone is designed for use with lighter than air.~~

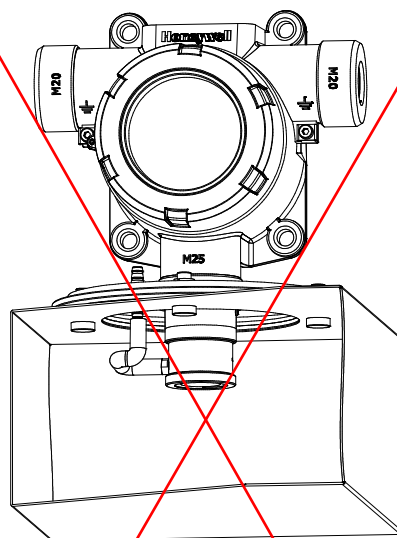


~~Duct mounting kit~~

~~The Duct Mounting Kit (P/N: SPXCDDMK) is an optional accessory that is designed for applications to allow the monitoring for the presence of gas inside a Heating, Ventilation or Air Conditioning (HVAC) duct is required.~~

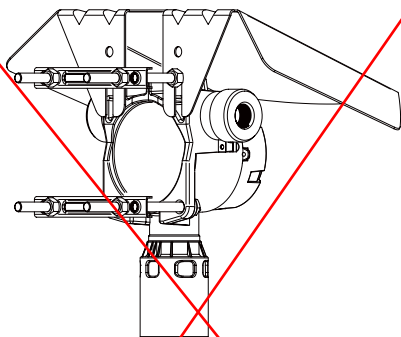

~~Sunshade Deluge Cover~~

~~The XCD Sunshade Deluge Cover (P/N: SPXCSDP) is an optional accessory that may be fitted to the integral mounting plate. This accessory is designed to protect XCD from overheating in exposed hot and arid climates, particularly offering additional protection from thermal shock in Tropical Environments~~

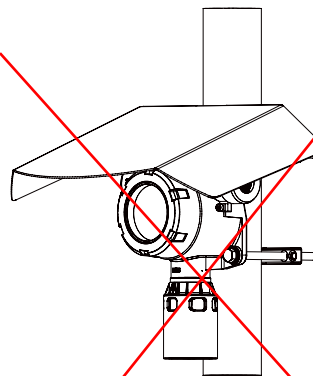

~~Typical Mounting Arrangement~~

IRRELEVANT

~~4.4 Options~~

~~4.4.1 Modbus®~~

~~One of the most common field buses in the industry, the optional Modbus® interface allows the XCD to connect to a bus of devices and transmit data to PLCs or controllers (see Appendix A). Connections to the XCD are made through a pluggable terminal block on the Modbus® interface circuit board. Modbus® RTU protocol uses ASCII/Hex protocols for communication, and allows all transmitter/sensor front panel functions to be transmitted using this industrial fieldbus.~~

~~Modbus® protocol is a Master Slaves protocol. Only one master (at the same time) is connected to the bus and one or up to 32 slave nodes are also connected to the same serial bus. Modbus® communication is always initiated by the master. The slave nodes will never transmit data without receiving a request from the master node. The slave nodes will never communicate with each other. The master node initiates only one Modbus® transaction at the same time.~~

~~Modbus option is available only for selected gases. Please refer to chapter 15 Ordering information.~~

~~To find out if a unit has the ModBus option fitted, look at the part number on the product label. Units fitted with ModBus have the letter "M" at the end of the part number.~~

~~Note: MODBUS® is a registered trademark of Schneider Automation Inc.~~


IRRELEVANT

(MODBUS ID SETTING)

~~Set id>>Set ModBus slave ID>>Set Baud rate>>Set Parity~~

- ~~1) Slave ID shall be set 1~247~~
- ~~2) Baud rate setting 9600 or 19200~~
- ~~3) Parity setting (No, Even, Odd)~~

~~From the Configuration Mode screen, select '✓'. To set the ModBus Slave ID, use the up-down '▲▼' switches to move to the desired position and use '✓' to select it. Again, using the '▲▼' switches, increment or decrement the value until the desired value appears, selects the value and moves to the next setting.~~

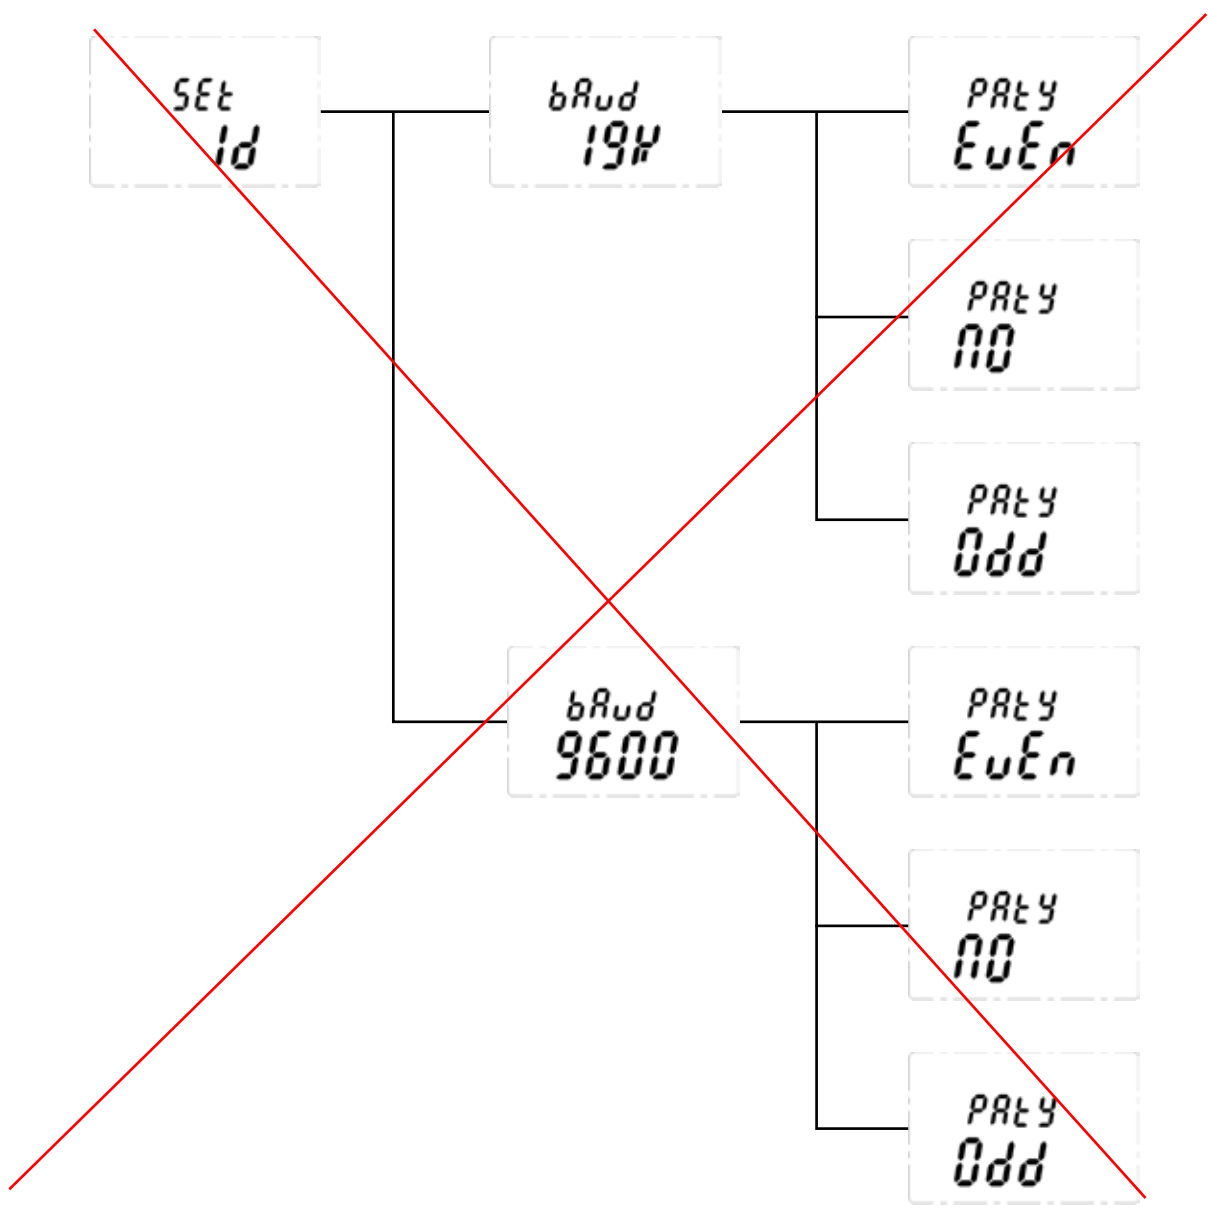

~~The communications baud rate and Parity Setting can also be set from this screen by using the '▲▼' switches to navigate to the baud rate display then selecting '✓'. Using the '▲▼' switches, highlight the proper baud rate or parity setting and select '✓'. Default is Slave ID 1, 19200bps and even parity.~~

~~Note: Set ID menu is available only for XCD equipped with Modbus option.~~

5 Installation

WARNINGS

Sensepoint XCD is designed for installation and use in Zone 1 or 2 hazardous areas in many countries including Europe and for Class 1 Division 1 or 2 area applications in North America.

Installation must be in accordance with the recognized standards of the appropriate authority in the country concerned.

Access to the interior of the detector, when carrying out any work, must only be conducted by trained personnel.

Before carrying out any work ensure local regulations and site procedures are followed. Appropriate standards must be followed to maintain the overall certification of the detector.

Care should be taken when removing and refitting the Sensepoint XCD plug-in Sensor to the Sensor Socket so that damage to the connection pins can be avoided.

For installations where conduit is used, and the sensor is mounted directly to the Sensepoint XCD, there must be a "Seal Fitting" installed for each of the cable gland entries within 18 inches of the Sensepoint XCD. For installations where the sensor will be mounted remotely from Sensepoint XCD, an additional "Seal Fittings" will be required: One at each of the conduit entries for the power/signal/relay contact outputs and one at the sensor wiring entrance. The total distance of the location of these Seal Fittings is 18 inches. (e.g. If all 3 gland entries are to be used, 3 Seal Fittings should be located, each within 6 inches of the wiring entrance).

If using an anti-seize compound, the threads should be thinly coated with an approved silicone free compound e.g. petroleum jelly

To reduce the risk of ignition of hazardous atmosphere, de-classify the area or disconnect the equipment from the supply circuit before opening the detector enclosure. Keep assembly tightly closed during operation.

Never attempt to open a junction box/enclosure or replace/refit the sensor in potentially hazardous atmospheres while power is still applied to the transmitter.

The detector must be earthed/grounded for electrical safety and to limit the effects of radio frequency interference. Earth/ground points are provided inside and outside the unit. Ensure that all screens/instrument earth/clean earth wiring is earthed/grounded at a single point (either at the controller or detector - BUT NOT BOTH) to prevent false alarms due to earth/ground loops.

Take care when handling sensors as they may contain corrosive solutions.

Do not tamper with or in any way disassemble the sensor.

Do not expose to temperatures outside the recommended ranges.

Do not expose sensors under storage conditions to organic solvents or flammable liquids.

At the end of their working life, replacement electrochemical sensors for oxygen and toxic gas must be disposed of in an environmentally safe manner. Disposal should be according to local waste management requirements and environmental legislation.

Alternatively, old replaceable sensors may be securely packaged and returned to Honeywell Analytics clearly marked for environmental disposal.

Electrochemical sensors should NOT be incinerated as this action may cause the cell to emit toxic fumes.

Refer to the local or national regulations relative to the installation at the site. For Europe see EN60079-29-2, EN60079-14 and EN61241-14.

Only assessed for ATEX for ignition hazards.

This equipment is designed and constructed as to prevent ignition sources arising, even in the event of frequent disturbances or equipment operating faults.

The sensor head must be fitted with the supplied weather protection, and mounted so that the sinter is pointing downward to provide ingress protection IPX6.

The weather protection is a potential electrostatic charging hazard. The manufacturer's instructions should be observed.

NOTE: The control card must have a suitably rated fuse.

5.1 Mounting and location

Caution: The location of gas detectors should be made in accordance with any relevant local and national legislation, standards or codes of practice. Always replace sensors with a sensor of the same type.

Gas detectors should be mounted where a potential hazard of gas is most likely to be present. The following points should be noted when locating gas sensors.

- When locating detectors consider the possible damage caused by natural events e.g. rain or flooding.
- Consider ease of access to the gas detector for functional testing and servicing.
- Consider how escaping gas may behave due to natural or forced air currents.

Note: The placement of gas detectors should be determined following the advice of experts having specialist knowledge of gas dispersion, experts having knowledge of the process plant system and equipment involved, safety and engineering personnel. The agreement reached on the location of detectors should be recorded.

5.2 Mounting the transmitter

The Sensepoint XCD transmitter has an integral mounting plate consisting of four mounting holes on the transmitter body. The transmitter may be fixed directly to a surface mounting, or to a horizontal or vertical pipe/structure, 40.0-80.0mm (1.6 to 3.1 inches) in diameter/cross section. The Pipe Mounting Bracket accessory (optional accessory) may be used for this purpose.


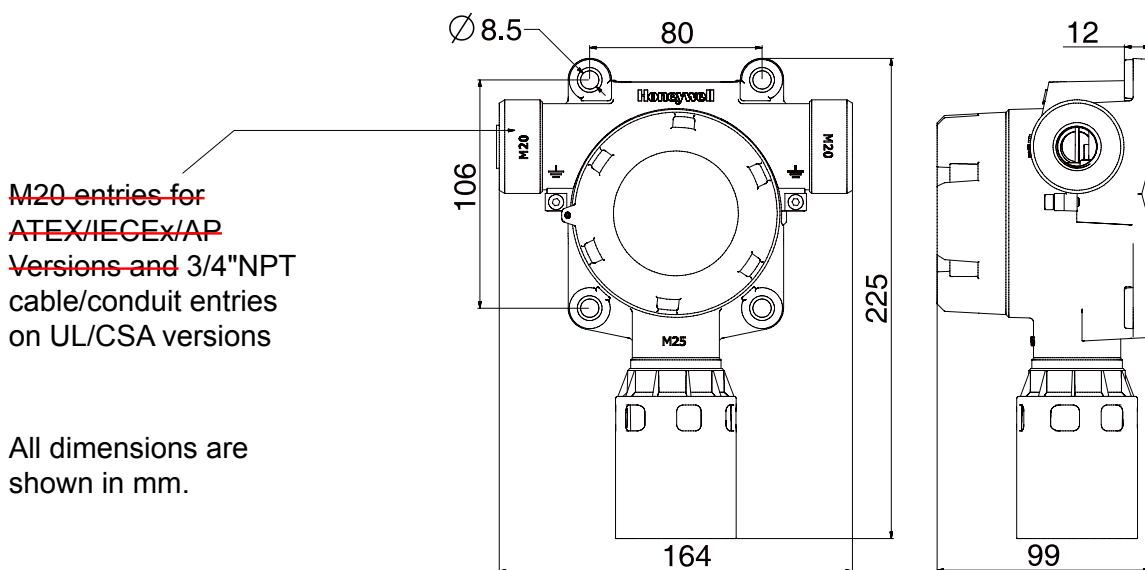


Diagram 4: Outline and mounting dimensions

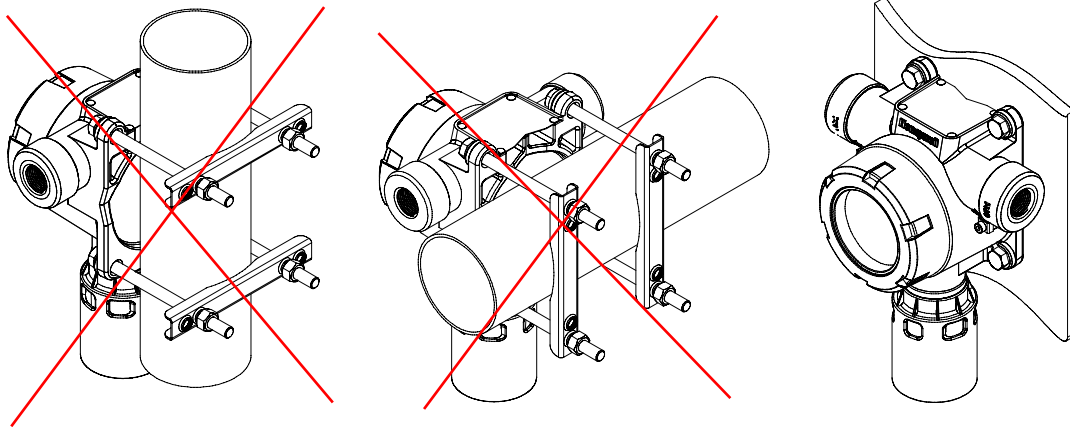

IRRELEVANT

Diagram 5: Mounting arrangements

To mount the Sensepoint XCD transmitter to a Vertical or Horizontal pipe/structure, use the optional XCD Mounting Kit and following procedure:

1. Fit the four spring washers, then the plain washers to the M8 x 80mm SS316 bolts.
2. Pass the four bolts through the four mounting holes of the transmitter housing.
3. **Note:** If the XCD sunshade is to be used then fit the sunshade and the two locking bolts and washers to the M8 x 80 bolts.
4. Place the transmitter housing against the mounting position and fit the two “U” channel mounting bars the other side of the Pipe/Structure.
5. Secure bolts to the threaded holes of the “U” channel mounting bars.
6. Tighten the four bolts securely, (but do not over-tighten) until the transmitter housing cannot be moved by hand on its mounting position.

Note: For further details of installation please see section 17.

5.3 Installing the sensor

The XCD gas sensor cartridge plugs into the XCD Sensor Socket.

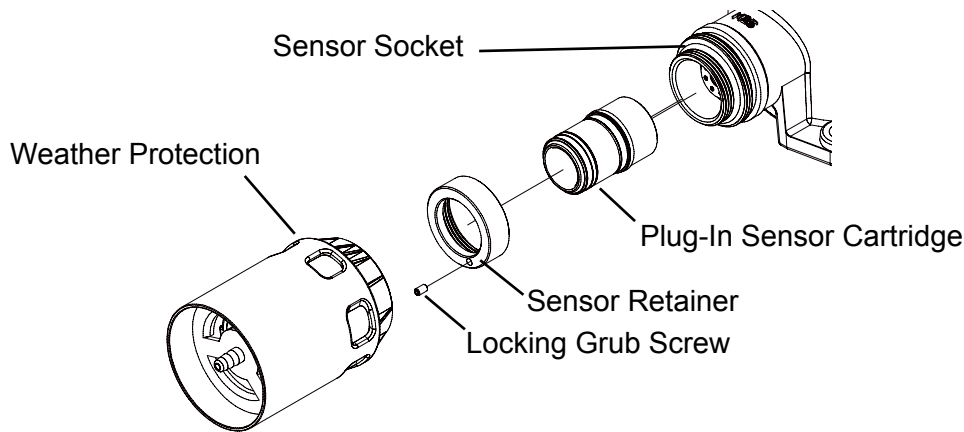


Diagram 6: Installing the Sensor

WARNINGS

Care should be taken when removing and refitting the Sensepoint XCD plug-in Sensor to the Sensor Socket so that damage to the connection pins can be avoided.

If using an anti-seize compound, the threads should be thinly coated with an approved silicone free compound e.g. petroleum jelly

Take care when handling old sensors as they may contain corrosive solutions.

Take care when removing or replacing the Sensor Retainer as there may be sharp edges present on the adjoining threads.

The equipment is designed and constructed as to prevent ignition sources arising, even in the event of frequent disturbances or equipment operating faults.

Only assessed for ATEX for ignition hazards.

The sensor head must be fitted with the supplied weather protection, and mounted so that the sinter is pointing downward to provide ingress protection IPX6.

The weather protection is a potential electrostatic charging hazard. The manufacturer's instructions should be observed.

To install the XCD Sensor Cartridge to the XCD Sensor Socket:

1. Remove the weather protection (if fitted) from the sensor.
2. Use a 1.5mm Allen key (hexagonal wrench-included) to loosen the Locking Grub Screw on the Sensor Retainer.
3. Unscrew and remove the Sensor Retainer.
4. Remove the XCD Sensor Cartridge from its packaging and plug it into the XCD Sensor Socket, taking care to align the sensor pins with the connector.
5. Refit the Sensor Retainer and tighten the Locking Grub Screw.
6. Refit the weather protection (as required) to the XCD sensor.

6 Electrical connections

WARNINGS

Sensepoint XCD is designed for installation and use in Zone 1 or 2 hazardous areas in many countries including Europe and Class 1 Division 1 or 2 area applications in North America. Installation must be in accordance with the recognized standards of the appropriate authority in the country concerned.

Access to the interior of the detector, when carrying out any work, must only be conducted by trained personnel.

Before carrying out any work ensure local regulations and site procedures are followed. Appropriate standards must be followed to maintain the overall certification of the detector.

Care should be taken when removing and refitting the Sensepoint XCD Sensor Cartridge to the Sensor Socket so that damage to the connection pins can be avoided.

For installations where conduit is used, and the sensor is mounted directly to the Sensepoint XCD, there must be a "Seal Fitting" installed for each of the cable gland entries within 18 inches of the Sensepoint XCD. The total distance of the location of these Seal Fittings is 18 inches. (e.g. If all 3 gland entries are to be used, 3 Seal Fittings should be located, each within 6 inches of the wiring entrance).

If using an anti-seize compound, the threads should be thinly coated with an approved silicone free compound e.g. petroleum jelly

To reduce the risk of ignition of hazardous atmosphere, de-classify the area or disconnect the equipment from the supply circuit before opening the detector enclosure. Keep assembly tightly closed during operation.

Never attempt to open a junction box/enclosure or replace/refit the sensor in potentially hazardous atmospheres while power is still applied to the transmitter.

The detector must be earthed/grounded for electrical safety and to limit the effects of radio frequency interference. Earth/ground points are provided inside and outside the unit. Ensure that all screens/instrument earth/clean earth wiring is earthed/grounded at a single point (either at the controller or detector - BUT NOT BOTH) to prevent false alarms due to earth/ground loops.

Take care when handling sensors as they may contain corrosive solutions.

Do not tamper with or in any way disassemble the sensor.

Do not expose to temperatures outside the recommended ranges.

Do not expose sensors under storage conditions to organic solvents or flammable liquids.

At the end of their working life, replacement electrochemical sensors for oxygen and toxic gas must be disposed of in an environmentally safe manner. Disposal should be according to local waste management requirements and environmental legislation. Alternatively, old replaceable sensors may be securely packaged and returned to Honeywell Analytics clearly marked for environmental disposal.


Electrochemical sensors should NOT be incinerated as this action may cause the cell to emit toxic fumes.

Refer to the local or national regulations relative to the installation at the site. For Europe see EN60079-29-2, EN60079-14 and EN61241-14.


6.1 Transmitter Wiring

Caution: All electrical connections should be made in accordance with any relevant local or national legislation, standards or codes of practice.

The Sensepoint XCD transmitter may be wired in either Current SOURCE or Current SINK configuration. These two options are offered to allow greater flexibility in the type of control system that it can be used with. SOURCE/SINK is selectable via the switch located on the back side of the display module; accessible by removing the display module during installation / commissioning (see section 9).

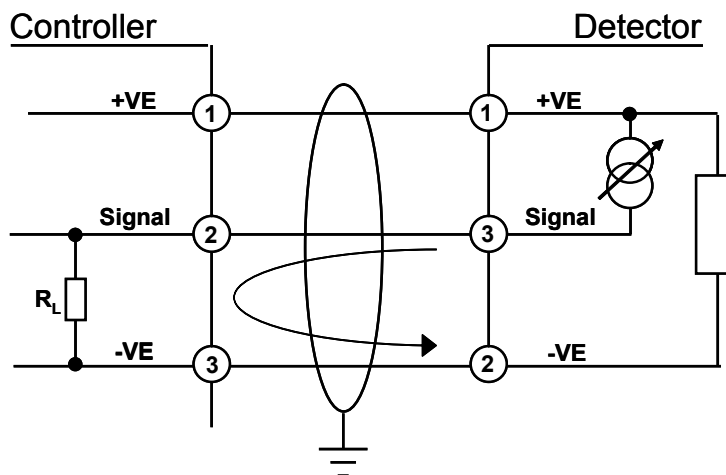

XCD Source 3 Wire 4-20mA (Source)

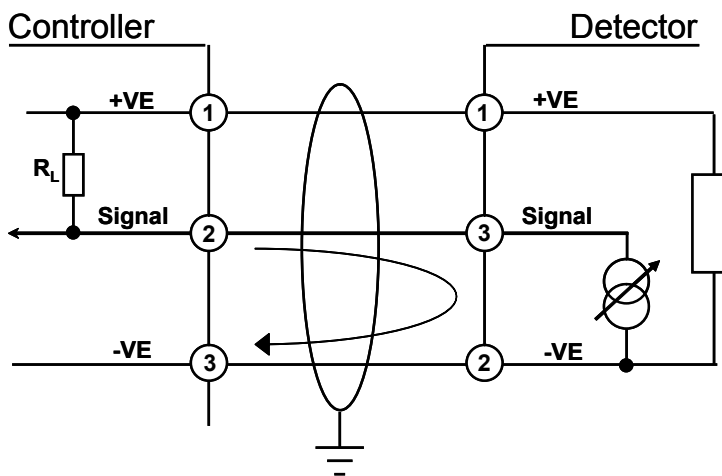

XCD Sink 3 Wire 4-20mA (Sink)

*Note: Terminate cable screen at detector or controller, not both.
 250ohm load resistor (RL) is installed in the factory, In case of connection with controller,
 this resistor should be removed because controller has load resistor internally.*

6.2 Terminal connections

Note: Ensure that none of the wires in the terminal area cause an obstruction when refitting the Display Module. Ensure that the socket on the Display Module is fully engaged in the Display Module Connector on the Terminal Module.

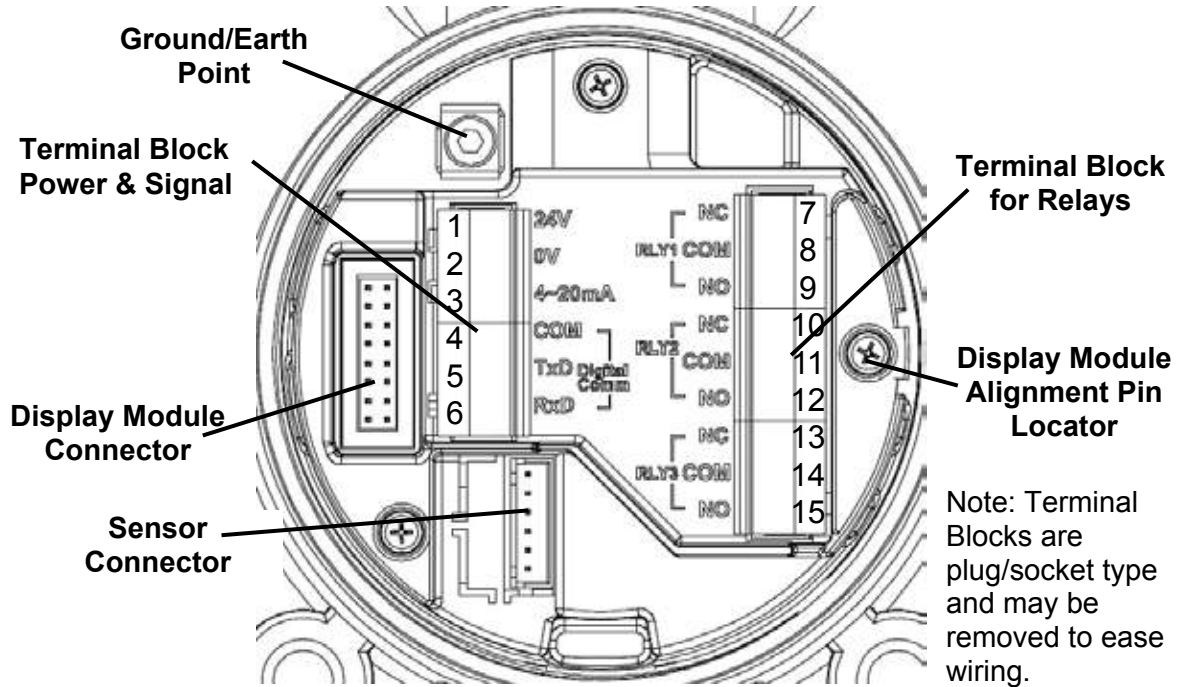


Diagram 7: Terminal module

Terminal Module Connections			
Terminal Number	Marking	Connection	Description
1	24V	+VE Supply(16-32VDC)	Controller Connections
2	0V	-VE Supply(0VDC)	
3	4~20mA	Current Output Signal	
4	COM	Common	MODBUS RTU. RS485 (Optional)
5	TxD	MODBUS A(+)	
6	RxD	MODBUS A(-)	
7	RLY1/NC	Normally Closed	Programmable Relay 1 (Default A1)
8	RLY1/COM	Common	
9	RLY1/NO	Normally Open	
10	RLY2/NC	Normally Closed	Programmable Relay 2 (Default A2)
11	RLY2/COM	Common	
12	RLY2/NO	Normally Open	
13	RLY3/NC	Normally Closed	Programmable Relay 3 (Default Fault)
14	RLY3/COM	Common	
15	RLY3/NO	Normally Open	

Table 1: Transmitter terminal connections

6.3 Power

The Sensepoint XCD transmitter requires a power supply from the controller of between 16Vdc and 32Vdc. Ensure that a minimum supply of 16Vdc is measured at the sensor, taking into account the voltage drop due to cable resistance.

The maximum loop resistance in the field cable is calculated as follows:

$$R_{loop} = (V_{controller} - V_{detector\ min}) / I_{detector}$$

Example;

The controller is supplying a nominal 24Vdc ($V_{controller}$), the detector minimum allowable voltage is 16Vdc ($V_{detector\ min}$), therefore the maximum allowable voltage drop between the controller and detector is 8Vdc; this means a voltage drop of 4V in each core (+ve core and -ve core).

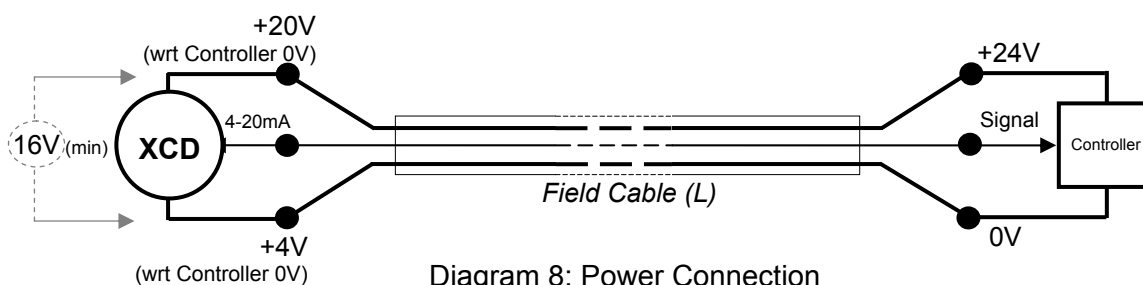


Diagram 8: Power Connection

Power consumption of the detector is 5.0W. The current required to drive the detector at the minimum voltage is ($I = P / V$), $5.0 / 16 = 312.5\text{mA}$ ($I_{detector}$).

So, the maximum field cable loop resistance (R_{loop}) = $8 / 0.31 = 26$ Ohms, or 13 Ohms per core, (allowing for component variations, losses, etc.).

The following tables show the maximum cable distances between the controller and transmitter assuming a voltage drop of 4V in each core and for different cable parameters. The tables are examples only and actual cable parameters and source power supply voltage for the application should be used to calculate the maximum cable distance allowed at the installation site.

Typical cable data		Maximum Cable length (L)	
Cable size (cross sectional area)	Cable resistance Ω/km (Ω/mi)	Meters	Feet
0.5mm ² (20AWG*)	36.8 (59.2)	353	1158
1.0mm ² (17AWG*)	19.5 (31.4)	666	2185
1.5mm ² (16AWG*)	12.7 (20.4)	1023	3356
2.0mm ² (14AWG*)	10.1 (16.3)	1287	4222
2.5mm ² (13AWG*)	8.0 (12.9)	1621	5318
*nearest equivalent			

Table 2: Maximum cable distances

6.4 Cabling

Caution: All unused and used cable/conduit entries must be sealed with a suitable certified sealing plug and cable gland.

The use of industrial grade, suitably armoured field cable is recommended.

For example, screened 3 cores (plus screen 90% coverage), suitably mechanically protected copper cable with ~~a suitable M20 explosion proof gland, or 3/4" NPT steel conduit,~~ with 0.5 to 2.5 mm² (20 to 13 AWG) conductors. Ensure the cable gland is installed correctly and fully tightened. All unused cable/conduit entries must be sealed with a suitable certified sealing plug (one plug is supplied).

Type	Cable Spec	Max Length
Mod Bus	AWM2464 AWG26~AWG12 Shield	1000meters

6.5 Cable and Earth/Ground regimes

Effective Earth/Ground bonding is important to ensure good EMC and RFI immunity.

The following diagrams show examples of how to earth/ground bond the cable at enclosures. The same principles apply to conduit installations. These bonding techniques provide good RFI/EMC performance. Earth/ground loops must be avoided to prevent the risk of false signal variation.

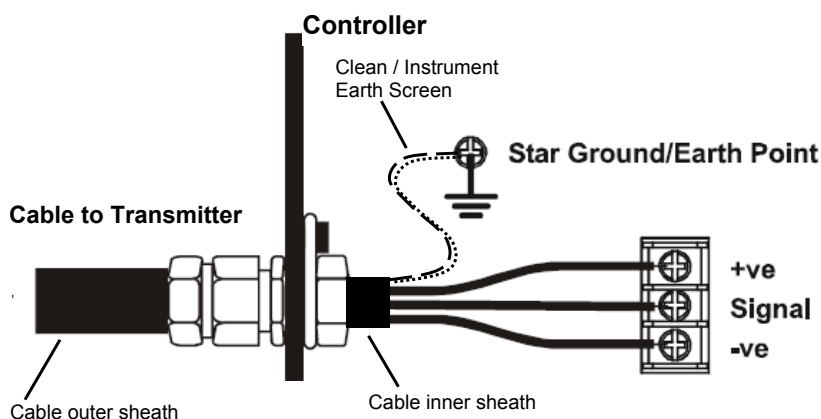


Diagram 9: Controller Grounding

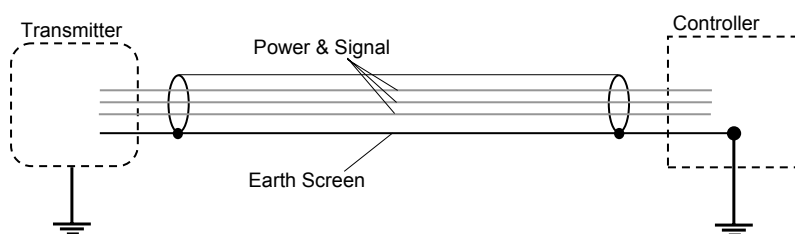


Diagram 10: System grounding

The Earth Screen of the field cable should be “tied to Earth” or connected to Ground at one point only. It is common practise to adopt a STAR EARTH connection regime where all instrumentation Screens are connected at one common point. The Screen at the other end of the cable should be “parked” or terminated into a blank terminal.

The following diagrams show how to install the wire into the ground screw of the enclosure.



6.6 Ground Terminal Wiring

Internal Ground connection: Utilize the shield of the wiring cable recommended in the wiring instructions. For connection to this terminal. Twist the shield wire to avoid stray shield wires, Loosen the screw sufficiently and wrap the wire around the screw in a “U” shape. Raise the clamp and place the wire between the clamp and ground base, lower the clamp and tighten the screw to 6.9lb-in torque.

External Ground Connection: If required by local authority, Utilize a No 14 AWG copper, (Stranded or Solid), wire. Loosen the screw sufficiently to enable ‘wrapping the wire around the screw in a “U” shape. Raise the clamp and place the wire between the clamp and ground base, lower the clamp and tighten the screw to 10.4lb-in torque.

7 Default configuration

The Sensepoint XCD transmitter is supplied with the following default configuration.

Function	Value/Setting	Meaning
Sensor Type	Automatic according to Sensor type connected	XCD recognizes the XCD sensor cartridge according to the gas type within its own sensor family i.e. mV, EC or O ₂ .
Signal output	≥0.0<1.0 mA	Fault (refer to table 5 section 12.3 for details)
	2.0 mA or 4.0 mA (17.4mA)	Inhibit (during configuration/user settings) For Oxygen, 2.0 mA or 17.4 mA
	4.0 mA to 20.0 mA	Normal gas measurement
	22.0 mA	Maximum over range
Alarm Relay 1*	Value is sensor dependant	Lower alarm level
	De-energized	Energizes on alarm
	Contact Normally Open (NO)	Closes on alarm
Alarm Relay 2*	Value is sensor dependant	Higher alarm level
	De-energized	Energizes on alarm
	Contact Normally Open (NO)	Closes on alarm
Fault Relay	<1mA	Detector Fault
	Energized	De-energizes on alarm
	Contact Normally Open (NO)	Closes on alarm
Inhibit	2.0 mA (default) or 4.0 mA for Toxic and Flammable 2.0 mA (default) or 17.4 mA For Oxygen	Signal output inhibited during menu use. If any relay is set to inhibit relay, then inhibit relay will be activated.
Timeout	Disabled	No inhibit timeout. The detector waits for a button press before returning to the previous state/setting. Timeout period can be set in 'Configure Inhibit' menu in Configuration Mode .
Password	0000 (Disabled)	0000 (Password disabled). If changed then password is activated.
Location (Tag Number)	0000	Optional feature to identify the location or User's "Tag" number of the XCD
Temperature	°C	Option to have °C or °F
ModBus	ID, baud rates and Parity bit	ID : 1 Baud rates : 19,200 Parity bit : EVEN

* Alarm relays automatically reset when reading falls within alarm thresholds. If relay configured to LATCH, then relays must be reset using the Magnetic Wand.

Table 3: Default configuration

Gas Name	Default Range	Lower Alarm	Lower Alarm Type	Higher Alarm	Higher Alarm Type
Oxygen	25.0%VOL	19.5%Vol	Falling	23.5%Vol	Rising
Hydrogen Sulfide	50.0ppm	10.0ppm	Rising	20.0ppm	Rising
Carbon Monoxide	300ppm	100ppm	Rising	200ppm	Rising
Hydrogen	1,000ppm	200ppm	Rising	400ppm	Rising
Nitrogen Dioxide	10.0ppm	5.0ppm	Rising	10.0ppm	Rising
Flammable IR	100%LEL	20%LEL	Rising	40%LEL	Rising
Flammable CAT	100%LEL	20%LEL	Rising	40%LEL	Rising
Carbon Dioxide IR	2.00%Vol	0.40%Vol	Rising	0.80%Vol	Rising

For details of how to change the configuration of the Sensepoint XCD please refer to section 13.

8 Normal Operation

Sensepoint XCD is supplied configured and ready for use according to the “Default Settings” table shown above. However these setting may be tailored to a specific application requirement using the Sensepoint XCD configuration menu system.

Access to the Sensepoint XCD transmitter’s configuration menus system is via the Magnetic Activation Tool.

8.1 Display Screen

The Sensepoint XCD display features an LCD with Numeric and bar-graph gas concentration data, alpha-numeric warning and status indication, a target for magnetic switch activation and the UP/DOWN/ESC/ENTER zones for remote configuration. The LCD is also backlit with hi-intensity multi-colour LED indicator to show NORMAL, ALARM and FAULT status.

During normal operation the instrument display shows a steady GREEN backlight.

During Low and High Gas Alarm it displays a flashing RED backlight

During Fault condition the instrument display shows a flashing YELLOW backlight.

The screen is visible through the window of the transmitter’s cover. The display shows the gas concentration (both graphically and numerically), range, units, alarm/fault status, etc.

Note: The detector display may become sluggish in sub-zero temperatures and possibly unclear at temperatures below -40 °C, but the detector continues its gas monitoring function. The display is not damaged and recovers when the temperature increases.

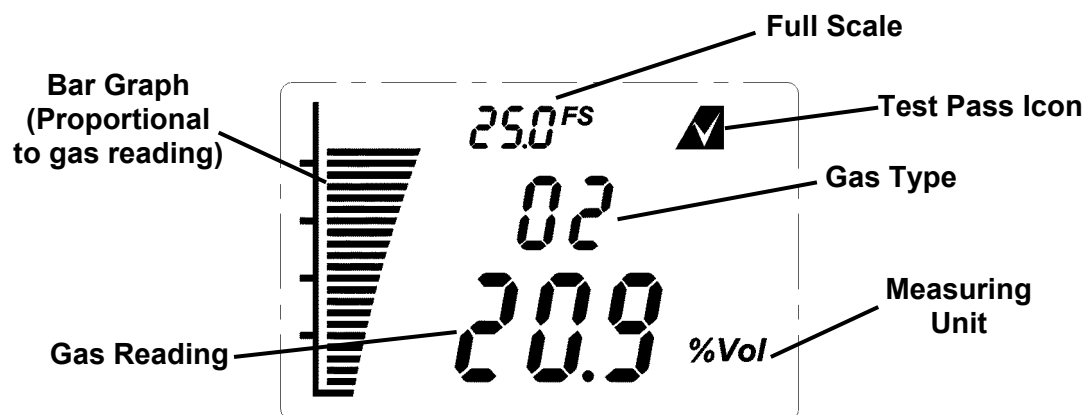


Diagram 11: Example of a O₂ Transmitter Display screen – Normal Operation

8.2 System Status

Display indications, current output and relay states for various operational conditions are shown in the following table. For further details of error messages and trouble shooting see section 12.3.

System Status						
Status	Display	Current Output	Relay			Back Light
			A1	A2	Fault	
Fault: Circuit or sensor error	F-XX fault number with fault icon blinking	0-1.0 mA			✓	Yellow, flashing
System Fault	N/A	0-0.15mA				
Note: In the event of processor failure the watchdog will automatically reset the system for recovery.						
Warning	W-XX warning number with fault icon blinking	Dependent on system status				Green Steady
Normal	0.0 Gas concentration	4-20 mA				Green Steady
Alarm 1	Gas concentration. 1 st alarm icon blinking	4-20 mA	✓			Red, flashing
Alarm 2	Gas concentration. 2 nd alarm icon blinking	4-20 mA	✓ ¹	✓		Red, flashing
Over-range	Full scale icon and reading blinking	22mA	✓	✓ ²		Red, flashing
Inhibit	Inhibit icon dependent on Menu command. If any relay is set to inhibit relay, then inhibit relay will be activated.	2 or 4mA depending on configuration. Note: 2 or 17.4mA for Oxygen version				Green Steady

Table 4: System status


Note:

1. For Oxygen, A1 relay will not be activated because AL1 is configured to activate above 23.5 %Vol (in Rising Alarm configuration).

2. For Oxygen, A2 relay will not be activated because AL2 is configured to activate below 19.5 %Vol (in Falling Alarm configuration).

8.3 Magnetic Wand Activation

The magnetic wand is used as a tool to allow the user to communicate with the Sensepoint XCD transmitter. Communication with the XCD is achieved by positioning the Magnetic Wand at one of three different positions on the front glass window of the Sensepoint XCD transmitter. Activation of the switches is verified by observing the Magnetic Wand Activation Icon on the LCD display

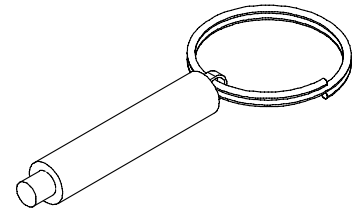

Hold the Magnetic Wand in position for up to 2 seconds = ●

Hold the Magnetic Wand in position for 3 seconds or more = ⊙



8.4 Mode Structure

Sensepoint XCD has 3 operating modes.

1. **Monitoring mode**, is the normal operating status while XCD measures and displays gas concentration. The fault/warning status is periodically checked, relay contacts are activated according to the configuration.
2. **Configuration mode**, this mode allows parameters relating to the configuration of the Transmitter functions to be changed according to specific needs. This mode can be protected by a password mechanism to prevent unauthorised changes being made.
3. **Review mode**, allows the user to view the current configuration settings.

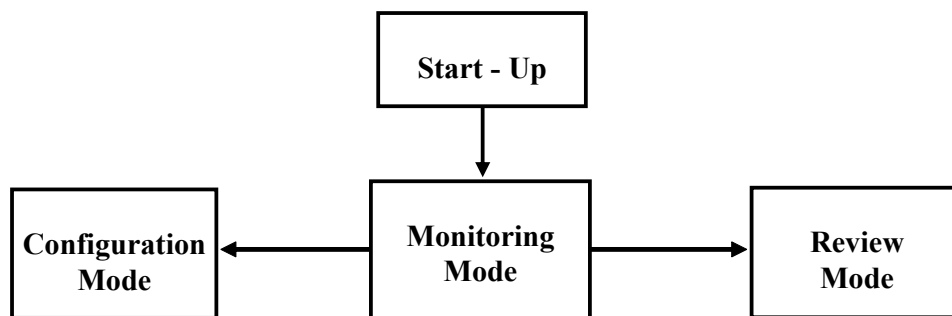


Diagram 12: Mode Structure

Further details of the information available and configuration options for the Sensepoint XCD can be found in Section 13. of this manual.

9 First time switch on (Commissioning)

WARNING

The following procedure requires the Transmitter Cover to be removed while carrying out supply voltage checks. Therefore the appropriate permits to work should be sought in preparation.

Prior to carrying out any HOT WORK ensure local and site procedures are followed. Ensure that the associated control panel output actuation is inhibited so as to prevent false alarms.


Caution: The following procedure should be followed carefully and only performed by suitably trained personnel

Note: Calibration is mandatory before the detector can be used for gas monitoring. Refer to Section 10.1 Calibration for the proper procedure.

1. Remove the transmitter housing cover and detach the display unit by lifting the semi-circular handle and pulling the assembly directly away from the termination module (without twisting it)
2. Configure the detector's analogue output signal configuration for Current SINK or Current SOURCE operation using the selector switch located on the back of the display module. The default setting is Current SOURCE.
3. Check that all electrical connections are terminated correctly as per section 6.
4. Switch On the external power supply to the transmitter at the safe area gas detection controller (or PLC).
5. Using a Digital Multi Meter (DMM), check the Supply Voltage at the terminals 1 (24V) and 2 (0V), this should be a minimum supply voltage of 16Vdc (Maximum supply voltage is 32V DC)
6. Switch Off the external power to the detector.
7. Refit the Display Module and Cover.

Note: Ensure that none of the wires in the terminal area cause an obstruction when refitting the Display Module. Ensure that the socket on the Display Module is fully engaged in the Display Module Connector on the Terminal Module.

8. Switch On external power to the detector.
9. All the display icons/text/numbers are displayed for 3 seconds.

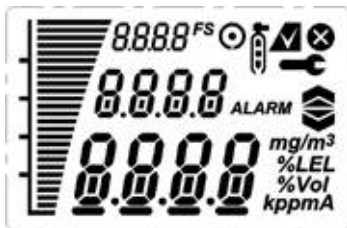

10. A start up sequence will then be displayed, similar to the one shown in Diagram 15.

Note:

For a full description of each screen shown in Diagram 13., please refer to Section 13.3 “Review Mode” of this Manual.

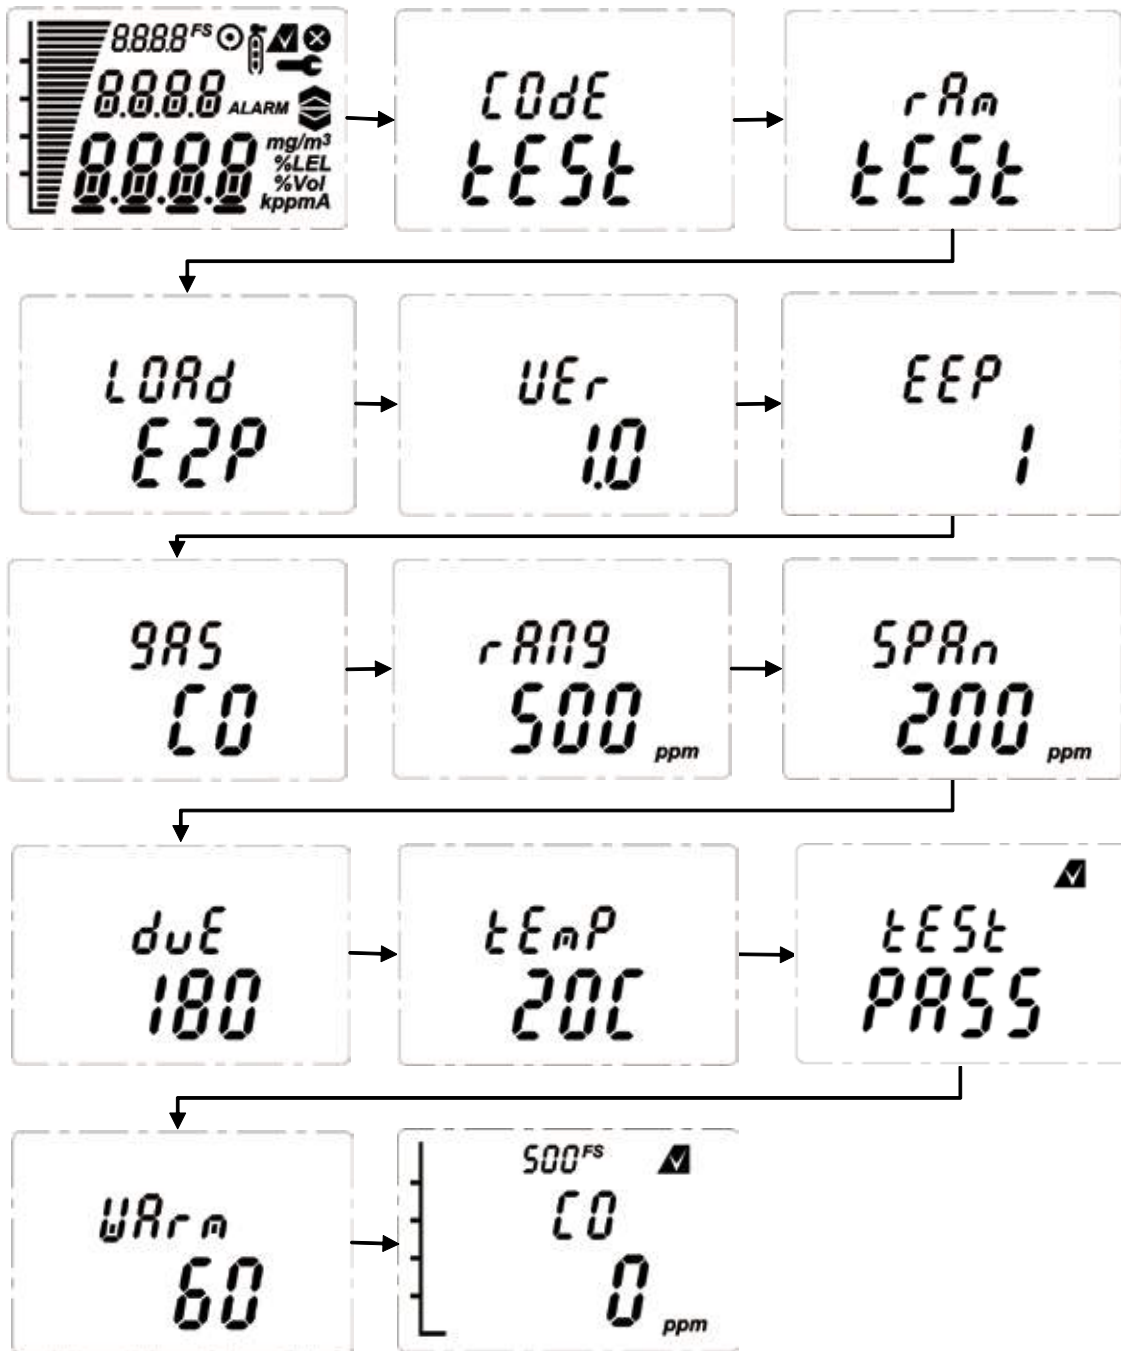


Diagram 13: Normal Start up procedure (For the CO sensor version)

11.The warm up countdown of 60 seconds (depending on the gas type) is then displayed.

12. Normal **Monitoring Mode** is then resumed.

10 Response Check and Calibration

It is recommended to periodically carry out a gas response check on the Sensepoint XCD to ensure correct operation. This may be done in two ways;

1. A simple Response Check often referred to as a “BUMP TEST” is a test using calibration gas applied to the sensor via the nozzle of the Weather Protection or using the Sensepoint XCD Gassing Cap.

If a BUMP TEST is done via the Weather Protection nozzle it may be necessary in windy conditions to increase the flow rate of the test gas by a further 1 LPM, OR, to shelter the weather protection from the wind.

2. A full gas calibration of the sensor as described in the following section, using ONLY the Sensepoint XCD Gassing Cap (Part No.: S3KCAL).

10.1 Zeroing and span calibration

Caution: Before initial calibration allow the detector to stabilize for 30 minutes after applying power.

When in zeroing and span calibration mode the current output from the detector is inhibited (default 2mA) to avoid false alarms.

For Flammable gas calibration use a calibration gas concentration of between 25%LEL and 75%LEL to ensure that the required accuracy can be attained.

For Hydrogen Sulfide type sensors refer to section 10.1.2 before conducting zero and span calibration.

To calibrate the detector, use an appropriate span gas cylinder, constant flow regulator AND the Sensepoint XCD Gassing Cap (see section 4.7). The flow rates used for calibration gas are as follows:

Gas Type	Flow rate (L / Min)
Air or N ₂ for Zero	0.5 to 1.0
Flammable CAT	1 to 1.5
O ₂	0.5 to 1.0
H ₂ S	0.5 to 1.0
CO	0.5 to 1.0
H ₂	0.5 to 1.0
NO ₂	0.5 to 1.0
Flammable IR	0.4 to 0.6
CO ₂ IR	0.4 to 0.6

A compressed air cylinder (20.9%Vol oxygen) should be used to perform the zero calibration if the area where the detector is located contains any residual amount of the target gas. If no residual gas is present then the background air can be used to perform the zero calibration. Contact your Honeywell Analytics representative for details of suitable calibration kits.

To calibrate the detector follow the procedure below.

Note: the Oxygen sensor does not require a zeroing procedure. Background air (20.9%Vol oxygen) can be used to span the oxygen sensor in place of a compressed air cylinder (20.9%Vol oxygen). For oxygen sensors only do parts 1-4, 12, 13 (if compressed air cylinder is used), 14-17 and 22 of the procedure below.

(ZERO CALIBRATION)


1. If the ambient air is NOT considered reliable to use to set the ZERO, then remove the weather protection and fit the Gassing Cap accessory (see Section 4.3) onto the sensor and apply a clean source of zero gas or compressed air.
2. To access the calibration menu, hold the end of the magnet over the switch located at the top center of the detector display (✓) for at least 3 seconds and then remove.
3. The display will indicate the first configuration mode menu 'SEt CAL'.



4. Put the magnet over the '✓' switch again and move to enter the Calibration menu.
5. The display will show the current gas reading, and the '↑' icon flashes.



6. When the zero gas reading is stable use '✓' to confirm zero calibration.
7. If successful the display shows 'ZEro PASS' (if not successful, the display shows 'ZEro FAIL' and returns to configuration mode).

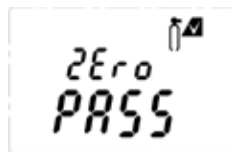

8. If using zero-air, turn it off. Zeroing is complete and saved.
9. The display shows 'SPAN' with 'YES' flashing.



10. If span calibration is required use '✓' proceed to the next step. If span calibration is not required, use '▲▼' to select 'No' and '✓' to return to configuration mode.

(SPAN CALIBRATION)


11. The display shows the current calibration span gas concentration while flashing the 'i' icon. Use '▲▼' to change the calibration span gas concentration, and '✓' when required span calibration level is set.



12. The display will show the current gas reading, and the 'i' icon flashes.
13. Connect the regulator to the span gas cylinder.
14. Apply the span gas to the sensor using the Sensepoint XCD Gassing Cap (see section 4.7 for description). The live gas reading is displayed. When the reading is stable, use '✓' to confirm span calibration.



15. If the sensor has been replaced the following display may be shown.

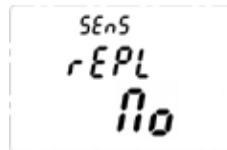


16. Use '▲▼' to select 'YES' if the sensor has been replaced or 'No' if it has not been replaced.
17. If the span calibration is successful the instrument will briefly display 'SPAN PASS' (if fails 'SPAN FAIL' displayed and returns to configuration mode).


Note: the calibration due warning counter is reset after a successful calibration. See section 12.3 for further details of setting a calibration due warning.




18. The display alternates between "Purg gAS" and the gas reading to indicate that the unit is expecting the span gas to be removed from the sensor.

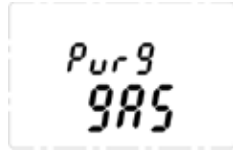

19. Promptly switch off the calibration span gas and remove the Sensepoint XCD Gassing Cap from the sensor to allow the gas to disperse.
20. When the reading falls below 50% of the calibration gas level the display indicates a countdown (up to 180 seconds dependant on gas type).

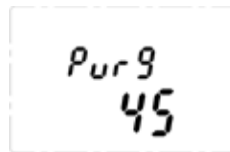

21. When the countdown is finished, the calibration procedure is complete.
22. The instrument returns to the 'Set CAL' menu. Activate the '▲' or '▼' switch to select another menu or select 'Quit' to return to normal monitoring mode.

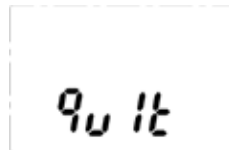

Note: Remember to always replace the Weather Protection and other accessories.

10.2 Zeroing and span calibration of Hydrogen Sulfide sensors

Hydrogen Sulphide sensors can be affected by extreme humidity changes. A sudden increase in ambient humidity can result in a short-term positive drift in the instrument's reading. A sudden decrease in ambient humidity can result in a short-term negative drift in the instrument's reading. These are most likely to be noticed during calibration with dry or cylinder gas.

When calibrating Hydrogen Sulphide cartridges the following should be taken into account while following the procedure in 10.1:

1. To zero the sensor, use a compressed air cylinder of 20.9%Vol oxygen (not Nitrogen). Do not use background air.
2. Apply the gas to the sensor for three minutes before using '✓' to confirm the zero calibration.
3. If a span calibration is to be performed, the span calibration gas should be applied to the sensor immediately after the zeroing procedure. Do not allow the sensor to return to ambient air conditions between steps 2 and 3.
4. Apply the span gas for two minutes before using '✓' to confirm the span calibration.

11 General Maintenance

WARNINGS

Access to the interior of the transmitter, when carrying out any work, must only be conducted by trained personnel.

Care should be taken when removing and refitting the Sensepoint XCD plug-in Sensor Cartridge to the Sensor Socket so that damage to the connection pins can be avoided.

Before carrying out any work ensure local regulations and site procedures are followed. Appropriate standards must be followed to maintain the overall certification of the sensor and transmitter.

To reduce the risk of ignition of hazardous atmosphere, de-classify the area or disconnect the equipment from the supply circuit before opening the transmitter enclosure. Keep assembly tightly closed during operation.

Never attempt to open a junction box/enclosure or replace/refit the sensor in potentially hazardous atmospheres.

Take care when handling sensors as they may contain corrosive solutions.

Do not tamper with or in any way disassemble the sensor.

Do not expose to temperatures outside the recommended ranges.

Do not expose sensors under storage conditions to organic solvents or flammable liquids.

At the end of their working life, replacement electrochemical sensors for oxygen and toxic gas must be disposed of in an environmentally safe manner. Disposal should be according to local waste management requirements and environmental legislation.

Alternatively, old replaceable sensors may be securely packaged and returned to Honeywell Analytics clearly marked for environmental disposal.

Electrochemical sensors should NOT be incinerated as this action may cause the cell to emit toxic fumes.

Honeywell Analytics recommends that gas detectors are tested and re-calibrated on a six-monthly basis, or according to site practice. For remote Flammable or Toxic sensors are used with the XCD Transmitter, please refer to the individual sensor manuals for specific recommended calibration periods.

11.1 Operational Life

The pellistors used in the Catalytic flammable gas sensor can suffer from a loss of sensitivity when in the presence of poisons or inhibitors, e.g. silicones, sulphides, chlorine, lead or halogenated hydrocarbons. The pellistors are poison resistant to maximize the operational life of the Catalytic flammable sensor. A typical operating life, subject to the presence of poisons/inhibitors is 36 months.

The NDIR (infrared) flammable gas sensor is not affected by the above-mentioned poisons and therefore has a longer life span. A typical operating life is 5 years.

Typical life of a toxic gas sensor is dependant on the application, frequency and amount of gas exposure. Under normal conditions (3 monthly visual inspection and 6 monthly test/re-calibration), the XCD Oxygen and other toxic sensors have an expected life equal to or greater than 24 months.

Refer to section 12 for sensor replacement procedures.

Caution: Oxygen deficient atmospheres (less than 6%V/V) may result in inaccuracy of reading and performance.

12 Servicing

WARNINGS

Take care when handling sensors as they may contain corrosive solutions. Do not tamper or in any way dis-assemble the sensor. Do not expose to temperatures outside the recommended range. Do not expose sensor to organic solvents or flammable liquids.

Care should be taken when removing and refitting the Sensepoint XCD plug-in Sensor Cartridge to the Sensor Socket so that damage to the connection pins can be avoided.

At the end of their working life, replacement electrochemical sensors for oxygen and toxic gas must be disposed of in an environmentally safe manner. Disposal should be according to local waste management requirements and environmental legislation. Alternatively, old replaceable sensors may be securely packaged and returned to Honeywell Analytics clearly marked for environmental disposal.

Electrochemical sensors should NOT be incinerated as this action may cause the cell to emit toxic fumes.

**Caution: The following procedure should be followed carefully and only performed by suitably trained personnel.
A fault condition will be signalled by the detector if the sensor is removed with the unit under power.**

12.1 Sensor replacement

The Flammable Catalytic and Toxic ECC sensor cartridge that are used with the Sensepoint XCD Sensor Socket have no serviceable parts. When they have reached the end of their operational life, simply replace the cells.

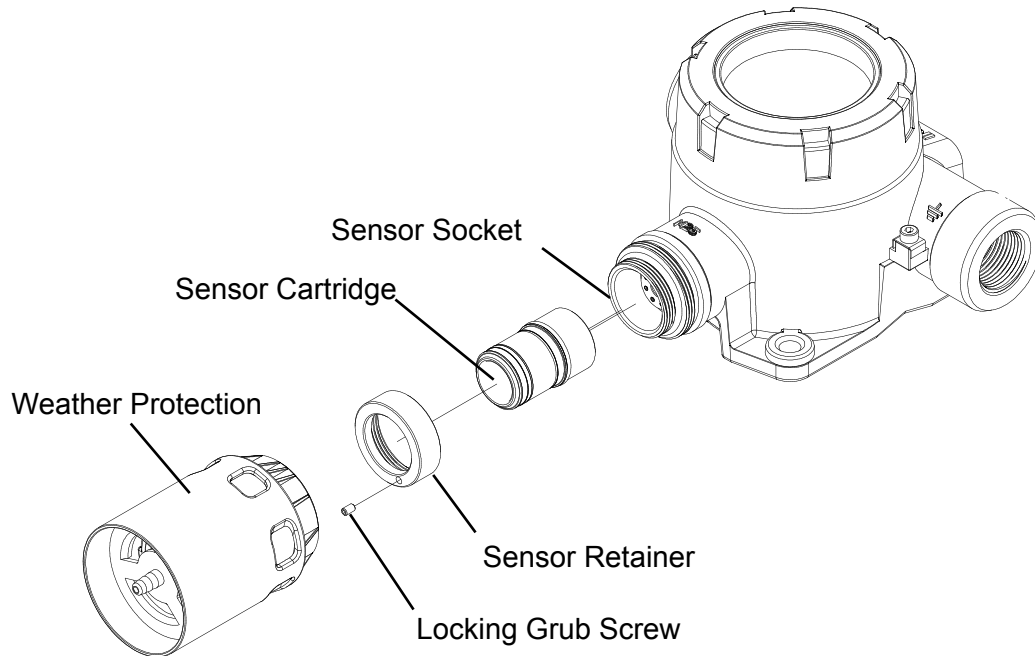


Diagram 14: Sensor Replacement

To replace the plug-in sensor of a Sensepoint XCD Sensor Socket use the following procedure:

1. **Important:** Remove the Power from the Sensepoint XCD Transmitter
2. Remove the Weather Protection or other accessories from the sensor socket thread.
3. Loosen the Locking Grub Screw and unscrew the Sensor Retainer
4. Carefully pull the old Sensor from the sensor socket without twisting.
5. Fit the new Sensor in its place
6. Calibrate sensor

WARNING

Ensure that the same Gas Type and Range of Sensor is fitted in place of the old Sensor.

Care should be taken when removing and refitting the Sensepoint XCD plug-in Sensor Cartridge to the Sensor Socket so that damage to the connection pins can be avoided.

The sensor head must be fitted with the supplied weather protection, and mounted so that the sinter is pointing downward to provide ingress protection IPX6.

The weather protection is a potential electrostatic charging hazard. The manufacturer's instructions should be observed.



12.2 Replacing Modules within the Transmitter

Two replaceable module assemblies are located within the transmitter housing. The Display Module and the Terminal Module.

The Display Module is simply removed by unplugging it from the Terminal Module (this procedure is done during normal installation).

To replace the Terminal Module, use the following procedure:

1. Unscrew and remove the Transmitter Cover
2. Lift the handle and un-plug and remove the Display Module.
3. Unplug the connection terminals and lift them clear of the Terminal Module.
4. Unplug the connector for the XCD sensor.
5. Loosen and remove the three “cross-headed” screws that secure the Terminal Module to the Transmitter housing.
6. Carefully lift the Terminal Module from the transmitter housing.
7. Fit the new Terminal Module using the above procedure in reverse order.

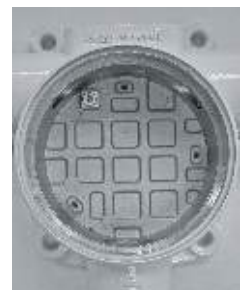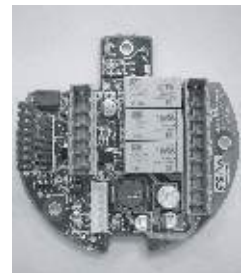

12.3 Faults and Warnings

The table below provides details of possible error.

Message	Description	Action
W-01	Calibration needed	The unit has not been calibrated for the configured calibration interval Calibration is necessary due to change of sensor/gas type
W-02	Transmitter Temperature limits exceeded	Use '✓' to clear when within limits
W-03	Alarm setting needs to be configured	Re-configure alarm settings such that upper alarm should not exceed user configured scale
W-04*	Over-range warning	Use '✓' to clear when within limits
W-05*	The sensor is switched off to prevent it from being deteriorated	Make sure that there is no flammable gas in the air and use '✓' to clear when within limits
F-01	Internal I2C failure	Cycle power to detector. Replace detector
F-02	Cell failure	For Toxic, replace sensor For Flammable/IR, cycle power to detector. Replace sensor
F-03	Significant zero drift	Re zero/calibrate
F-04	Unexpected sensor fitted	Replace sensor
F-05	EEPROM is corrupted	Reset transmitter. If fault still appear, replace transmitter
F-06	Low supply voltage	Reset transmitter. If fault still appear, replace transmitter
F-07	SRS processor failure	Reset transmitter. If fault still appear, replace transmitter
F-08	RAM read/write fault	Reset transmitter. If fault still appear, replace transmitter
F-09	Info. memory corrupted	Reset transmitter. If fault still appear, replace transmitter
F-10	Code Memory corrupted	Reset transmitter. If fault still appear, replace transmitter
F-11	DAC output failure	Check load resistor or sink/source mode switch was configured properly
F-12	Heater failure	Reset transmitter. If fault still appear, replace transmitter
F-13	Supplied voltage failure	Check supply voltage. Replace detector

*Note : W-04 and W-05 are only for flammable catalytic bead sensors. For other gases, gas reading will blink on the LCD instead of the over-range warning.

Table 5: Fault and Warning List

13 Menu's and Advanced Configuration

13.1 Abort Function

In Review Mode or Configuration Mode the user can escape one step back from the current position using the Abort Function. To do this the user must activate the Enter switch for more than 3 seconds with the Magnetic Wand. Switching between each pair of modes or between menus and sub menus are shown in the following table.

From	To	Example
Review Mode	Monitoring Mode	Activate Enter switch for more than 3 seconds while in Review Mode
Configuration Mode	Monitoring Mode	Activate Enter switch for more than 3 seconds while navigating menus in the Configuration Mode
Configuration Mode sub menu	Configuration Mode main menu	Activate Enter switch for more than 3 seconds while in a sub menu

Table 6: Transmitter menu switching

13.2 Configuration Mode

The table below shows the functions available via the configuration menu that can be displayed on the transmitter and accessed using the Magnetic Wand.












The instrument will show the main Menu when the “Enter” switch is activated with the Magnetic Wand and held for at least 3 seconds.

The Menu is password protected to prevent any unauthorized changes. The password is initially disabled and the default password is ‘0000’. If the default password is changed to other than ‘0000’, then the password is enabled automatically and requested when entering Configuration Mode.

With the Menu showing, the following functions can be performed: calibration, bump test, sensor selection and configuration of parameters such as measuring range, calibration gas level, calibration interval, inhibit current, inhibit timeout, alarm setting, relay setting, password change, location setting, temperature unit reading, force analogue output and alarm function checks.

While in Configuration mode, the output current of the transmitter is inhibited to prevent false alarms.

Names, displays and descriptions for each menu item in Configuration Mode are shown in the following table.

Menu	Display	Description
Set Calibration		Execute zero/span calibration Set calibration gas level After zero, the option exists to proceed with span calibration, or return to the Menu.
Select Sensor		Select the type of sensor from the sensor list. This menu is only available for flammable / IR sensor.
Select Gas		Select the type of gas from the list. This menu is only available for flammable / IR sensor.
Set Range		Set measuring range
Configure Inhibit		Select inhibit current Set timeout option (5 minute increments)
Set Password		Enable/disable password Set password Default – no password (Select '0000')
Set Calibration Interval		Set calibration interval, 30 to 365 days User configurable option to display warning
Bump Test		Execute a 'bump' test to check gas response of the sensor.
Force Current		Force analogue output to test functionality of GD control system during system commissioning.
Set Alarms		Set alarm 1, alarm 2 levels, functionality and operation (none/falling/rising)
Set Relays		Set relay 1,2,3 type (alarm 1, alarm 2, fault and inhibit) and action (energized/de-energized)







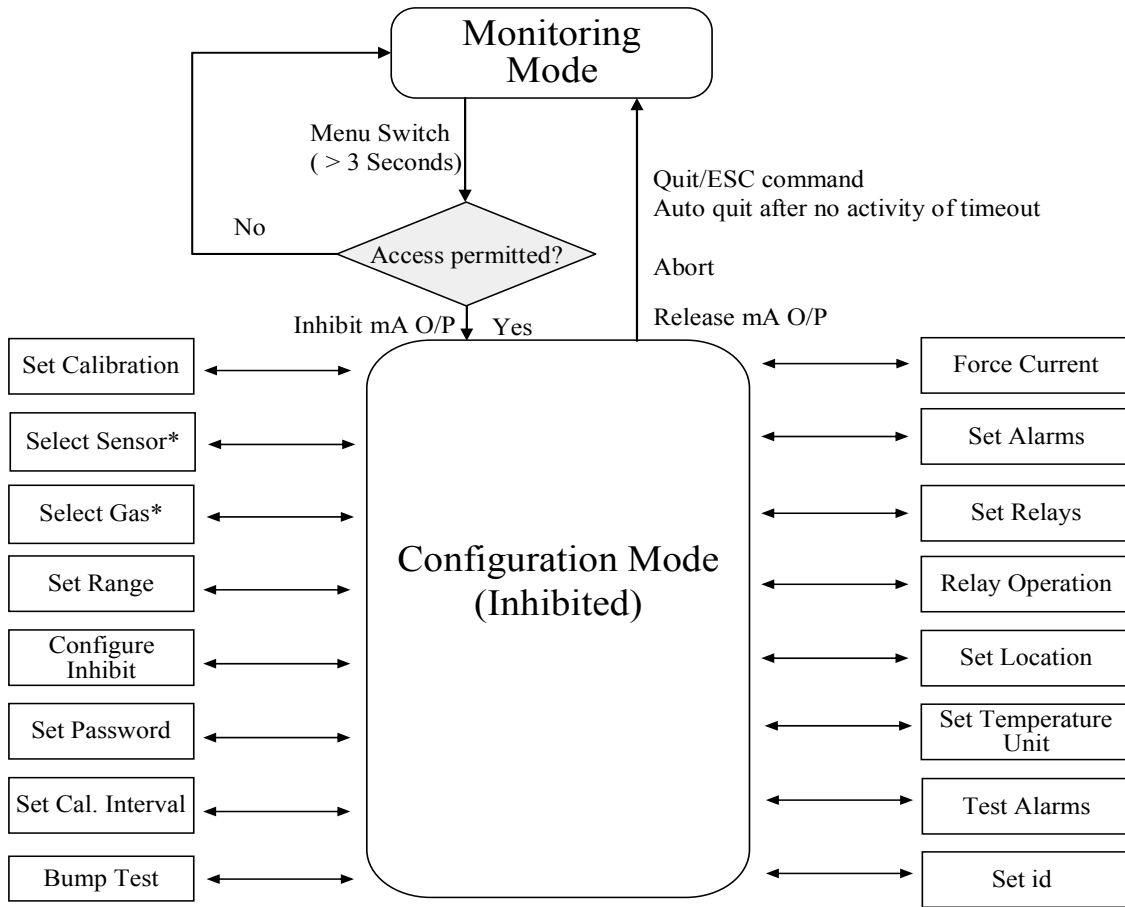
Relay Operation		Configure relay on delay time, relay off delay time and latch/non-latch
Set Location		Set location (or TAG number)
Set Temperature Unit		Change temperature display unit. °C (Celcius) or °F (Fahrenheit)
Check Alarm functions		Simulate alarm situation to check the alarm system without gas present at the sensor
Set ID		Change ModBus slave ID, baud and parity bit setting (ModBus version only)
Quit		Return to Monitoring mode

Table 7: Transmitter menu descriptions



** Note : "Select Sensor" and "Select Gas" menus are only available for flammable/IR sensors.*

Diagram 15: Configuration Mode

13.2.1 Configuration mode operation table

Configuration mode allows the user to perform calibration and configure parameters such as full scale range, calibration gas level, calibration interval, inhibit current & timeout, alarm settings, relay settings, set a password, etc. To activate Configuration mode hold the magnet over the ENTER switch for at least 3 seconds and then remove. Configuration mode can be password protected to prevent unauthorized personnel from changing parameters. Initially the password is set to '0000' meaning it is disabled. While in Configuration mode, the output current of the detector is inhibited to prevent false alarms.

Use the table below to help navigate the menus and make configuration changes. The menus are shown in the left hand column. Use **▲▼** to select the required menu and **✓** to enter. Follow the information and instructions in the table from left to right from the required menu.

▲▼ OK	▲▼	OK	▲▼	OK	▲▼	OK	▲▼
Set CAL ¹	GAS NAME, ZERO CONCENTRATION AND FLASHING '0' ICON DISPLAYED. APPLY ZERO GAS AND USE '✓' WHEN READING IS STABLE. 'ZERO PASS' DISPLAYED IF OK, 'Zero FAIL' IF NOT.	⇨	'SPAN' DISPLAYED AND 'YES' FLASHING TO ASK IF YOU NOW WANT TO PERFORM SPAN CALIBRATION. USE '✓' TO PROCEED OR USE '▲▼' TO SELECT 'No' AND RETURN TO MENU MODE.	✓	'GAS' TARGET CONCENTRATION FLASHING AND '0' ICON DISPLAYED. USE '▲▼' TO CHANGE GAS CONCENTRATION AND '✓' TO START SPAN CALIBRATION.	✓	GAS NAME, CURRENT CONCENTRATION AND FLASHING '0' ICON DISPLAYED. APPLY SPAN GAS AND USE '✓' WHEN READING STABLE. IF OK 'PASS' & 'Purg' DISPLAYED (IF FAIL 'SPAN FAIL' DISPLAYED AND RETURNS TO MENU). REMOVE SPAN GAS. WHEN READING <50% OF SPAN POINT, COUNTDOWN BEGINS & UNIT RETURNS TO MENU MODE.
SEL ² SENS	'SENS' DISPLAYED WITH SENSOR TYPE DISPLAYED. USE '▲▼' TO SELECT DIFFERENT SENSOR.	✓	IF SENSOR TYPE IS CHANGED, 'CAL YES' DISPLAYED TO ASK IF YOU NOW WANT TO PERFORM CALIBRATION. USE '✓' TO PROCEED OR USE '▲▼' TO SELECT 'No' AND RETURN TO MENU MODE.	✓			
SEL ² 9AS ²	'9AS' DISPLAYED WITH GAS TYPE DISPLAYED. USE '▲▼' TO SELECT DIFFERENT GAS.	✓	IF GAS TYPE IS CHANGED, 'CAL YES' DISPLAYED TO ASK IF YOU NOW WANT TO PERFORM CALIBRATION. USE '✓' TO PROCEED OR USE '▲▼' TO SELECT 'No' AND RETURN TO MENU MODE.	✓			
Set rAn ⁹	BAR GRAPH INDICATING CURRENT RANGE, 'rAn ⁹ ' DISPLAYED & CURRENT RANGE FLASHES. USE '▲▼' TO SELECT DIFFERENT RANGE.	✓	IF RANGE IS CHANGED, 'CAL' DISPLAYED AND 'YES' FLASHING TO ASK IF YOU NOW WANT TO PERFORM CALIBRATION. USE '✓' TO PROCEED OR USE '▲▼' TO SELECT 'No'.	✓	IF RANGE IS CHANGED, 'ALrm' DISPLAYED AND 'YES' FLASHING TO ASK IF YOU NOW WANT TO MODIFY ALARM SETTINGS. USE '✓' TO PROCEED OR USE '▲▼' TO SELECT 'No' AND RETURN TO MENU MODE.	✓	UNIT RETURNS TO MENU MODE
Conf Inhb	'Inhb' DISPLAYED WITH 'Inhb' ICON FLASHING. CURRENT INHIBIT mA VALUE FLASHES. USE '▲▼' TO SELECT NEW VALUE (2 OR 4mA TOXICS, OR 2 OR 17.4mA OXYGEN VERSION).	✓	'time' DISPLAYED WITH 'time' ICON. FLASHING CURRENT INHIBIT TIMEOUT PERIOD (MINUTES) FLASHES. USE '▲▼' TO SET NEW TIMEOUT. (IF SET TO 0 OUTPUT IS PERMANENTLY INHIBITED)	✓	UNIT RETURNS TO MENU MODE		
Set PASS	'PASS' DISPLAYED WITH FIRST DIGIT PLACE ICON OF THE PASSCODE FLASHING. USE '▲' TO SELECT 1 st DIGIT OF CURRENT PASSWORD. USE '▼' TO MOVE TO NEXT DIGIT AND SET REST OF PASSCODE.	✓	UNIT RETURNS TO MENU MODE				

Forc Curr	✓	UNIT TRANSMITS THE CURRENT IF YOU WANT TO EXIT FROM THIS MENU, USE ABORT FUNCTION	✓			
CAL Int3	✓	'Int' DISPLAYED WITH CURRENT CALIBRATION INTERVAL FLASHING. USE ▲▲ TO CHANGE INTERVAL.	✓	UNIT RETURNS TO MENU MODE		
bump tEst	✓	PEAK READING DISPLAYED WITH OUTPUT INHIBITED. APPLY BUMP TEST GAS AND CHECK PEAK READING ON DISPLAY.	✓	UNIT RETURNS TO MENU MODE WARNING: DO NOT RETURN TO NORMAL MODE UNTIL CURRENT GAS CONCENTRATION HAS FALLEN BELOW 10% OF THE DETECTOR WILL GIVE AN ALARM		
SEt ALrm	✓	'AL1' ICON DISPLAYED AND CURRENT ALARM LEVEL 1 CONCENTRATION FLASHES. USE ▲▲ TO CHANGE TO REQUIRED CONCENTRATION LEVEL.	✓	'AL2' ICON DISPLAYED AND CURRENT ALARM LEVEL 2 CONCENTRATION FLASHES. USE ▲▲ TO CHANGE TO REQUIRED CONCENTRATION LEVEL.	✓	'AL2' DISPLAYED WITH 'None', 'RISE' OR 'FALL' FLASHING. USE ▲▲ TO SELECT REQUIRED ALARM ACTION AND USE ▼ TO RETURN TO MENU MODE.
SEt rLY	✓	'rL1' DISPLAYED AND 'AL1', 'AL2', 'Inht' or 'FL1' FLASHES. USE ▲▲ TO CHANGE TO REQUIRED RELAY TARGET.	✓	'rL2' DISPLAYED AND 'AL1', 'AL2', 'Inht' or 'FL1' FLASHES. USE ▲▲ TO CHANGE TO REQUIRED RELAY TARGET.	✓	'rL2' DISPLAYED AND 'dEEn' or 'Emr9' FLASHES. USE ▲▲ TO CHANGE TO REQUIRED RELAY ACTION.
rLY OPt	✓	'rL3' DISPLAYED AND 'AL1', 'AL2', 'Inht' or 'FL1' FLASHES. USE ▲▲ TO CHANGE TO REQUIRED RELAY TARGET.	✓	UNIT RETURNS TO MENU MODE		
SEt Loc	✓	'rLY', 'ON' DISPLAYED AND CURRENT RELAY-ON TIME FLASHES. USE ▲▲ TO CHANGE TO REQUIRED RELAY-ON DELAY.	✓	'rLY', 'OFF' DISPLAYED AND CURRENT RELAY-OFF TIME FLASHES. USE ▲▲ TO CHANGE TO REQUIRED RELAY-OFF DELAY.	✓	UNIT RETURNS TO MENU MODE
tEmP Unit	✓	'Loc' DISPLAYED WITH FIRST 4 CHARACTERS OF THE LOCATION STRING. USE ▼ TO CHANGE THE 1 ST CHARACTER OF CURRENT LOCATION STRING. USE ▲ TO MOVE TO NEXT CHARACTER AND SET REST OF STRING. MAXIMUM 12 CHARACTERS CAN BE SET.	✓	'Loc' DISPLAYED NEW LOCATION STRING. THE STRING MOVES RIGHT-TO-LEFT TO SHOW WHOLE CHARACTERS TWICE. THEN UNIT AUTOMATICALLY RETURNS TO MENU MODE.		
tEst ALrm	✓	'EmP' DISPLAYED WITH 'C' OR 'F' FLASHING. USE ▲▲ TO CHANGE TO REQUIRED TEMPERATURE UNIT.	✓	UNIT RETURNS TO MENU MODE		
SEt ID	✓	'Forc' DISPLAYED and 'AL1' FLASHING TO SELECT TEST-REQUIRED ALARM. USE ▼ TO FORCE ALARM.	✓	GAS NAME CURRENT GAS CONCENTRATION DISPLAYED AND 'EmP' ICON AND AL ICON FLASHES.	✓	UNIT RETURNS TO MENU MODE
9ult	✓	SLAVE ID SHALL BE SET 1~247. USE ▲▲ TO CHANGE TO REQUIRED SLAVE No. OF UNIT.		BAUD RATE SETTING 9600 or 19200 USE ▲▲ TO CHANGE TO REQUIRED BAUD VALUE		PARITY SETTING (No, Even, Odd) USE ▲▲ TO CHANGE TO REQUIRED PARITY
▲▲	OK		▲▲		OK	▲▲

¹ Refer to section 10.1 for detailed zero and span calibration procedures. A detector fitted with an oxygen sensor will skip the zeroing procedure. Re-calibrate the detector if left un-powered for periods in excess of 24 hours.
² This menu is only available and visible when the unit is fitted with flammable/IR sensor.
³ The calibration due warning counter is automatically reset after a successful calibration.

13.3 Sensor / Gas Selection

NOTE:

This Configuration option is not available for XCD units with EC sensors

13.3.1 Sensor Selection

“Select Sensor” sets the identity of the type of mV sensor attached to the XCD when XCD does not detect the sensor type automatically. when sensor type is detected by XCD automatically, the current sensor type can be confirmed in this menu.

The available mV sensors:

Ir-1	NDIR Infrared CO ₂ 0-2%Vol
Ir-3	NDIR Infrared Methane 0-100%LEL
Ir-4	NDIR Infrared Propane 0-100%LEL
Cb-1	Catalytic 0-100%LEL

13.3.2 Gas Selection

Use “SEL gAS” to set the target gas for sensors capable of detecting multiple gases. The available gases:

Sensor type	Gas type	Gas Name displayed
Ir-1	CO ₂	CO ₂
Ir-3	mEt	mEt
Ir-4	Propane	PrO
Cb-1	Str1 to Str8	FLM

Gas selection is dependent on the type of sensor attached to the XCD. If Ir-1/Ir-3/Ir-4 sensor is attached, then gas type is detected by XCD automatically like CO₂/mEt/ProP gas. But when Cb-1 sensor is attached to the XCD, a user can select the gas from Str1 (1*) to Str8 (8*). For more information on star rating, please refer to section 19.2.

The current configuration of the XCD is displayed and by using the '✓' switch to enter "SEL gAS" menu. To select a flammable gas, use '▲▼' to move through the list, then use '✓' to make the selection or abort function to discard the selection and return to menu mode. If type of gas is changed, calibration prompt will appear to ask if you want to perform calibration.


 






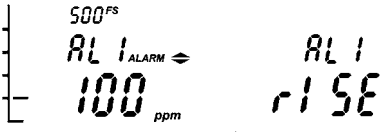
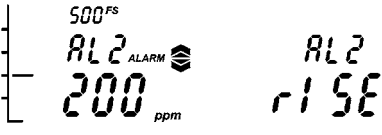


Diagram 16: Gas Selection

13.4 Review Mode

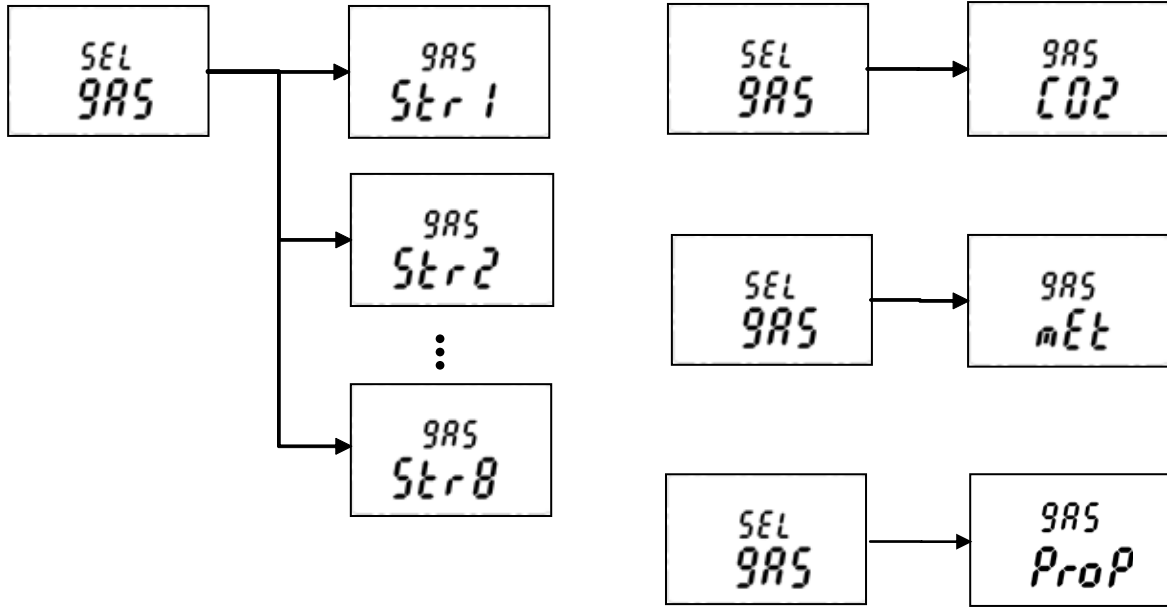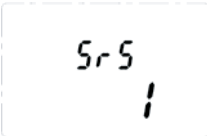The instrument will enter Review mode when the “Enter” switch is activated with the Magnetic Wand and held for around one second.

Names, displays and descriptions for each review item in Review Mode are shown in the following table.

Item name	Display	Description
Software version		S/W version of transmitter
SRS version		S/W version of SRS (watch dog)
EEP version		EEPROM parameter version
Gas		Gas type
Measuring range		A user selected measuring range
Calibration level		Calibration gas level
Calibration due		Estimated time to next calibration
Alarm 1		Alarm settings for Alarm 1
Alarm 2		Alarm settings for Alarm 2






Location		Location in which the transmitter is installed
Power		Power voltage*
Temperature		Internal Transmitter temperature*
Peak conc.		Maximum concentration detected up to now
Test Result		There is no fault detected.

Table 8: Transmitter menu descriptions

Note:

**Power voltage and internal transmitter temperature may be different from actual value due to measuring accuracy and internal heating components.*

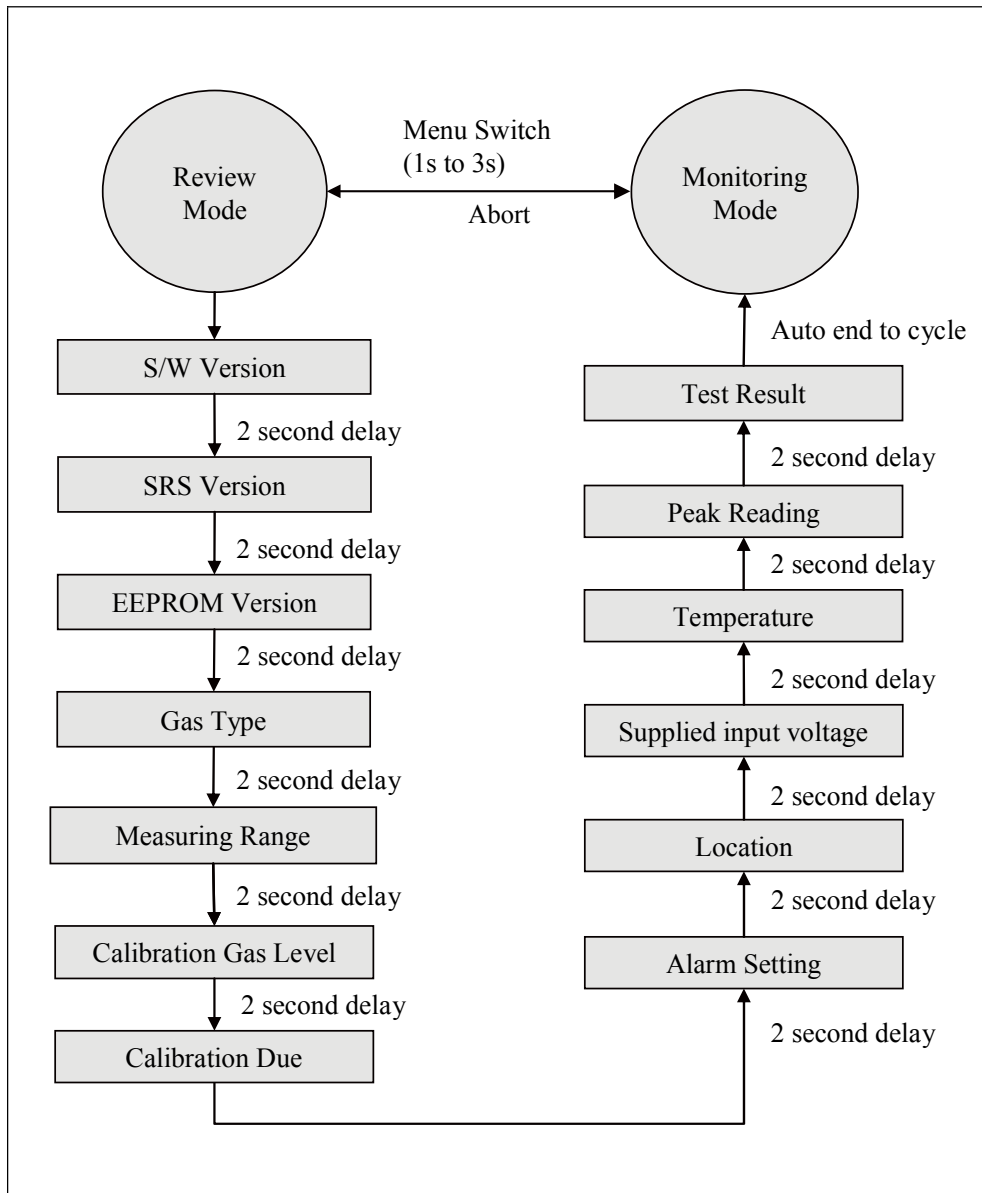


Diagram 17: Review Mode

14 General specification

Sensepoint XCD Transmitter											
Use		3-wire, 4-20mA, gas detector transmitter for use with directly installed flammable and toxic gas sensors. For the protection of personnel and plant from flammable and toxic gas hazards.									
Electrical											
Input Voltage Range:		16 to 32Vdc (24Vdc nominal)									
Max Power Consumption:		Max 5 Watts. at 24Vdc (see section 2 regarding maximum in rush current)									
Current output		4-20mA (Source or Sink)									
≥0.0<1.0 mA		Fault (refer to table 5 section 12.3 for further details).									
4.0 mA to 20.0 mA		Normal gas measurement									
2.0 mA or 4.0 mA (17.4 mA)		Inhibit (during configuration/user settings)									
22.0 mA		Maximum over range									
Terminals		15 x screw terminals suitable for wire diameter 0.5mm ² to 2.5mm ² (20AWG to 13AWG).									
Relays		3 x 5A@250VAC. Selectable normally open or normally closed (switch) and energized/de-energized (programmable).									
Communication		RS485, Modbus RTU									
Construction											
Material		Epoxy painted aluminium alloy or 316 Stainless Steel									
Weight		Aluminium alloy: 1.7kg, 316 Stainless Steel: 3.7kg									
Mounting		Pole or wall mounting									
Entries		2 x M20 (for ATEX/IECEX/AP Approval) or 2x3/4NPT (for UL Approval)									
Detectable Gases & Performance (See notes below)											
Gas	User Selectable Full Scale Range	Default Range	Steps	User Selectable Cal Gas Range	Default Cal Point	Response Time (T90) secs	Accuracy	Operating Temperature*		Default alarm points	
								Min	Max	A1	A2
Electrochemical Sensors											
Oxygen	25.0% V/V only	25.0% V/V	n/a	20.9% V/V (Fixed)	20.9% V/V	<30	<+/-0.5% Vol.	-20°C / -4°F	55°C / 131°F	19.5V/V▼	23.5V/V▲
Hydrogen Sulfide	10.0 to 100.0ppm	50.0ppm	1.0ppm		25.0ppm	<50	<+/-1ppm	-20°C / -4°F	55°C / 131°F	10.0ppm▲	20.0ppm▲
Carbon Monoxide	100 to 1,000ppm	300ppm	100ppm	30 to 70% of selected full scale range	100ppm	<30	<+/-6ppm	-20°C / -4°F	55°C / 131°F	100ppm▲	200ppm▲
Hydrogen	1,000ppm only	1,000ppm	n/a		500ppm	<65	<+/-25ppm	-20°C / -4°F	55°C / 131°F	200ppm▲	400ppm▲
Nitrogen Dioxide	10.0 to 50.0 ppm	10.0 ppm	5.0 ppm		5.0 ppm	<40	+/-3ppm or +/-20%	-20°C / -4°F	55°C / 131°F	5.0 ppm ▲	10.0 ppm▲
Catalytic Bead Sensors											
Flammable 1 to 8*	20 to 100% LEL	100% LEL	10% LEL	25 to 95% of selected full scale range	50% LEL	<25	<+/-1.5% LEL	-20°C / -4°F	55°C / 131°F	20% LEL▲	40% LEL▲
Infrared Sensors											
Methane	20 to 100% LEL	100% LEL	10% LEL	30 to 70% of selected full scale range	50% LEL	<40	<+/-1.5% LEL	-20°C / -4°F	50°C / 122°F	20% LEL▲	40% LEL▲
Propane	20 to 100% LEL	100% LEL	10% LEL		50% LEL	<40	<+/-1.5% LEL	-20°C / -4°F	50°C / 122°F	20% LEL▲	40% LEL▲
Carbon Dioxide	2.00% Vol only	2.00% V/V	n/a		1.00% V/V	<40	<+/-2% Vol.	-20°C / -4°F	50°C / 122°F	0.40% V/V▲	0.80% V/V▲
NOTES											
Performance figures are taken at 20~25°C;								▲ - Rising Alarm ▼ - Falling Alarm			
1. measured using a sample humidity of 50%RH, applicable between 10 and 90% of full scale,											
2. measured using test units calibrated at 50% of full scale,											
3. measured at 1000cc/min for Methane CAT, 500cc/min for O ₂ , Toxic and Methane/Carbon Dioxide IR with calibration cup (S3KCAL).											
Response time (T90) may increase when operating in lower or higher temperature conditions or when gas is introduced with the Weather Protection accessory (SPXCDWP) fitted. Methane IR sensor is calibrated and linearised only for Methane. Should it be exposed to other HC then non linear response is expected. For linearised operation other than Methane contact HA for alternate parts. Flammable CAT and Methane IR is calibrated at the factory 50%LEL Methane (2.5%Vol). This calibration enables 100% functional test prior to dispatch. This calibration does not remove need for calibration & test as part of commissioning at site. For gases other than Methane the unit has to be calibrated at site using target gas. Data represents typical values, and system conditioning may be required to achieve stated result. Contact HA for details.											
* Extended operating temperature range of -40°C to +65°C (-40°F to +149°F) for all sensor except for IR and H2 EC sensors, with an accuracy of +/- 30% of applied gas from -20°C to -40°C (-4°F to -40°F) and +55°C to +65°C (+131°F to +149°F). Long term operation at this range may cause decline in sensor performance.											
Contact Honeywell Analytics for any additional data or details.											
Certification											
China	GB Ex d IIC T4 GB3836.1&2 2000, PA, (CCCF Pending)										
Korea	KTL Ex d IIC T6 (-40°C to +65°C)										
US	UL - Class I, Division 1, Groups B, C and D, Class I, Division 2, Groups B, C & D, Class II, Division, Groups E, F & G, Class II, Division 2, Groups F & G. -40°C to +65°C										
European	ATEX Ex II 2 GD Ex d IIC Gb T6 (Ta -40°C to +65°C) Ex tb IIIC T85°C Db IP66										
International	IEC Ex II 2 GD Ex d IIC Gb T6 (Ta -40°C to +65°C) Ex tb IIIC T85°C Db IP66										
CE	EN50270:2006 EN6100-6 4:2007										
Environmental											
IP Rating		IP66 in accordance with EN60529:1992									
Operating Temperature		-40°C to +65°C/ -40°F to +149°F, (IR: -20°C to +50°C/ -4°F to +122°F). Note: The detector display may become illegible at temperatures below -40°C, but the detector continues its gas monitoring function. The display is not damaged and recovers when the temperature rises back above -20 °C.									
Operating Humidity		Continuous 20-90%RH (non condensing), Intermittent 10-99%RH (non condensing)									
Operating Pressure		90-110kPa									
Storage Conditions		-25°C to +65°C (-13°F to +149°F)									

15 Ordering information

Part number	Description
Sensepoint XCD transmitter and sensor KIT (ATEX/IECEX/AP*, LM25 and M20 Entry)	
SPXCDALMFX	ATEX/IECEX/AP* Methane CAT 0-100%LEL (20,0 to 100.0%LEL, 10%LEL) with LM25, M20 Entry
SPXCDALMRX	ATEX/IECEX/AP* Methane IR 0-100%LEL (20,0 to 100.0%LEL, 10%LEL) with LM25, M20 Entry
SPXCDALMPX	ATEX/IECEX/AP* Propane IR 0-100%LEL (20,0 to 100.0%LEL, 10%LEL) with LM25, M20 Entry
SPXCDALMO1	ATEX/IECEX/AP* Oxygen 25.0%Vol with LM25, M20 Entry
SPXCDALMHX	ATEX/IECEX/AP* Hydrogen Sulfide 0-50ppm (10.0 to 100.0ppm, 1ppm) with LM25, M20 Entry
SPXCDALMCX	ATEX/IECEX/AP* Carbon Monoxide 0-500ppm (100 to 1000ppm, 100ppm) with LM25, M20 Entry
SPXCDALMG1	ATEX/IECEX/AP* Hydrogen 0-1000ppm with LM25, M20 Entry
SPXCDALNXX	ATEX/IECEX/AP* Nitrogen Dioxide 0-50ppm with Aluminium alloy, M20 Entry
SPXCDALMB1	ATEX/IECEX/AP* approved Carbon Dioxide IR 0-2.00%VOL with LM25, M20 Entry
Sensepoint XCD transmitter and sensor KIT (ATEX/IECEX/AP*, 316SS and M20 Entry)	
SPXCDASMFXX	ATEX/IECEX/AP* approved Methane CAT 0-100%LEL (20 to 100%LEL, 10%LEL) with 316SS, M20 Entry
SPXCDASMRXX	ATEX/IECEX/AP* approved Methane IR 0-100%LEL (20 to 100%LEL, 10%LEL) with 316SS, M20 Entry
SPXCDASMPXX	ATEX/IECEX/AP* approved Propane IR 0-100%LEL (20 to 100%LEL, 10%LEL) with 316SS, M20 Entry
SPXCDASMO1	ATEX/IECEX/AP* approved Oxygen 25.0%Vol with 316SS, M20 Entry
SPXCDASMHXX	ATEX/IECEX/AP* approved Hydrogen Sulfide 0-50ppm (10.0 to 100.0ppm, 1ppm) with 316SS, M20 Entry
SPXCDASMCXX	ATEX/IECEX/AP* approved Carbon Monoxide 0-300ppm (100 to 1000ppm, 100ppm) with 316SS, M20 Entry
SPXCDASMG1	ATEX/IECEX/AP* approved Hydrogen 0-1000ppm with 316SS, M20 Entry
SPXCDASNXX	ATEX/IECEX/AP* approved Nitrogen Dioxide 0-50ppm with SS316, M20 Entry
SPXCDASMB1	ATEX/IECEX/AP* approved Carbon Dioxide IR 0-2.00%VOL with 316SS, M20 Entry
Sensepoint XCD transmitter and sensor KIT (UL, LM25 and 3/4" NPT Entry)	
SPXCDULNFX	UL/cUL approved Methane CAT 0-100%LEL (20 to 100%LEL, 10%LEL) with LM25, 3/4" NPT Entry
SPXCDULNRX	UL/cUL approved Methane IR 0-100%LEL (20 to 100%LEL, 10%LEL) with LM25, 3/4" NPT Entry
SPXCDULNPX	UL/cUL approved Propane IR 0-100%LEL (20 to 100%LEL, 10%LEL) with LM25, 3/4" NPT Entry
SPXCDULNO1	UL/cUL approved Oxygen 25.0%Vol with LM25, 3/4" NPT Entry
SPXCDULNHX	UL/cUL approved Hydrogen Sulfide 0-50ppm (10.0 to 100.0ppm, 1ppm) with LM25, 3/4" NPT Entry
SPXCDULNCX	UL/cUL approved Carbon Monoxide 0-300ppm (100 to 1000ppm, 100ppm) with LM25, 3/4" NPT Entry
SPXCDULNG1	UL/cUL approved Hydrogen 0-1000ppm with LM25, 3/4" NPT Entry
SPXCDULNXX	UL approved SP XCD Nitrogen Dioxide 0-50ppm with LM25, 3/4" NPT Entry
SPXCDULNB1	UL/cUL approved Carbon Dioxide IR 0-2.00%VOL with LM25, 3/4" NPT Entry
Sensepoint XCD transmitter and sensor KIT (UL, 316SS and 3/4" NPT Entry)	
SPXCDUSNFX	UL/cUL approved Methane CAT 0-100%LEL (20 to 100%LEL, 10%LEL) with 316SS, 3/4" NPT Entry
SPXCDUSNRX	UL/cUL approved Methane IR 0-100%LEL (20 to 100%LEL, 10%LEL) with 316SS, 3/4" NPT Entry
SPXCDUSNPX	UL/cUL approved Propane IR 0-100%LEL (20 to 100%LEL, 10%LEL) with 316SS, 3/4" NPT Entry
SPXCDUSNO1	UL/cUL approved Oxygen 25.0%Vol with 316SS, 3/4" NPT Entry
SPXCDUSNHX	UL/cUL approved Hydrogen Sulfide 0-50ppm (10.0 to 100.0ppm, 1ppm) with 316SS, 3/4" NPT Entry
SPXCDUSNCX	UL/cUL approved Carbon Monoxide 0-300ppm (100 to 1000ppm, 100ppm) with 316SS, 3/4" NPT Entry
SPXCDUSNG1	UL/cUL approved Hydrogen 0-1000ppm with 316SS, 3/4" NPT Entry
SPXCDUSNXX	UL approved SP XCD Nitrogen Dioxide 0-50ppm with SS316, 3/4" NPT Entry
SPXCDUSNB1	UL/cUL approved Carbon Dioxide IR 0-2.00%VOL with 316SS, 3/4" NPT Entry
Sensepoint XCD transmitter and sensor KIT (ATEX/IECEX/AP*, LM25 and M20 Entry with ModBus)	

LYTLE TUNNEL RENOVATIONS &
UPGRADES
SUBMITTED 12/22/15,
MANUFACTURER: 3S INC. SPXCDHMANEN Issue 4
BID ITEM 281

Sensepoint XCD Technical Manual

SPXCDALMFXM	ATEX/IECEX/AP* Methane CAT 0-100%LEL (20,0 to 100.0%LEL, 10%LEL) with LM25, M20 Entry, with ModBus
SPXCDALMRXM	ATEX/IECEX/AP* Methane IR 0-100%LEL (20,0 to 100.0%LEL, 10%LEL) with LM25, M20 Entry, with ModBus
SPXCDALMPXM	ATEX/IECEX/AP* Propane IR 0-100%LEL (20,0 to 100.0%LEL, 10%LEL) with LM25, M20 Entry, with ModBus
SPXCDALMO1M	ATEX/IECEX/AP* Oxygen 25.0%Vol with LM25, M20 Entry, with ModBus
SPXCDALMHXM	ATEX/IECEX/AP* Hydrogen Sulfide 0-50ppm (10.0 to 100.0ppm, 1ppm) with LM25, M20 Entry, with ModBus
SPXCDALMGXM	ATEX/IECEX/AP* Carbon Monoxide 0-500ppm (100 to 1000ppm, 100ppm) with LM25, M20 Entry, with ModBus
SPXCDALMG1M	ATEX/IECEX/AP* Hydrogen 0-1000ppm with LM25, M20 Entry, with ModBus
SPXCDALNXXM	ATEX/IECEX/AP approved Nitrogen Dioxide 0-50ppm with LM25, M20 Entry, With Modbus
SPXCDALMB1M	ATEX/IECEX/AP* approved Carbon Dioxide IR 0-2.00%VOL with LM25, M20 Entry, with ModBus
Sensepoint XCD transmitter and sensor KIT (ATEX/IECEX/AP*, 316SS and M20 Entry with ModBus)	
SPXCDASMF XM	ATEX/IECEX/AP* approved Methane CAT 0-100%LEL (20 to 100%LEL, 10%LEL) with 316SS, M20 Entry, with ModBus
SPXCDASMR XM	ATEX/IECEX/AP* approved Methane IR 0-100%LEL (20 to 100%LEL, 10%LEL) with 316SS, M20 Entry, with ModBus
SPXCDASMP XM	ATEX/IECEX/AP* approved Propane IR 0-100%LEL (20 to 100%LEL, 10%LEL) with 316SS, M20 Entry, with ModBus
SPXCDASMO1M	ATEX/IECEX/AP* approved Oxygen 25.0%Vol with 316SS, M20 Entry, with ModBus
SPXCDASMH XM	ATEX/IECEX/AP* approved Hydrogen Sulfide 0-50ppm (10.0 to 100.0ppm, 1ppm) with 316SS, M20 Entry, with ModBus
SPXCDASMC XM	ATEX/IECEX/AP* approved Carbon Monoxide 0-300ppm (100 to 1000ppm, 100ppm) with 316SS, M20 Entry, with ModBus
SPXCDASMG1M	ATEX/IECEX/AP* approved Hydrogen 0-1000ppm with 316SS, M20 Entry, with ModBus
SPXCDASN XM	ATEX/IECEX/AP approved Nitrogen Dioxide 0-50ppm with SS316, M20 Entry, With Modbus
SPXCDASMB1M	ATEX/IECEX/AP* approved Carbon Dioxide IR 0-2.00%VOL with 316SS, M20 Entry, with ModBus
UL APPROVAL (Epoxy Coated Aluminium Alloy, LM25, With Modbus)	
SPXCDULNFXM	UL/cUL approved Flammable CAT 0-100%LEL (20,0 to 100.0%LEL, 10%LEL) with LM25, 3/4"NPT Entry, with Modbus
SPXCDULNR XM	UL/cUL approved Methane IR 0-100%LEL (20,0 to 100.0%LEL, 10%LEL) with LM25, 3/4"NPT Entry, with Modbus
SPXCDULNP XM	UL/cUL approved Propane IR 0-100%LEL (20,0 to 100.0%LEL, 10%LEL) with LM25, 3/4"NPT Entry, with Modbus
SPXCDULNO1M	UL/cUL approved Oxygen 25.0%Vol with LM25, 3/4"NPT Entry, with Modbus
SPXCDULNH XM	UL/cUL approved Hydrogen Sulfide 0-50ppm (10.0 to 100.0ppm, 1ppm) with LM25, 3/4"NPT Entry, with Modbus
SPXCDULNC XM	UL/cUL approved Carbon Monoxide 0-500ppm (100 to 1000ppm, 100ppm) with LM25, 3/4"NPT Entry, with Modbus
SPXCDULNG1M	UL/cUL approved Hydrogen 0-1000ppm with LM25, 3/4"NPT Entry, with Modbus
SPXCDULN XM	UL/cUL approved Nitrogen Dioxide 0-50ppm with LM25, 3/4"NPT Entry, with Modbus
SPXCDULNB1M	UL/cUL approved Carbon Dioxide IR 0-2%VOL with LM25, 3/4"NPT Entry, with Modbus
UL APPROVAL (Epoxy Coated Stainless Steel, SS316, With Modbus)	
SPXCDUSNFXM	UL/cUL approved Flammable CAT 0-100%LEL (20,0 to 100.0%LEL, 10%LEL) with SS316, 3/4"NPT Entry, with Modbus
SPXCDUSNR XM	UL/cUL approved Methane IR 0-100%LEL (20,0 to 100.0%LEL, 10%LEL) with SS316, 3/4"NPT Entry, with Modbus
SPXCDUSNP XM	UL/cUL approved Propane IR 0-100%LEL (20,0 to 100.0%LEL, 10%LEL) with SS316, 3/4"NPT Entry, with Modbus
SPXCDUSNO1M	UL/cUL approved Oxygen 25.0%Vol with SS316, 3/4"NPT Entry, with Modbus
SPXCDUSNH XM	UL/cUL approved Hydrogen Sulfide 0-50ppm (10.0 to 100.0ppm, 1ppm) with SS316, 3/4"NPT Entry, with Modbus
SPXCDUSNC XM	UL/cUL approved Carbon Monoxide 0-500ppm (100 to 1000ppm, 100ppm) with SS316, 3/4"NPT Entry, with Modbus
SPXCDUSNG1M	UL/cUL approved Hydrogen 0-1000ppm with SS316, 3/4"NPT Entry, with Modbus
SPXCDUSN XM	UL/cUL approved Nitrogen Dioxide 0-50ppm with SS316, 3/4"NPT Entry, with Modbus
SPXCDUSNB1M	UL/cUL approved Carbon Dioxide IR 0-2%VOL with SS316, 3/4"NPT Entry, with Modbus
Replacement sensor cartridge	
SPXCDXSFXSS	Methane CAT 0-100%LEL (20,0 to 100.0%LEL, 10%LEL)
SPXCDXSFXSS	Methane IR 0-100%LEL (20,0 to 100.0%LEL, 10%LEL)
SPXCDXSPXSS	Propane IR 0-100%LEL (20,0 to 100.0%LEL, 10%LEL)

IRRELEVANT

SPXCDXSO1SS	Oxygen-25.0%Vol only
SPXCDXSHXSS	Hydrogen Sulfide 0-50ppm (10.0 to 100.0ppm, 1ppm)
SPXCDXSCXSS	Carbon Monoxide 0-500ppm (100 to 1000ppm, 100ppm)
SPXCDXSG1SS	Hydrogen 0-1000ppm only
SPXCDXSNXSS	Nitrogen Dioxide 0-10ppm (10.0 to 50.0ppm)
SPXCDXSB1SS	Carbon Dioxide IR 0-2.00%VOL only
Accessories	
S3KCAL	Calibration cap
SPXCDCC	Collecting cone for use with lighter than air gases
SPXCDDMK	Duct mounting kit
SPXCDHMANEN	Hard Copy Manual in English
SPXCDMTBR	Pipe Mounting bracket (inc. fixings and hex wrench set)
SPXCDSDP	Sunshade / Deluge Protection
SPXCDHMANEN	Hard Copy Manual in English
SPXCDHMANCN	Hard Copy Manual in Chinese
SPXCDHMANKR	Hard Copy Manual in Korean
Spares	
SPXCDDMT	Replacement display module (O2 & Toxic)
SPXCDDMF	Replacement display module (FL & IR)
SPXCDTMO	Replacement terminal module (O2)
SPXCDTMT	Replacement terminal module (Toxic)
SPXCDTMF	Replacement terminal module (FL & IR)
SPXCDMBUS	Replacement Modbus Module
SPXCDNPTP	3/4"NPT Plug
SPXCDM20P	M20 Plug
SPXCDMANCD	Instruction manual CD
SPXCDNADP	3/4"NPT to M20 Adaptor
SPXCDWP	Weather Protection
SPXCDMAG	Magnet
SPXCDSRLS	Sensor Retainer with locking screw
SPXCDAKS	Allen key for stopper
SPXCDHWES	Hex wrench for earth screw
SPXCDEBS	Earth Bracket and Screws
Special Flammable Gas Calibration	
SPXCDSFGC1	Special Flammable Gas Calibration, 0-100%LEL, 1*
SPXCDSFGC2	Special Flammable Gas Calibration, 0-100%LEL, 2*
SPXCDSFGC3	Special Flammable Gas Calibration, 0-100%LEL, 3*
SPXCDSFGC4	Special Flammable Gas Calibration, 0-100%LEL, 4*
SPXCDSFGC5	Special Flammable Gas Calibration, 0-100%LEL, 5*
SPXCDSFGC7	Special Flammable Gas Calibration, 0-100%LEL, 7*
SPXCDSFGC8	Special Flammable Gas Calibration, 0-100%LEL, 8*
Note: If no Special Flammable Gas Calibration part no. is included on PO, a Methane (6* calibration will be supplied)	

* AP approvals include GB & PA for China and KTL for Korea.

CROSSED OUT ENTRIES IRRELEVANT

16 Warranty statement

All products are designed and manufactured to the latest internationally recognized standards by Honeywell Analytics under a Quality Management system that is certified to ISO 9001. As such Honeywell Analytics warrants its products against defective parts and workmanship and will repair or (at its option) replace any instruments which are or may become defective under proper use within 12 months from date of ~~commissioning by an approved Honeywell Analytics representative~~ **PROJECT ACCEPTANCE** or 18 months from date of shipment from Honeywell Analytics, whichever is the sooner. This warranty does not cover disposable batteries or damage caused by accident, abuse, abnormal operating conditions or poisoning of sensor.

WARRANTY INCLUDES SERVICE, PARTS AND LABOR

Defective goods must be returned to Honeywell Analytics premises accompanied by a detailed description of any issue. Where return of goods is not practicable Honeywell Analytics reserves the right to charge for any site attendance where any fault is not found with the equipment. Honeywell Analytics shall not be liable for any loss or damage whatsoever or howsoever occasioned which may be a direct or indirect result of the use or operation of the Contract Goods by the Buyer or any Party.

This warranty covers instrument and parts sold to the Buyer only by authorized distributors, dealers and representatives as appointed by Honeywell Analytics. The warranties set out in this clause are not pro rata, i.e. the initial warranty period is not extended by virtue of any works carried out there under.

In no event will Honeywell Analytics be liable for any incidental damages, consequential damages, special damages, punitive damages, statutory damages, indirect damages, loss of profits, loss of revenues, or loss of use, even if informed of the possibility of such damages. Honeywell Analytics's liability for any claims arising out of or related to this product will in no case exceed the order value. To the extent permitted by applicable law, these limitations and exclusions will apply regardless of whether liability arises from breach of contract, warranty, tort (including but not limited to negligence), by operation of law, or otherwise.

17 Installation Drawing

17.1 Mechanical Installation Drawing

THIS ITEM FORMS PART OF A CERTIFIED PRODUCT. NO MODIFICATION PERMITTED WITHOUT REFERENCE TO CERTIFICATION DEPARTMENT.

SCALE: DRWN: BEN TITLE: 6/25/2008

Sensepoint XCD Installation Drawing

SHT 1 OF 3

3001G0471

THIS DOCUMENT HAS BEEN GENERATED USING AUTOCAD AND MUST ONLY BE UPDATED BY C.A.D.

3001G0471 SHT. 1

I. SPECIFICATION

- SIZE: 164X201X99
- WEIGHT: 2kg
- MOUNTING BRACKET: 0.2kg
- MATERIAL
- TRANSMITTER: 1.8kg,
- MOUNTING BRACKET: 0.2kg
- TRANSMITTER: ADC12 / LM25 / 316SS
- SENSOR CARTRIDGE: 316SS
- MOUNTING BRACKET: 316SS

II. HAZARDOUS CERTIFICATION

- UL/CSA
- ATEX
- II 2 GD
- Ex d IIC Gb T6(Ta -40 °C to +65 °C)
- Ex tb IIIC T85 °C Db IP66
- Baseefa08ATEX0222
- IECEx BAS 08.0072

3. KTL

Ex d IIC T6, 16~32Volts DC, Pmax=5W
Tamb. -40 °C To +65 °C

4. GB, PA, CCCF

III. ITEM LIST

- XCD TRANSMITTER
- A. O2 / TOXIC / FL TRANSMITTER
- TWO M20 or 3/4" NPT CABLE ENTRY
- XCD SENSOR CARTRIDGE
- A. 316 STAINLESS STEEL SENSOR
- B. O2 / TOXIC / FLAMMABLE
- C. PART NUMBER DEPENDS ON GAS TYPE
- WEATHER PROOF HOUSING
- M20 or 3/4" NPT PLUG
- PIPE MOUNTING BRACKET

ALL DIMS OS IN MILLIMETRES UNLESS OTHERWISE STATED. THIS DRAWING IS TO BS 8888. RADE ALL BURS AND SHARP EDGES. SURFACE TEXTURE VALUES ARE IN um Ra AND TO BS 1134

FINISH: MATERIAL: SCALE: DRWN: BEN TITLE: 6/25/2008

SCALE	DRWN	BEN	TITLE
NTS			Sensepoint XCD Installation Drawing
ISSUE	DATE	CHANGE	APP'D
A	07/JUL/08 25/JUN/08	New Drawing	J.Y.JIN
B	09/JUL/08	Add Sheet	J.Y.JIN
C	13/AUG/08	Change W/P	J.Y.JIN
D	09/JUL/08	Add inch dims.	J.Y.JIN
E	02/OCT/08	Add ATEX Code	J.Y.JIN
F	09/FEB/09	Change Terminal Label	J.Y.JIN
G	07/FEB/09	Change Ter. Desc.	J.Y.JIN


TERMINALS TO BE AS SPECIFIED BELOW UNLESS OTHERWISE STATED:


Ø DIMS: 2 DP ± 0.1 mm, 1 DP ± 0.25 mm, HOE ± 0.4 mm, ANGLR ± 1/2°

HOLE: Ø 0 to 8 +0.08, 11.8 to 14 +0.1, 14 to 25 +0.12

THIS DRAWING IS CONFIDENTIAL. IT IS THE PROPERTY OF HONEYWELL ANALYTICS LTD AND MUST NOT BE REPRODUCED EITHER WHOLLY OR PARTLY. ALL RIGHTS IN RESPECT OF PATENTS, DESIGNS AND COPYRIGHT ARE RESERVED.

17.2 Electronic Connection Drawing




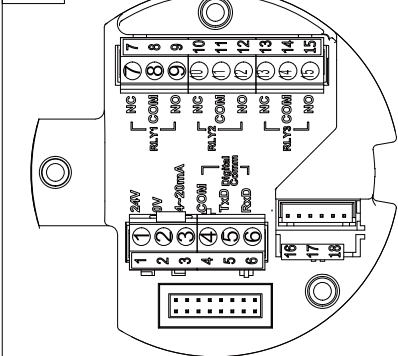


3001G0471 SHT. 2

THIS DOCUMENT HAS BEEN GENERATED USING AIAI.CAD
AND MUST ONLY BE UPDATED BY C.A.D

3 Wire 4~20mA (Source) with Relays

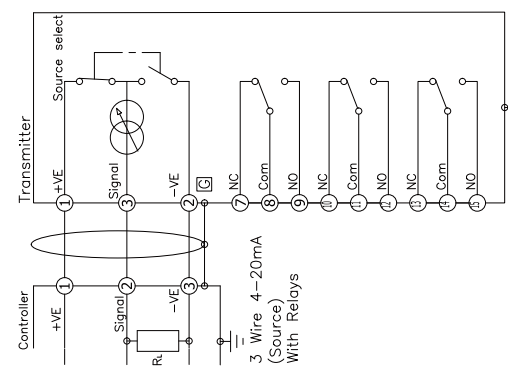

3 Wire 4~20mA (Sink) with Relays

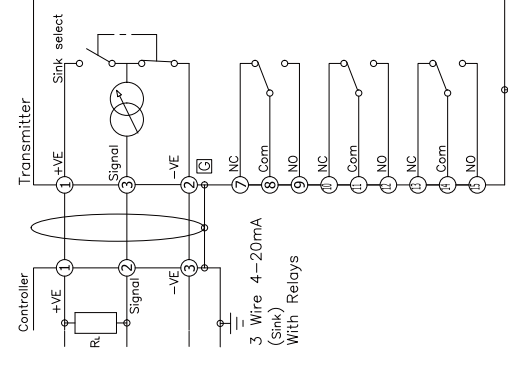

Terminal No.	Function
1	Power +24V DC (16~32VDC)
2	Power 0V
3	Power 4~20 mA (signal)
4	Digital comm Common
5	D1 ("B" / "+")
6	D0 ("A" / "-")
7	Relay RLY1 NC
8	Relay RLY1 COM
9	Relay RLY1 NO
10	Relay RLY2 NC
11	Relay RLY2 COM
12	Relay RLY2 NO
13	Relay RLY3 NC
14	Relay RLY3 COM
15	Relay RLY3 NO

THIS ITEM FORMS PART OF A CERTIFIED PRODUCT
NO MODIFICATION PERMITTED WITHOUT
REFERENCE TO CERTIFICATION DEPARTMENT

NOTES:

- REFER TO INSTRUCTION MANUAL FOR TECHNICAL DETAILS.
- XCD OPERATING VOLTAGE 16~32Volts DC, 5W(Max)
- 4~20 mA LOOP RESISTANCE TO BE <300 ohms
- POWER SUPPLY LOOP RESISTANCE TO BE <12 ohm
- NO TWO 'EARTH POINTS' SHOULD BE CONNECTED VIA SCREEN AND/OR CONDUIT SO AS TO AVOID 'GROUND LOOPS'.
- MULTIPLE 'EARTH POINTS' ARE NOT ALLOWED.
- 'E' POINTS (CONTINUITY OF SCREEN) MAY BE ACHIEVED USING APPROPRIATE GLANDS/CABLE OR CONDUIT; INTERNAL AND EXTERNAL 'EARTH POINTS' IN THE TRANSMITTER ARE PROVIDED.
- XCD TRANSMITTER CERTIFICATION KTL : Ex d IIC T6 (Tamb. -40 °C to 65 °C)

MATERIAL		FINISH	
G	07/DEC/09	J.Y.JIN	J.Y.JIN
F	09/FEB/09	J.Y.JIN	J.Y.JIN
E	02/OCT/08	J.Y.JIN	J.Y.JIN
D	13/AUG/08	J.Y.JIN	J.Y.JIN
C	09/JUL/08	J.Y.JIN	J.Y.JIN
B	07/JUL/08	J.Y.JIN	J.Y.JIN
A	26/JUN/08	J.Y.JIN	J.Y.JIN

ALL DIMENSIONS IN MILLIMETRES
UNLESS OTHERWISE SPECIFIED
AND APPLY AFTER PLATING

THIS DRAWING IS TO BS 6888

REMOVE ALL BURRS AND SHARP EDGES



SURFACE TEXTURE VALUES ARE IN um Ra AND TO BS 1134

3001G0471 SHT. 2

THIS DOCUMENT HAS BEEN GENERATED USING AIAI.CAD
AND MUST ONLY BE UPDATED BY C.A.D

3 Wire 4~20mA (Source) with Relays

3 Wire 4~20mA (Sink) with Relays

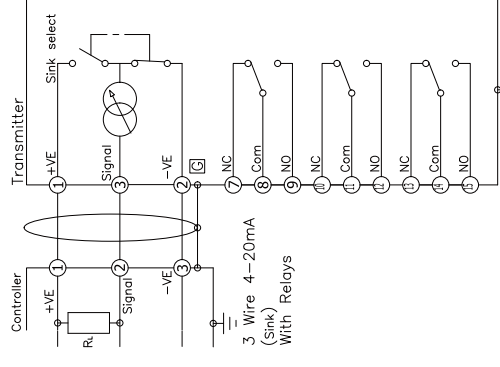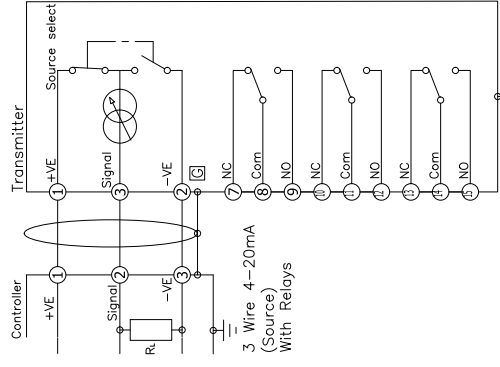

- NOTES:**
- REFER TO INSTRUCTION MANUAL FOR TECHNICAL DETAILS.
 - XCD OPERATING VOLTAGE 16~32Volts DC, 5W(Max)
 - 4~20 mA LOOP RESISTANCE TO BE <300 ohms
 - POWER SUPPLY LOOP RESISTANCE TO BE <12 ohm
 - NO TWO 'EARTH POINTS' SHOULD BE CONNECTED VIA SCREEN AND/OR CONDUIT SO AS TO AVOID 'GROUND LOOPS'.
 - MULTIPLE 'EARTH POINTS' ARE NOT ALLOWED.
 - 'E' POINTS (CONTINUITY OF SCREEN) MAY BE ACHIEVED USING APPROPRIATE GLANDS/CABLE OR CONDUIT; INTERNAL AND EXTERNAL 'EARTH POINTS' IN THE TRANSMITTER ARE PROVIDED.
 - XCD TRANSMITTER CERTIFICATION KTL : Ex d IIC T6 (Tamb. -40 °C to 65 °C)

THIS DRAWING IS CONFIDENTIAL.
IT IS THE PROPERTY OF HONEYWELL
ANALYTICS LTD AND MUST NOT BE
REPRODUCED EITHER WHOLLY OR
PARTLY. ALL RIGHTS IN RESPECT
OF PATENTS, DESIGNS AND
COPYRIGHT ARE RESERVED.

ALL DIMENSIONS IN MILLIMETRES
UNLESS OTHERWISE SPECIFIED
AND APPLY AFTER PLATING

THIS DRAWING IS TO BS 6888

REMOVE ALL BURRS AND SHARP EDGES

SURFACE TEXTURE VALUES ARE IN um Ra AND TO BS 1134

FINISH

MATERIAL		FINISH	
G	07/DEC/09	J.Y.JIN	J.Y.JIN
F	09/FEB/09	J.Y.JIN	J.Y.JIN
E	02/OCT/08	J.Y.JIN	J.Y.JIN
D	13/AUG/08	J.Y.JIN	J.Y.JIN
C	09/JUL/08	J.Y.JIN	J.Y.JIN
B	07/JUL/08	J.Y.JIN	J.Y.JIN
A	26/JUN/08	J.Y.JIN	J.Y.JIN

SCALE: NTS

ISSUE: A

DATE: 26/JUN/08

CHANGE: New Drawing

APP'D: J.Y.JIN

SHT. 2 OF 3

Sensepoint XCD
Installation Drawing

 
3001G0471

17.3 Duct Mounting Drawing

3001G0471 SHT. 3

THIS DOCUMENT HAS BEEN GENERATED USING AutoCAD
AND MUST ONLY BE UPDATED BY C.A.D.

Honeywell




THIS ITEM FORMS PART OF A CERTIFIED PRODUCT
NO MODIFICATION PERMITTED WITHOUT
REFERENCE TO CERTIFICATION DEPARTMENT

I. ITEM LIST

1. DUCT MOUNTING PLATE

Duct Mounting Hole

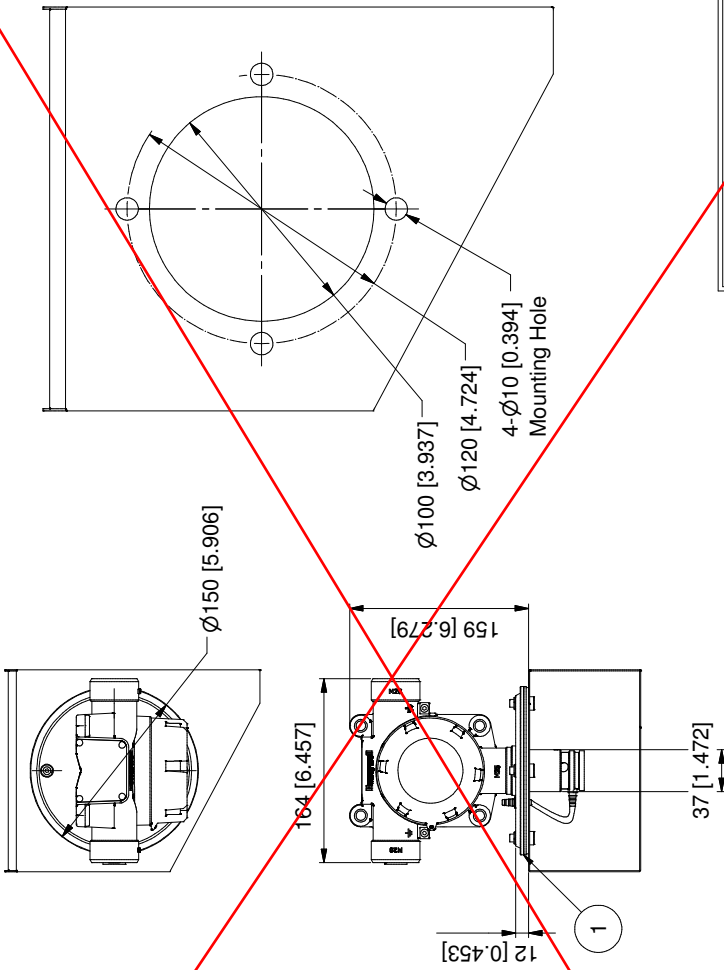

ALL DIMENSIONS IN MILLIMETRES
UNLESS OTHERWISE STATED.
AND APPLY AFTER PLATING.

THIS DRAWING IS TO BS 8888

REMOVE ALL BURRS AND
SHARP EDGES

SURFACE FINISH VALUES ARE
IN µm Ra AND TO BS 1134

TOLERANCES TO BE AS SPECIFIED BELOW UNLESS OTHERWISE STATED.	DIMS.	2 DP ± 0.1 mm	1 DP ± 0.25 mm	NONE ± 0.4 mm	ANGULAR ± 1/2°
HOLES:	Ø 0 to 8	+ 0.08	- 0.0	+ 0.1	- 0.0
	Ø 8 to 14	+ 0.0	- 0.0	+ 0.12	- 0.0
	Ø 14 to 25	+ 0.0	- 0.0	+ 0.12	- 0.0

THIS DRAWING IS CONFIDENTIAL.
IT IS THE PROPERTY OF HONEYWELL
ANALYTICS LTD AND MUST NOT BE
REPRODUCED EITHER WHOLLY OR
PARTLY. ALL RIGHTS IN RESPECT
OF PATENTS, DESIGNS AND
COPYRIGHT ARE RESERVED.

FINISH	MATERIAL	SCALE	DRN	BEN	DATE
		NTS			6/25/2008


THIS DRAWING IS CONFIDENTIAL.
IT IS THE PROPERTY OF HONEYWELL
ANALYTICS LTD AND MUST NOT BE
REPRODUCED EITHER WHOLLY OR
PARTLY. ALL RIGHTS IN RESPECT
OF PATENTS, DESIGNS AND
COPYRIGHT ARE RESERVED.

**Sensepoint XCD
Installation Drawing**


3001G0471

SHT. 3
OF 3

17.4 Collecting Cone Drawing

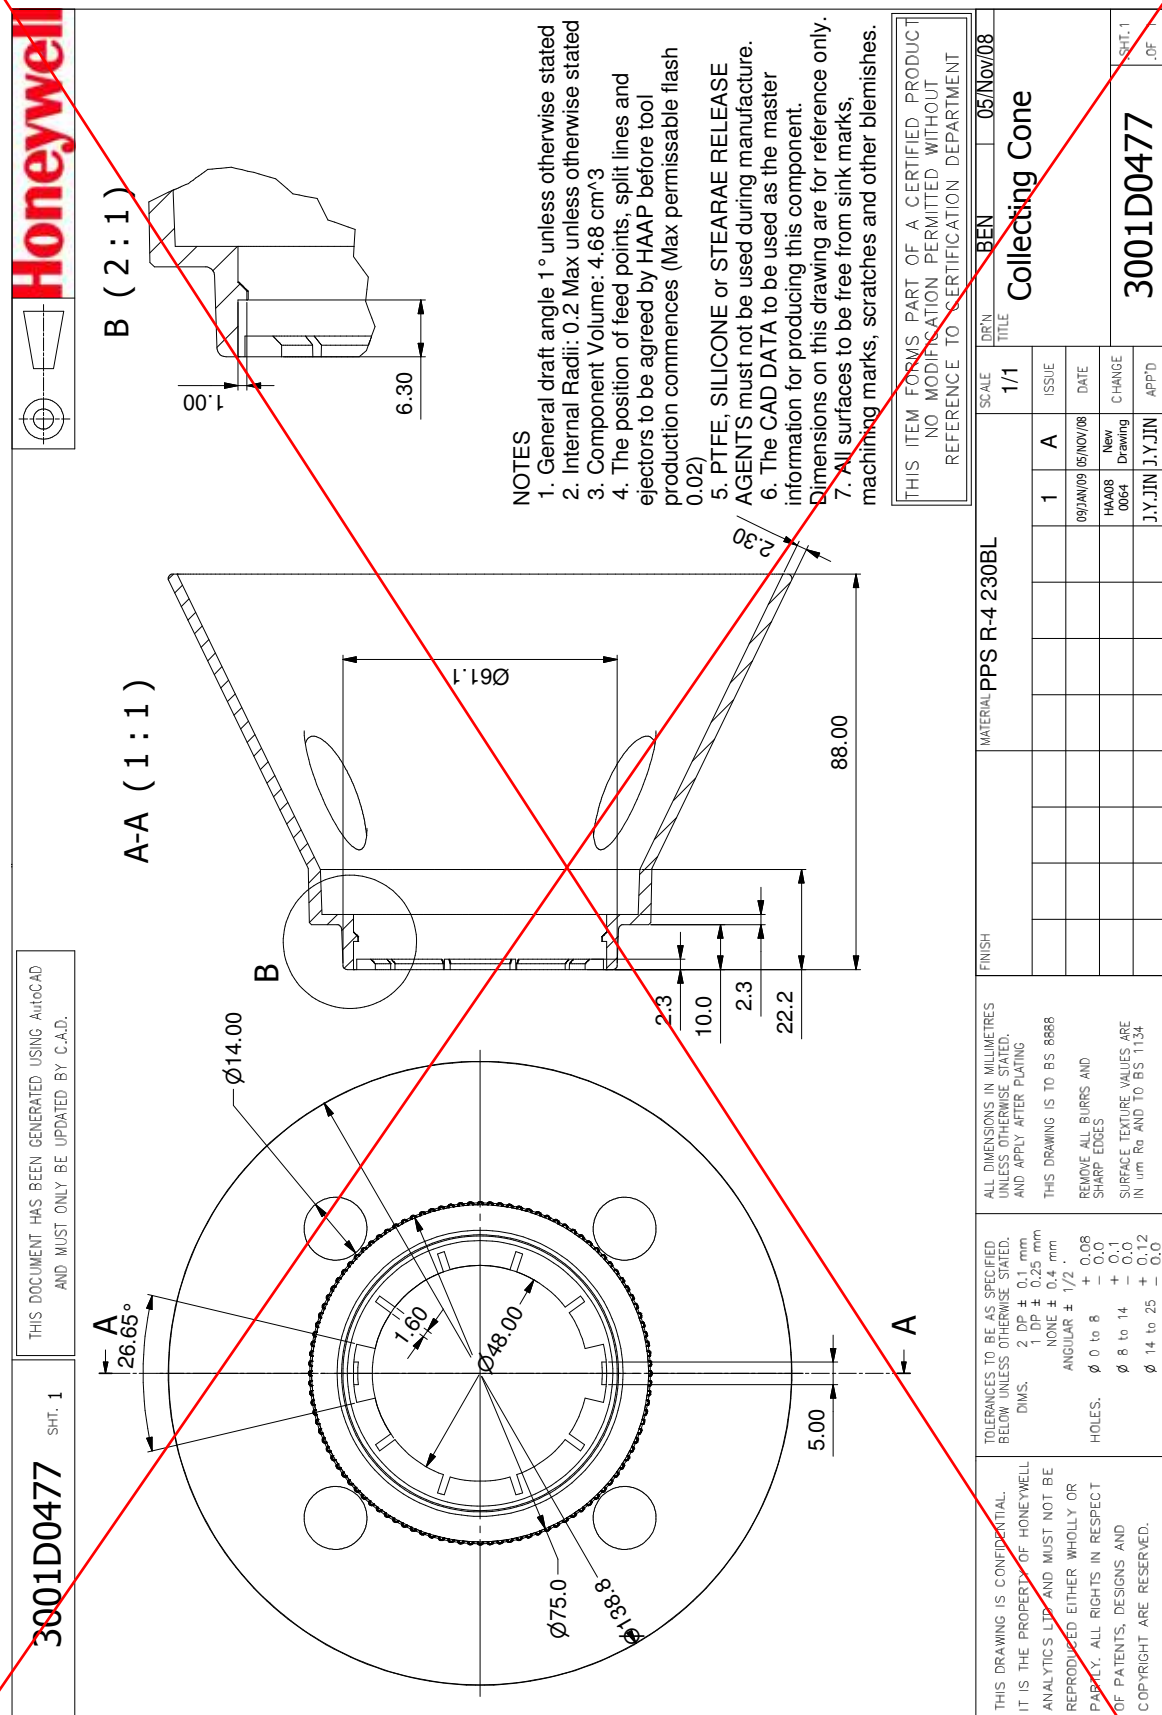


17.5 Mounting Bolt Assy Drawing

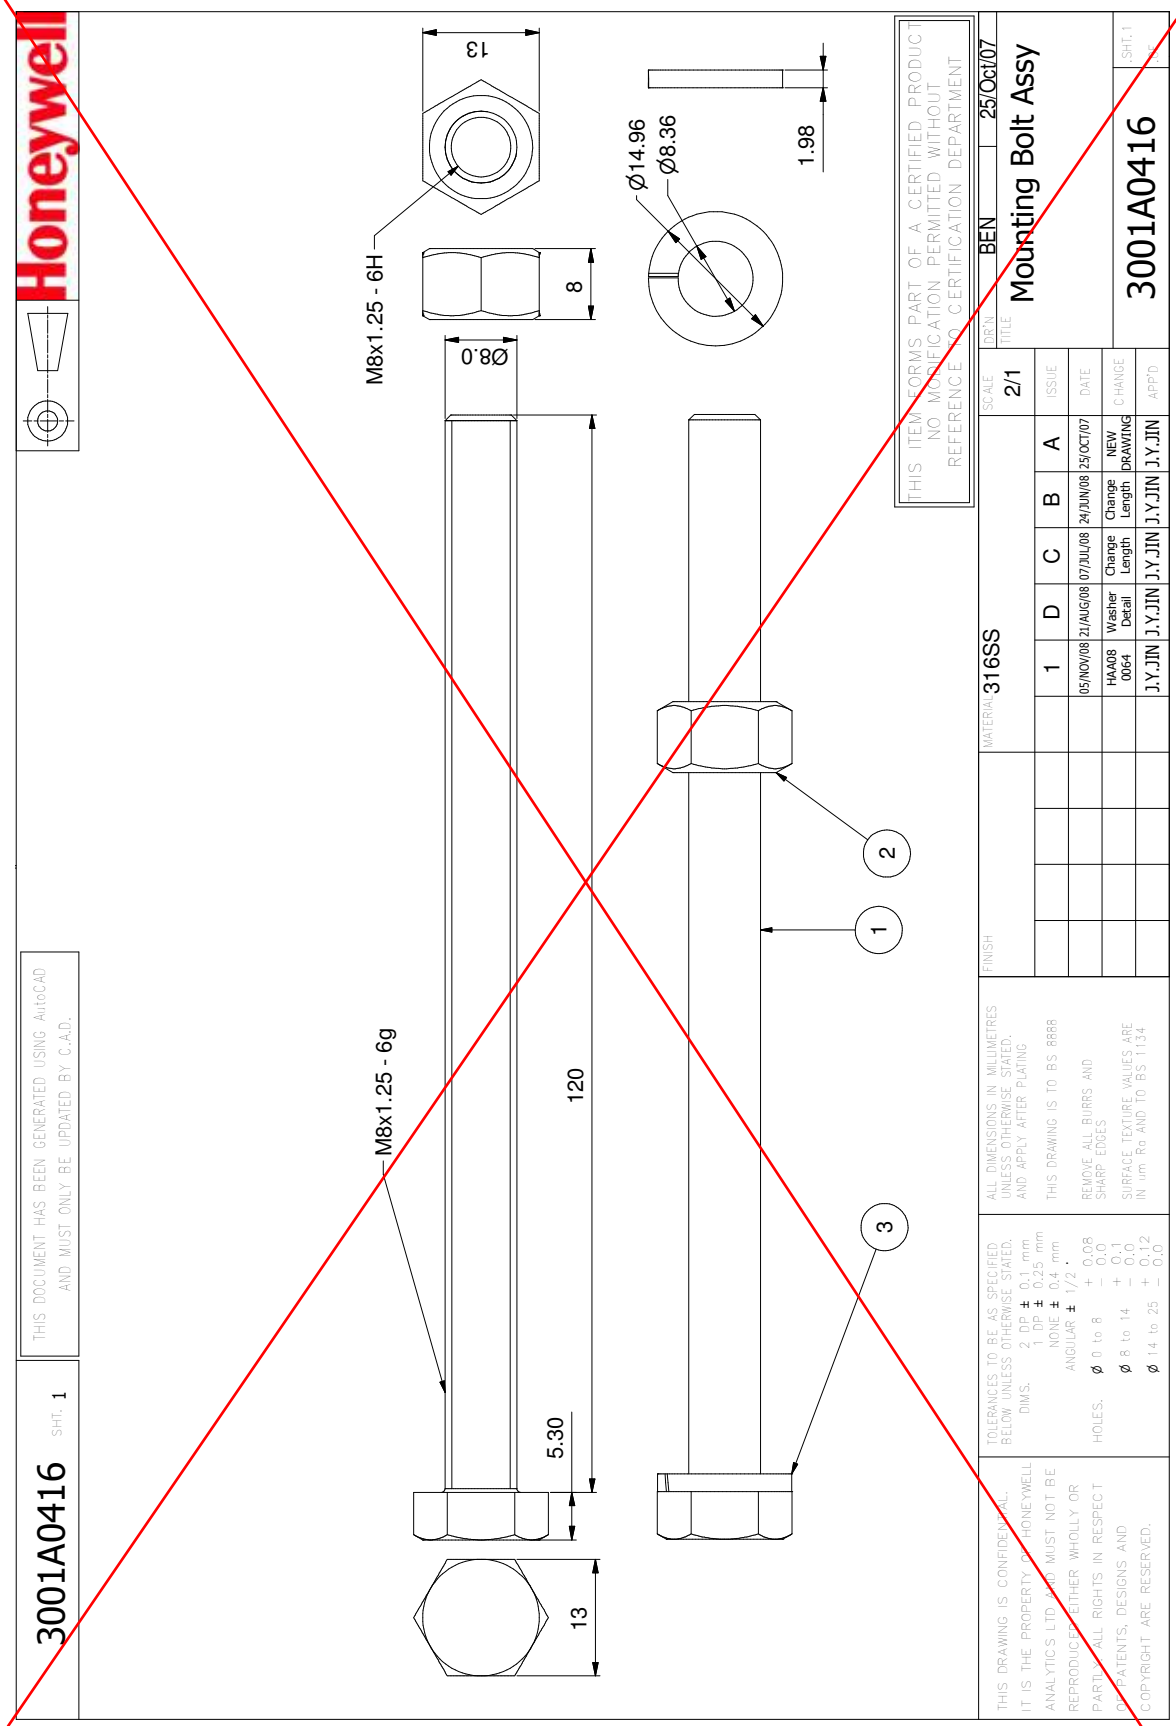

57 IRRELEVANT


17.6 Mounting Bracket Drawing

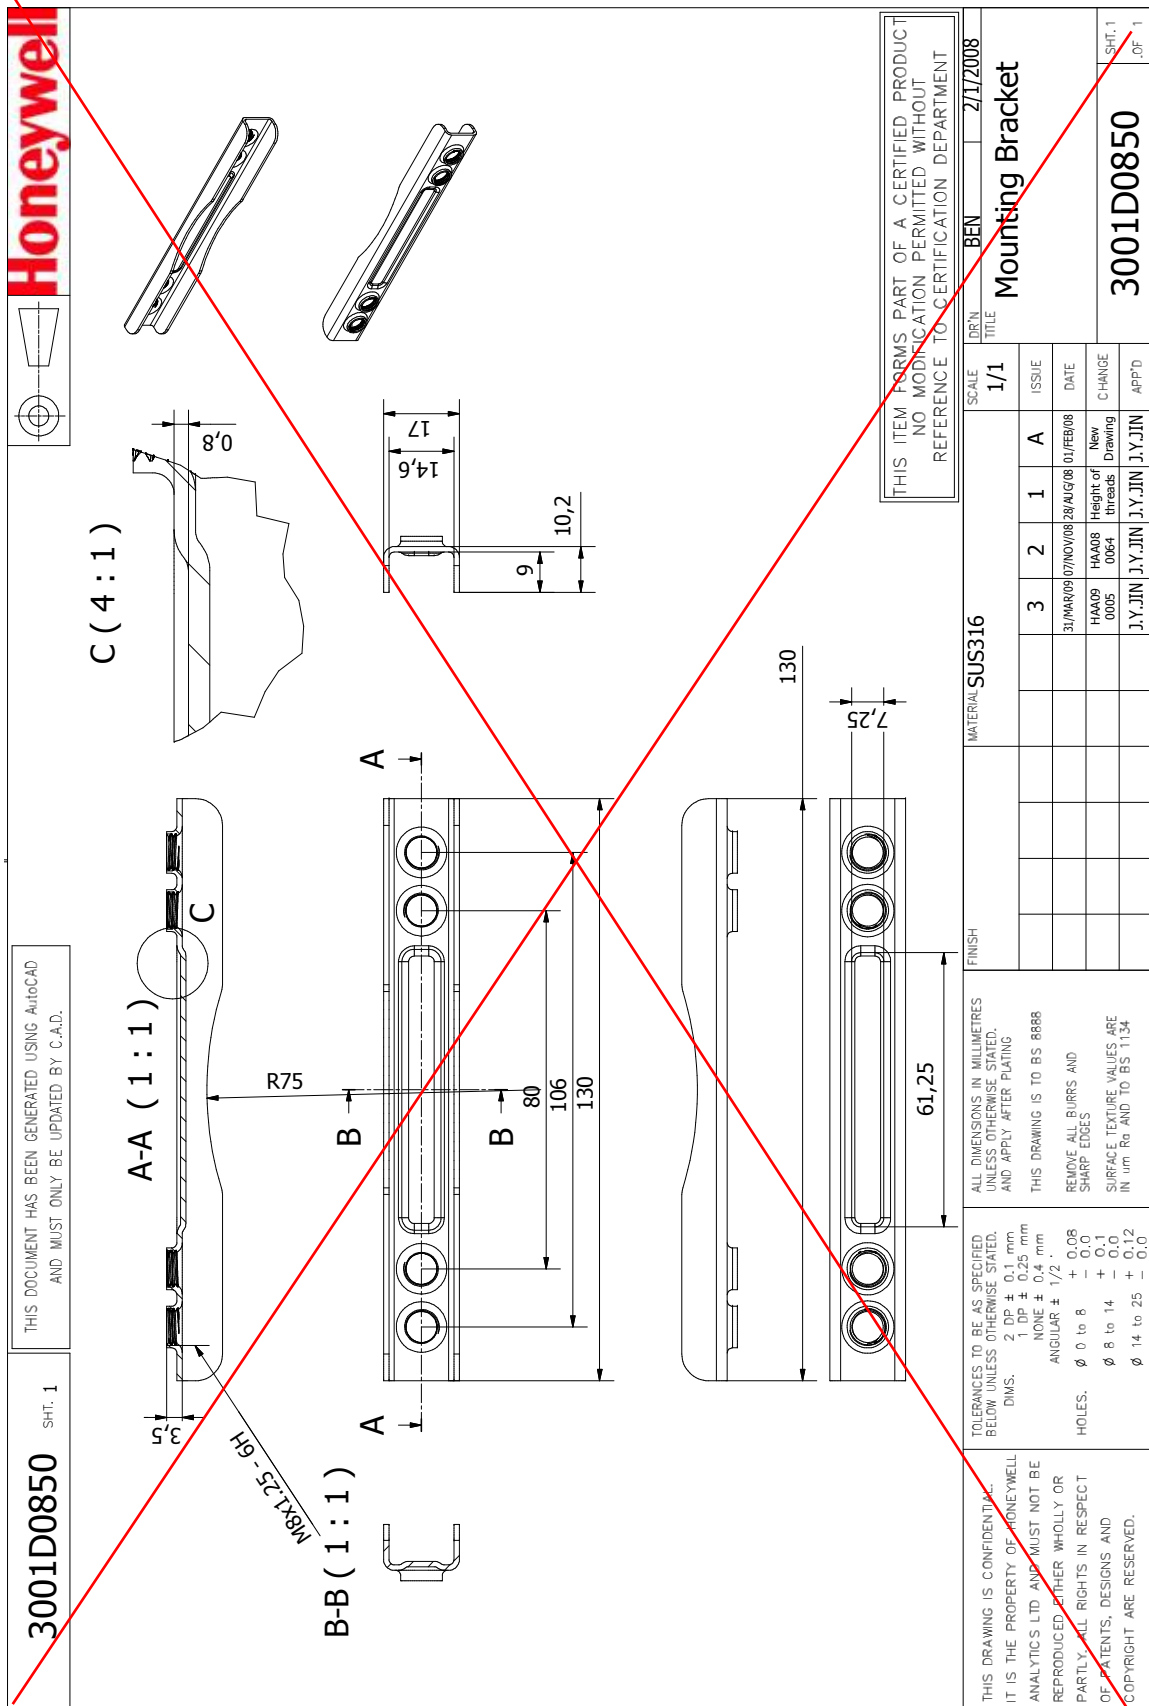

18 Certification


18.1 China GB Ex and PA

China GB Ex (Chinese Version):

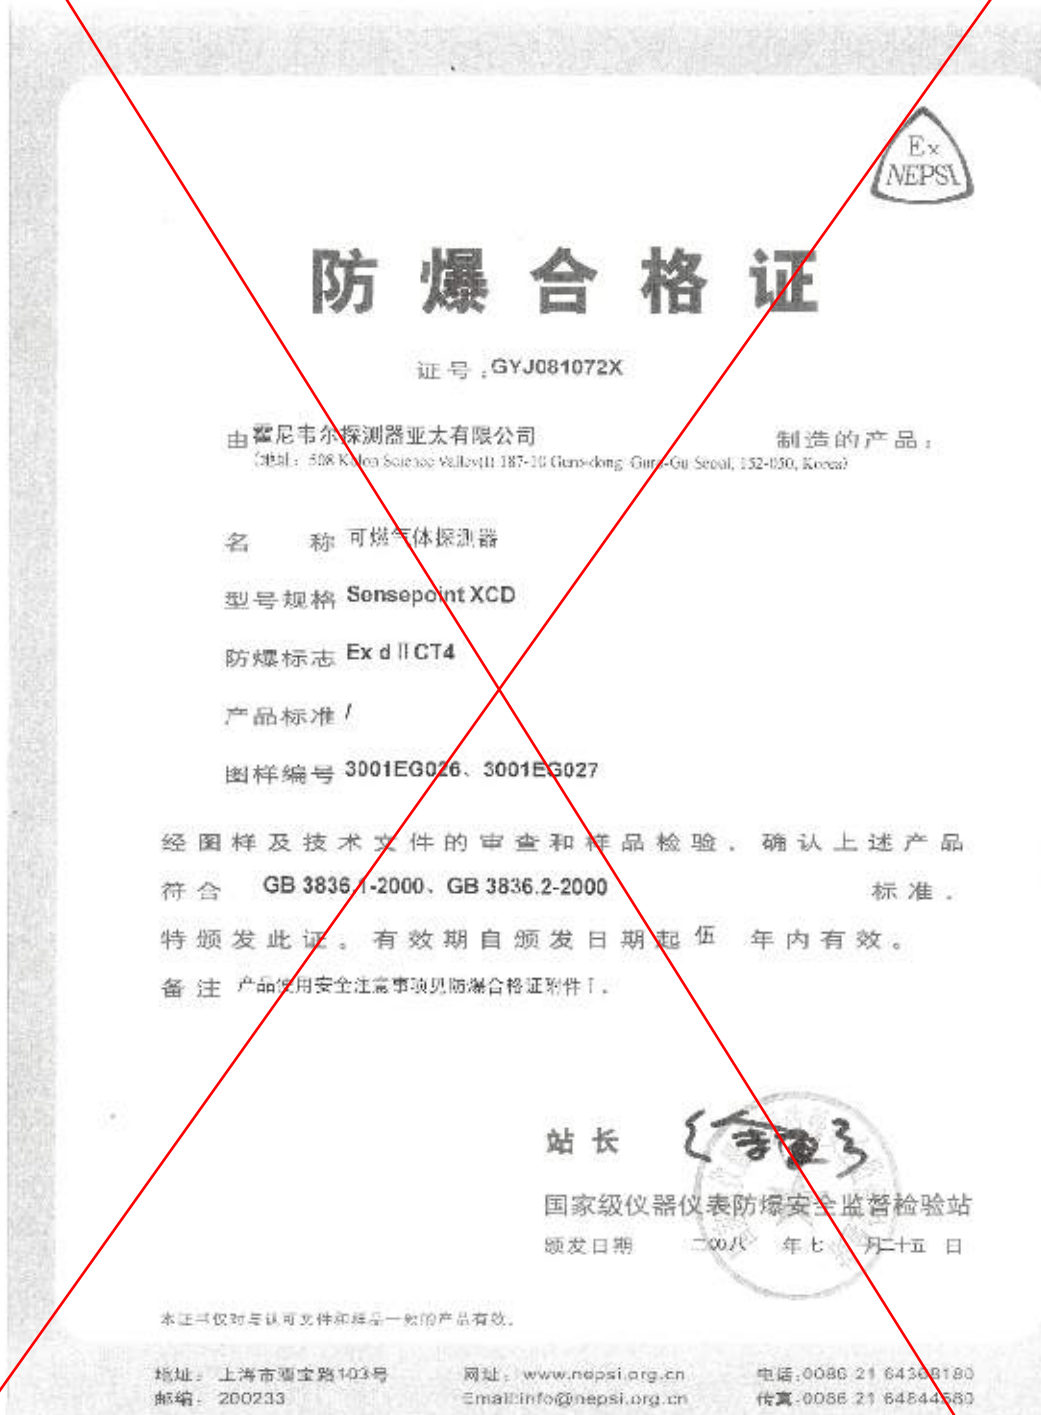

IRRELEVANT

China GB Ex (English Version):

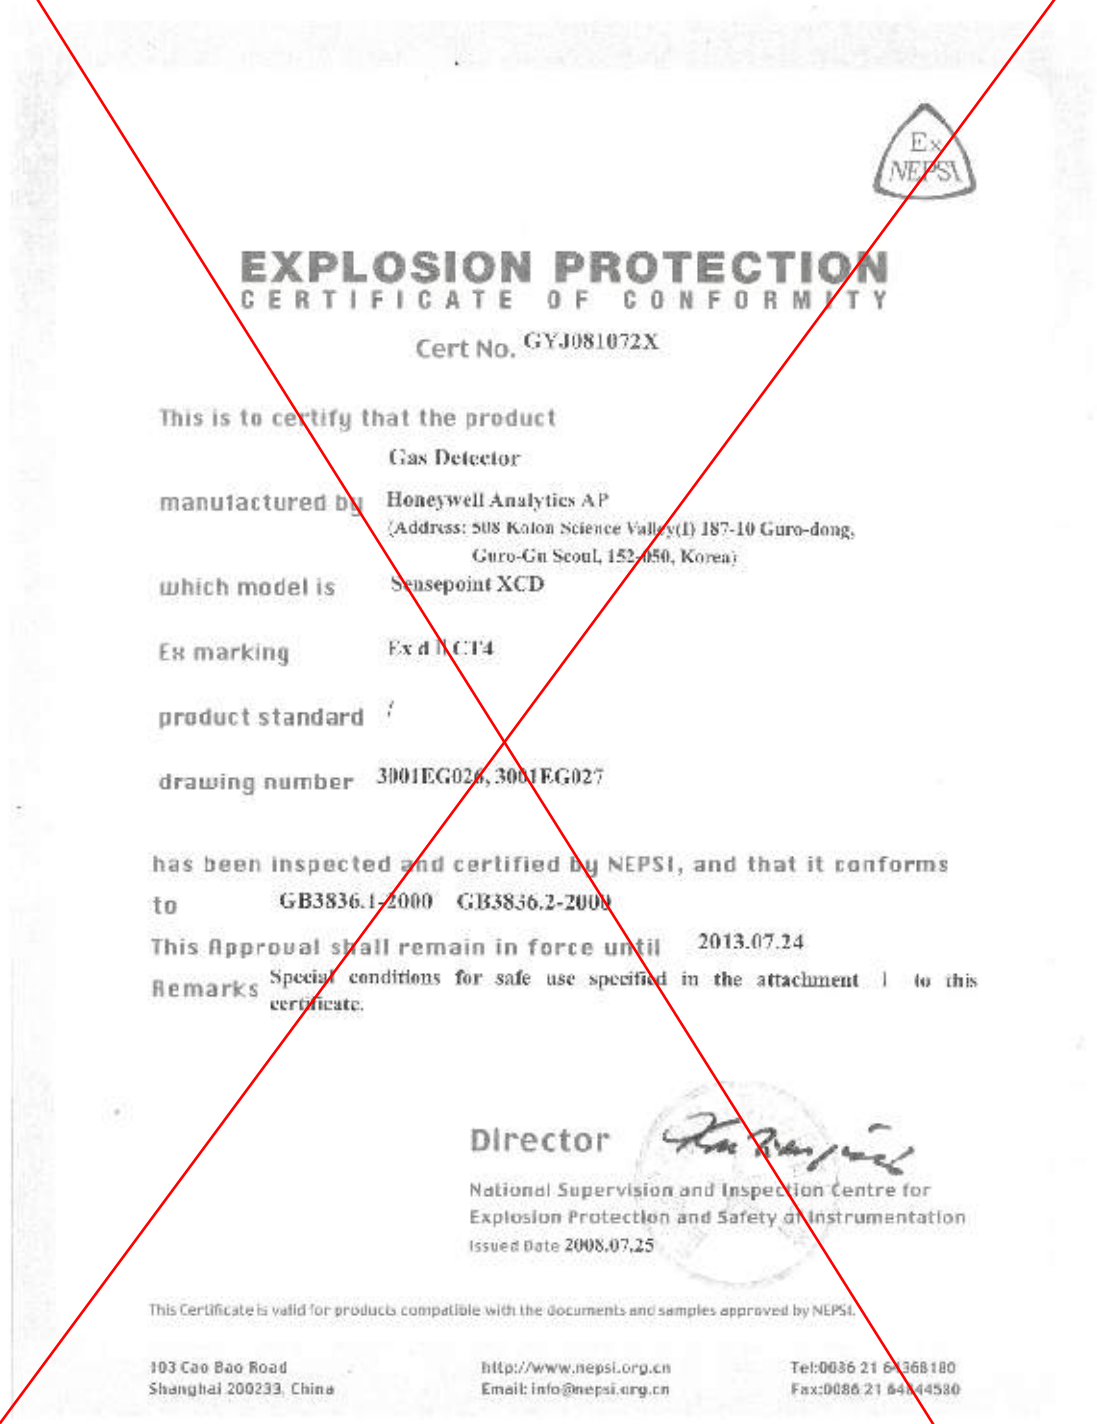

IRRELEVANT

China PA Certification:



IRRELEVANT


18.2 Korea KTL



18.3 European ATEX

ATEX For Transmitter:

Certificate Number
Baseefa08ATEX0222



Issued 31 October 2008
Page 1 of 2

1 EC - TYPE EXAMINATION CERTIFICATE

**2 Equipment or Protective System Intended for use in Potentially Explosive Atmospheres
Directive 94/9/EC**

3 EC - Type Examination Certificate Number: Baseefa08ATEX0222

4 Equipment or Protective System: A Type XCD Transmitter

5 Manufacturer: Honeywell Analytics

6 Address: 405 Barclay Boulevard, Lincolnshire, IL 60069, USA.

7 This equipment or protective system and any acceptable variation thereto is specified in the schedule to this certificate and the documents therein referred to.

8 Baseefa, Notified Body number 1180, in accordance with Article 9 of the Council Directive 94/9/EC of 23 March 1994, certifies that this equipment or protective system has been found to comply with the Essential Health and Safety Requirements relating to the design and construction of equipment and protective systems intended for use in potentially explosive atmospheres given in Annex II to the Directive.

The examination and test results are recorded in confidential Report No. **GB/BAS/ExTR08.0149/00**

9 Compliance with the Essential Health and Safety Requirements has been assured by compliance with:
IEC60079-0: 2007 EN60079-1: 2007 EN 61241-1: 2006

except in respect of those requirements listed in item 18 of the Schedule.

10 If the sign "X" is placed after the certificate number, it indicates that the equipment or protective system is subject to special conditions for safe use specified in the schedule to this certificate.

11 This EC - TYPE EXAMINATION CERTIFICATE relates only to the design and construction of the specified equipment or protective system. Further requirements of the Directive apply to the manufacturing process and supply of this equipment or protective system. These are not covered by this certificate.

12 The marking of the equipment or protective system shall include the following :

Ⓔ II GD Ex d IIC Gb T6 (Ta -40°C to +65°C) Ex tb IIC T85°C Db IP66

This certificate may only be reproduced in its entirety, without any change, schedule included.

Baseefa Customer Reference No. 5989 Project File No. 08/0201

This certificate is granted subject to the general terms and conditions of Baseefa. It does not necessarily indicate that the equipment may be used in particular industries or circumstances.

Baseefa
Rockhead Business Park, Staden Lane,
Buxton, Derbyshire SK17 9RZ
Telephone +44 (0) 1298 766500 Fax +44 (0) 1298 766501
e-mail info@baseefa.com web site www.baseefa.com
Baseefa is a trading name of Baseefa Ltd
Registered in England No. 4305578. Registered address as above.

D. Sinclair
R S SINCLAIR
DIRECTOR
On behalf of
Baseefa

IRRELEVANT

ATEX for Sensor

Certificate Number
Baseefa08ATEX0316X



Issued 9 March 2009
Page 1 of 2

EC - TYPE EXAMINATION CERTIFICATE

**Equipment or Protective System Intended for use in Potentially Explosive Atmospheres
Directive 94/9/EC**

- 3 EC - Type Examination Certificate Number: **Baseefa08ATEX0316X**
- 4 Equipment or Protective System: **A Type XCD Gas Sensor Head**
- 5 Manufacturer: **Honeywell Analytics Inc.**
- 6 Address: **405 Barclay Boulevard, Lincolnshire, IL 60069, USA.**
- 7 This equipment or protective system and any acceptable variation thereto is specified in the schedule to this certificate and the documents therein referred to.
- 8 Baseefa, Notified Body number 1180, in accordance with Article 9 of the Council Directive 94/9/EC of 23 March 1994, certifies that this equipment or protective system has been found to comply with the Essential Health and Safety Requirements relating to the design and construction of equipment and protective systems intended for use in potentially explosive atmospheres given in Annex II to the Directive.
The examination and test results are recorded in confidential Report No. **GB/BAS/ExTR08.0220/00**
- 9 Compliance with the Essential Health and Safety Requirements has been assured by compliance with:
IEC 60079-0: 2007 EN 60079-1: 2007 EN 61241-1: 2004
except in respect of those requirements listed at item 18 of the Schedule.
- 10 If the sign "X" is placed after the certificate number, it indicates that the equipment or protective system is subject to special conditions for safe use specified in the schedule to this certificate.
- 11 This EC - TYPE EXAMINATION CERTIFICATE relates only to the design and construction of the specified equipment or protective system. Further requirements of the Directive apply to the manufacturing process and supply of this equipment or protective system. These are not covered by this certificate.
- 12 The marking of the equipment or protective system shall include the following :
Ⓔ II 2 GD Ex d IIC T6 (T4 -40°C to +65°C) Gb Ex tb IIIC T85°C Db IP6X A21
This certificate may only be reproduced in its entirety, without any change, schedule included.

Baseefa Customer Reference No. 5989

Project File No. 08/0261

This certificate is granted subject to the general terms and conditions of Baseefa. It does not necessarily indicate that the equipment may be used in particular industries or circumstances.


Baseefa
Rockhead Business Park, Staden Lane,
Buxton, Derbyshire SK17 9RZ
Telephone +44 (0) 1298 766600 Fax +44 (0) 1298 766601
e-mail info@baseefa.com web site www.baseefa.com
Baseefa is a trading name of Baseefa Ltd
Registered in England No. 4305578. Registered address as above.

R S SINCLAIR
DIRECTOR
On behalf of
Baseefa

IRRELEVANT

18.4 International IEC

IEC Ex for Transmitter

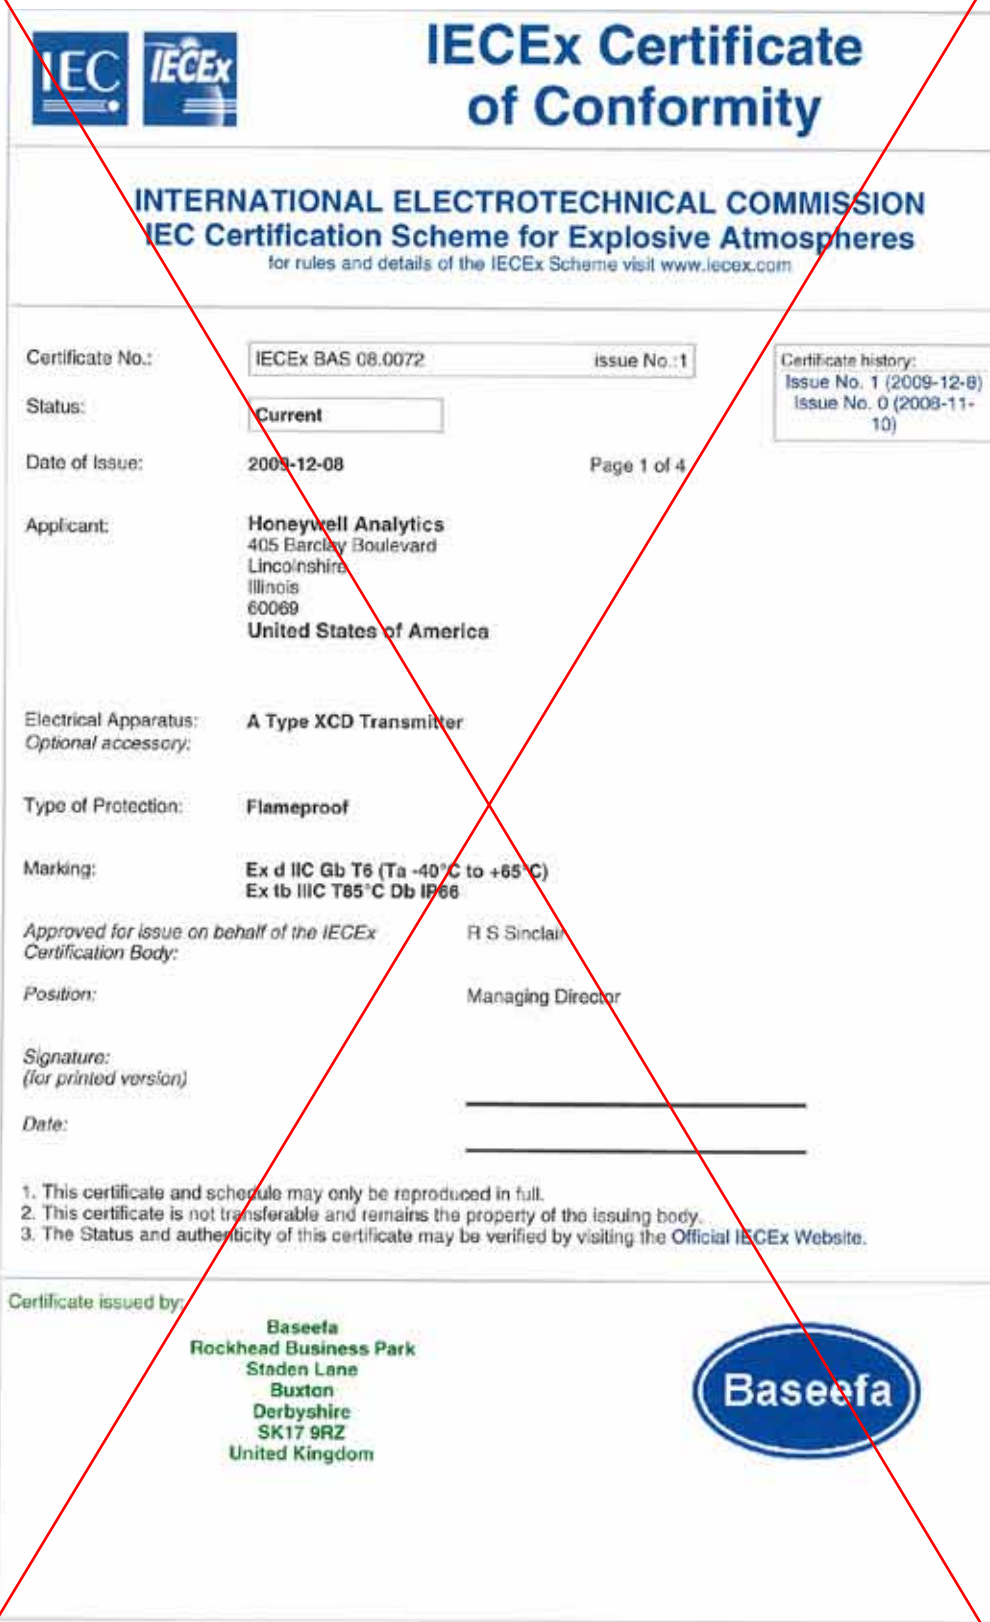

IEC **IECEX**

IECEX Certificate of Conformity

INTERNATIONAL ELECTROTECHNICAL COMMISSION
IEC Certification Scheme for Explosive Atmospheres
for rules and details of the IECEX Scheme visit www.iecex.com

Certificate No.: **IECEX BAS 08.0072** issue No.: **1**

Status: **Current**

Date of Issue: **2009-12-08** Page 1 of 4

Applicant: **Honeywell Analytics**
405 Barclay Boulevard
Lincolnshire
Illinois
60069
United States of America

Electrical Apparatus: **A Type XCD Transmitter**
Optional accessory:

Type of Protection: **Flameproof**

Marking: **Ex d IIC Gb T6 (Ta -40°C to +65°C)**
Ex tb IIIC T85°C Db IP66

Approved for issue on behalf of the IECEX Certification Body: **R S Sinclair**

Position: **Managing Director**


Signature: _____
(for printed version)

Date: _____

1. This certificate and schedule may only be reproduced in full.
2. This certificate is not transferable and remains the property of the issuing body.
3. The Status and authenticity of this certificate may be verified by visiting the Official IECEX Website.


Certificate issued by:

Baseefa
Rockhead Business Park
Staden Lane
Buxton
Derbyshire
SK17 9RZ
United Kingdom



IRRELEVANT

IEC Ex for Sensor

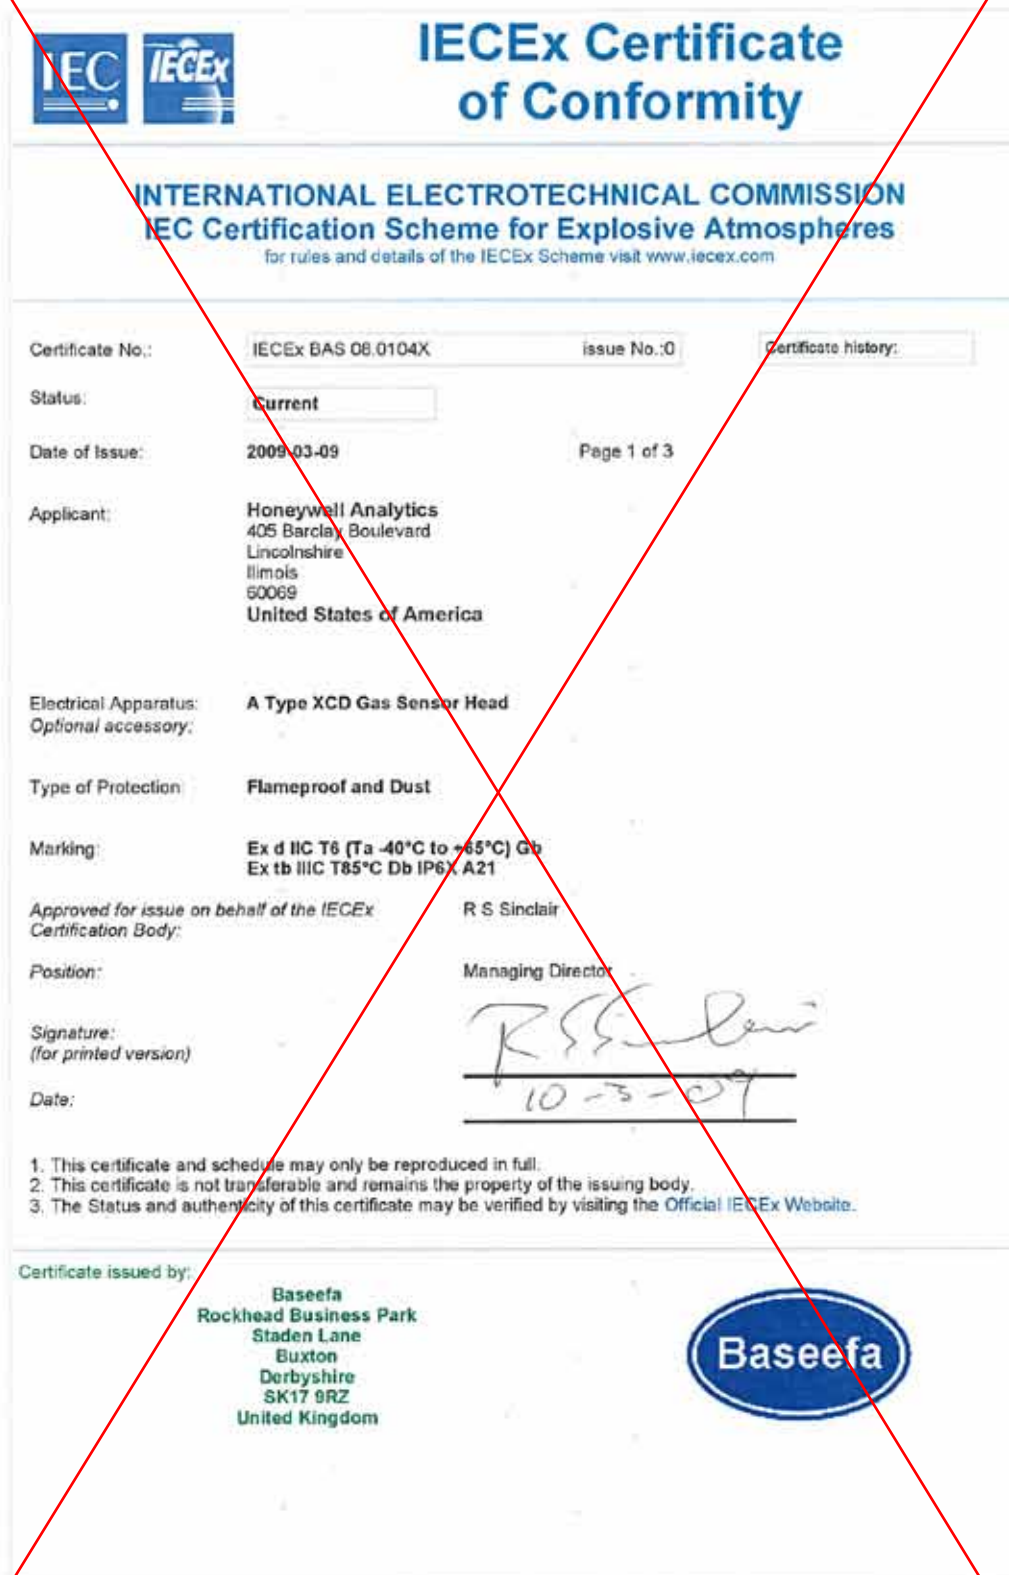


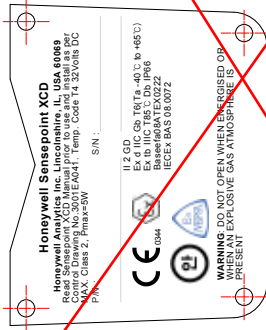
IRRELEVANT

18.5 Sensepoint XCD ATEX Name Plate

3001EA041 SHT. 1

THIS DOCUMENT HAS BEEN GENERATED USING
ADOBE ILLUSTRATOR AND MUST ONLY BE UPDATED BY A.I.





NOTES

- This is an ATEX schedule drawing and can only be changed after approval is given by the certifying body
- Product name format:
Honeywell Sensepoint XCD XXX
 - Blank - Sensepoint XCD for use with Sensepoint XCD socket and sensor.
 - RTD - Sensepoint XCD RTD for use with mA input sensors such as Sensepoint Toxic.
 - RFD - Sensepoint XCD RFD for use with mV input sensors such as Sensepoint Flammable
- Serial no. format
S/N: S1PPPPYYWNNN
 - Year of MFG
 - Week of MFG
 - Sequence number
 - Part Code
 - Issue State
 - SUPPLIER CODE
- Etching Depth : 0.1 mm

THIS ITEM FORMS PART OF A CERTIFIED PRODUCT
NO MODIFICATION PERMITTED WITHOUT
REFERENCE TO CERTIFICATION DEPARTMENT

FINISH		MATERIAL		SCALE		DRAWING TITLE	
JIS G4304: SUS 316 Minimum Thickness: 0.5mm		NONE		16 / MAY / 08		Sensepoint XCD ATEX Name Plate	
2	18NOV/08	30SEP/08	08SEP/08	14JUL/08	17JUN/08	16MAY/08	
	ADD NOTES	ADD Cert. IP68	ADD Cert. Number's	CHANGED NOTES	CHANGED MARKING REVISED	NEW DRAWING	CHANGE
	J.Y.JIN	J.Y.JIN	J.Y.JIN	J.Y.JIN	J.Y.JIN	J.Y.JIN	APPROVED BY
							3001EA041
							SHT. 1 OF 1

THIS DRAWING IS CONFIDENTIAL. IT IS THE PROPERTY OF HONEYWELL ANALYTICS LTD AND MUST NOT BE REPRODUCED EITHER WHOLLY OR PARTLY. ALL RIGHTS IN RESPECT OF PATENTS, DESIGNS AND COPYRIGHT ARE RESERVED.

18.6 Sensepoint XCD UL Name Plate



3001EU041 SHT. 1

THIS DOCUMENT HAS BEEN GENERATED USING ADOBE ILLUSTRATOR AND MUST ONLY BE UPDATED BY A.I.

Honeywell Sensepoint XCD
Honeywell Analytics Inc. Lincolnshire, IL, USA 60069
 Gas Detector for use in Hazardous Locations
 as to fire, Electrical Shock, Explosion Hazards Only.
 Class I Division 1&2, Groups B,C,D;
 Class II Division 1, Groups E,F,G;
 Class II Division 2, Groups F+G;
 Class I, Zone 1, Group IIB+H2 Hazardous Locations.
 Read Sensepoint XCD Manual Prior to Use.
 Temp. Code T4, 16~32Volts DC, Pmax=3W,
 Relay Ratings 3x5A@250VAC, Tamb.-40 C To +65°C
 BR-Ex d IIC T6 IP66, AEX-12187
 P/N : _____
 S/N : _____

UL **US** **35YL**
CLASSIFIED

Seguranga

ATENÇÃO - NÃO ABRA QUANDO ENERGIZADO OU NÃO ABRA ONDE UMA ATMOSFERA EXPLOSIVA POSSA ESTAR PRESENTE
WARNING: To reduce the risk of Hazardous Atmospheres. Disconnect the equipment from supply circuit before opening. Keep tightly closed when in operation. Conduit runs must have a seal fitting within 18 inches of the enclosure.

SCALE 2/1

Honeywell Sensepoint XCD
 Gas Detector for use in Hazardous Locations
 as to fire, Electrical Shock, Explosion Hazards Only.
 Class II Division 1, Groups E,F,G;
 Class II Division 2, Groups F+G;
 Class I, Zone 1, Group IIB+H2 Hazardous Locations.
 Read Sensepoint XCD Manual Prior to Use.
 Temp. Code T4, 16~32Volts DC, Pmax=3W,
 Relay Ratings 3x5A@250VAC, Tamb.-40 C To +65°C
 BR-Ex d IIC T6 IP66, AEX-12187
 P/N : _____
 S/N : _____

UL **US** **35YL**
CLASSIFIED

Seguranga

ATENÇÃO - NÃO ABRA QUANDO ENERGIZADO OU NÃO ABRA ONDE UMA ATMOSFERA EXPLOSIVA POSSA ESTAR PRESENTE
WARNING: To reduce the risk of Hazardous Atmospheres. Disconnect the equipment from supply circuit before opening. Keep tightly closed when in operation. Conduit runs must have a seal fitting within 18 inches of the enclosure.

THIS ITEM FORMS PART OF A CERTIFIED PRODUCT
NO MODIFICATION PERMITTED WITHOUT
REFERENCE TO CERTIFICATION DEPARTMENT

THIS DRAWING IS CONFIDENTIAL. IT IS THE PROPERTY OF HONEYWELL ANALYTICS LTD AND MUST NOT BE REPRODUCED EITHER WHOLLY OR PARTLY. ALL RIGHTS IN RESPECT OF PATENTS, DESIGNS AND COPYRIGHT ARE RESERVED.	TOLERANCES TO BE AS SPECIFIED BELOW UNLESS OTHERWISE STATED.		ALL DIMENSIONS IN MILLIMETRES UNLESS OTHERWISE STATED.		FINISH		MATERIAL		SCALE		DRN/BEN		16 / MAY / 08
	DIMS.		THIS DRAWING IS TO BS 8888		REMOVE ALL BURRS AND SHARP EDGES		SURFACE TEXTURE VALUES ARE IN um Ra AND TO BS 1134		NONE		TITLE		
1 DP ± 0.1 mm		2 DP ± 0.25 mm		3 DP ± 0.4 mm		ANGULAR ± 1/2°		Holes:		7		Sensepoint XCD	
± 0.08		± 0.0		± 0.0		± 0.12		± 0.0		8		UL Name Plate	
± 0.12		± 0.0		± 0.12		± 0.0		± 0.0		9		3001EU041	
± 0.12		± 0.0		± 0.12		± 0.0		± 0.0		10		SHT. 1	
± 0.12		± 0.0		± 0.12		± 0.0		± 0.0		11		OF 1	

18.7 Sensepoint XCD Warning Tag

3001EU048

SHIT. 1

THIS DOCUMENT HAS BEEN GENERATED USING AutoCAD AND MUST ONLY BE UPDATED BY C.A.D.

FRONT


BACK

NOTES:

- 1.The surface shall be flat and the words be readable,
- 2.The shall be no burr around.
- 3.Etching depth:0.1mm
- 4.TEXT ON BOTH SIDES OF LABEL

THIS ITEM FORMS PART OF A CERTIFIED PRODUCT NO MODIFICATION PERMITTED WITHOUT REFERENCE TO CERTIFICATION DEPARTMENT

MATERIAL	BS970:PART3:1991:316S11	SCALE	1/1	DRN	BEN	22/SEP/08
FINISH		ISSUE	A	TITLE		
		DATE	20/07/08	TRANSMITTER		
		CHANGE P/N	NEW	WARNING_TAG		
		APPROVED BY	J.Y.JIN			
				3001EU048		
				SHT. 1 OF 1		

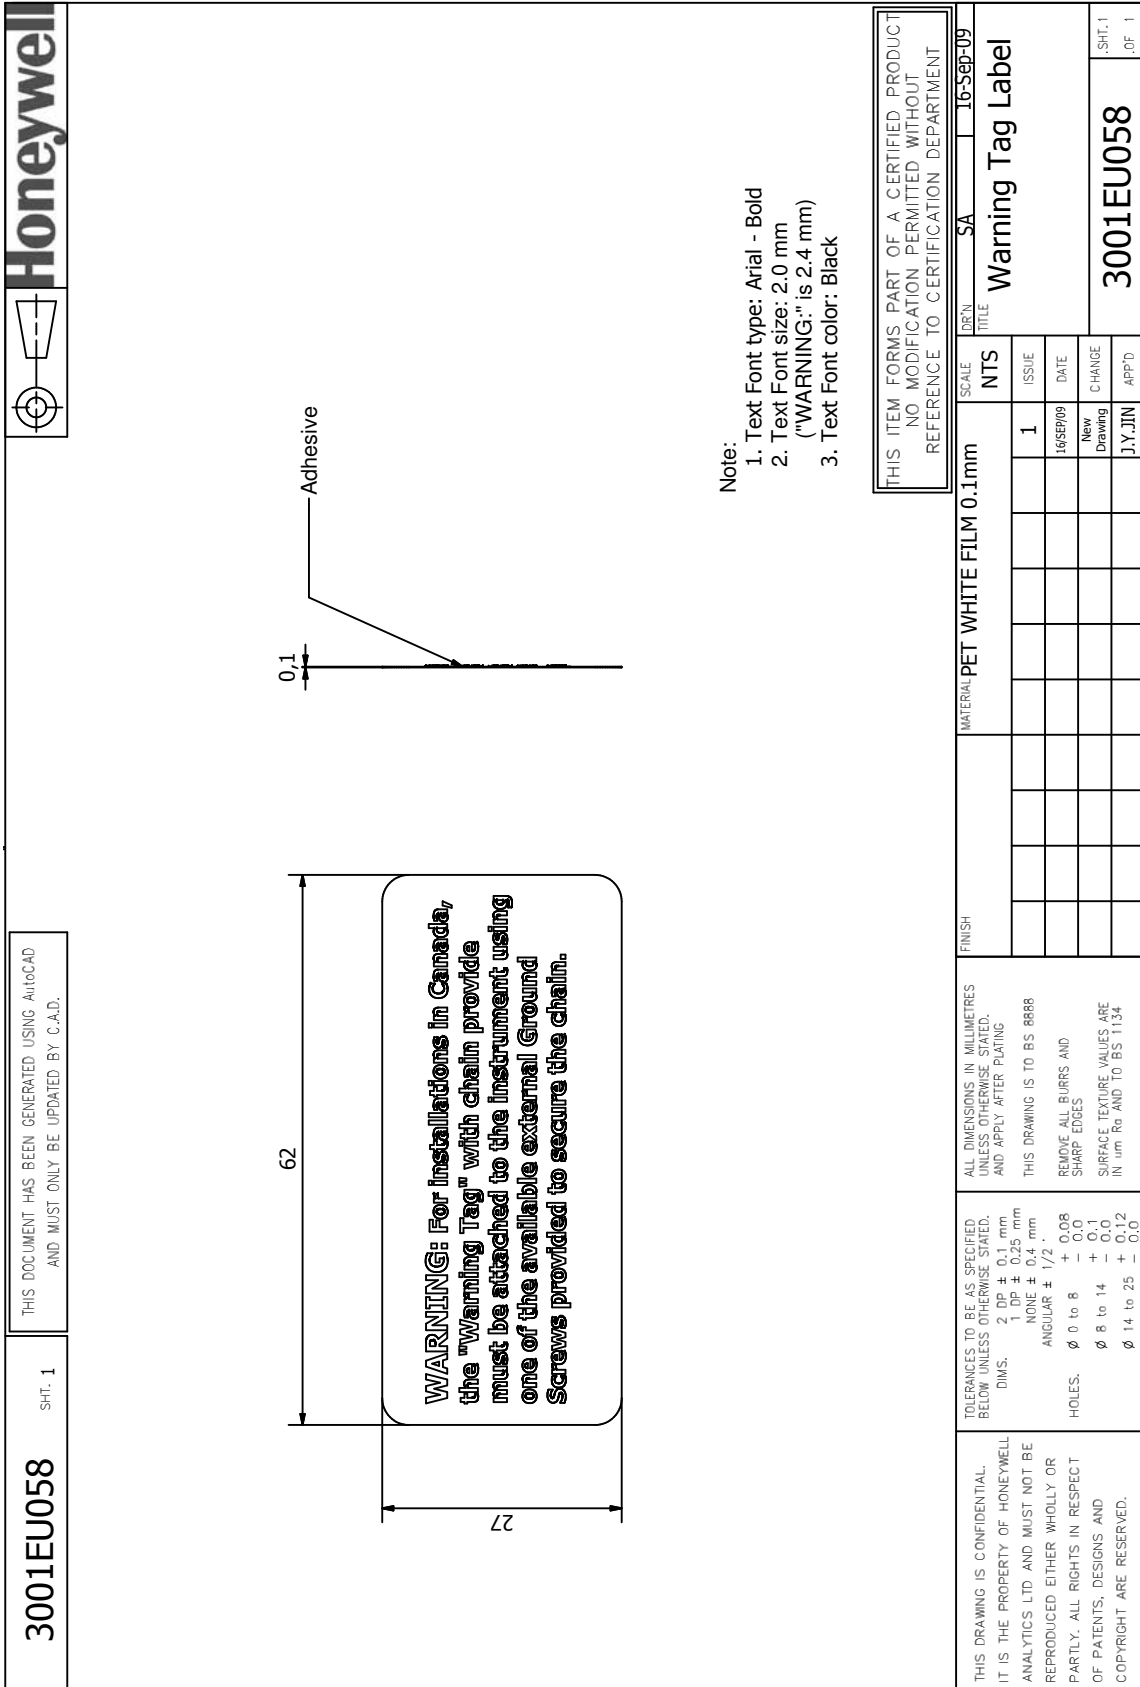

Sensepoint XCD Technical Manual

18.8 Sensor Cartridges Label

3001EA053

SHT. 1

THIS DOCUMENT HAS BEEN GENERATED USING ADOBE ILLUSTRATOR AND MUST ONLY BE UPDATED BY A.I.

CE

Honeywell Analytics Inc.
 0344 Lincolnshire, IL, USA 60069

Sensepoint XCD
 Disposable Sensor

Rev.

Gas Type

II 2 GD
 Ex d IIC T6 (Ta -40°C to +65°C) Gb
 Ex tb IIC T85°C Db IP66 A21
 BaseEx IIC T6 (Ta -40°C to +65°C) Gb
 IECEx BAS 08.0104X
 Max. Rating: 4.0V, 250mA, 1W
 WARNING: DO NOT SEPARATE
 WHEN ENERGISED

P/N : _____

S/N : SIIPPPYYWWNNNN

Revision Number

S/N : SIIPPPYYWWNNNN

SUPPLIER CODE

Sequence number

Week of MFG

Year of MFG

Part Code

Issue State

THIS ITEM FORMS PART OF A CERTIFIED PRODUCT
 NO MODIFICATION PERMITTED WITHOUT
 REFERENCE TO CERTIFICATION DEPARTMENT

NOTE

1. LEGEND TO BE THERMALLY TRANSFER
 PRINTED IN BLACK ONTO BLANK LABEL.

SCALE

DRAWING - BEN HUR

TITLE

Sensor Cartridge Label
 Artwork Drawing

DATE

12/SEP/08

FINISH		MATERIAL		SCALE		NTS		ISSUE		DATE		CHANGE	
Adhesive: Acrylic	Matt metallized PET 50um			3	2	1	A			02/APR/09	04/MAR/09	10/NOV/08	12/SEP/08
										Change IP Grade	ADD NOTE	REVISED DRAWING	NEW DRAWING
				J.Y.JIN	J.Y.JIN	J.Y.JIN	J.Y.JIN	J.Y.JIN	J.Y.JIN	J.Y.JIN	J.Y.JIN	J.Y.JIN	J.Y.JIN

THIS DRAWING IS CONFIDENTIAL. IT IS THE PROPERTY OF HONEYWELL ANALYTICS LTD AND MUST NOT BE REPRODUCED EITHER WHOLLY OR PARTLY. ALL RIGHTS IN RESPECT OF PATENTS, DESIGNS AND COPYRIGHT ARE RESERVED.

3001EA053

SHT. 1
OF 1

19 Cross Interference and Cross Calibration

19.1 Cross Interference Table for Toxic and Oxygen

This table shows the relative cross sensitivity of the Sensepoint XCD to other gases. "Gas Type" indicated the XCD sensor type fitted to the XCD. "Gas Type Applied" indicates the gas that may be applied to that sensor and the resulting Reading.

Gas type	Gas Type Applied	Concentration	Unit	Reading	Unit
O ₂	Carbon Dioxide	5	%vol	0.1	%vol (change O ₂ reading) per %vol CO ₂
	Ammonia	50	ppm	0	ppm H₂S
H ₂ S	Carbon Monoxide	100	ppm	<2	ppm H₂S
	Carbon Dioxide	5000	ppm	0	ppm H₂S
	Chlorine	0.5	ppm	0	ppm H₂S
	Ethylene	100	ppm	0	ppm H₂S
	Hydrogen	100	ppm	0	ppm H₂S
	Hydrogen Sulfide	10	ppm	10	ppm H₂S
	Nitrogen Monoxide	25	ppm	0	ppm H₂S
	Nitrogen Dioxide	3	ppm	0	ppm H₂S
	Sulfur Dioxide	2	ppm	0	ppm H₂S
CO	Acetone	1000	ppm	0	ppm CO
	Acetylene	40	ppm	80	ppm CO
	Ammonia	100	ppm	0	ppm CO
	Carbon Monoxide	100	ppm	100	ppm CO
	Chlorine	2	ppm	0	ppm CO
	Ethanol	2000	ppm	3	ppm CO
	Ethylene	100	ppm	85	ppm CO
	Hydrogen	100	ppm	20	ppm CO
	Hydrogen	25	ppm	0	ppm CO
	Iso-Propanol	200	ppm	0	ppm CO
	Nitrogen Monoxide	50	ppm	8	ppm CO
	Nitrogen Dioxide	800	ppm	20	ppm CO
	Sulfur Dioxide	50	ppm	0.5	ppm CO
H ₂	Carbon Monoxide	300	ppm	≤60	ppm H₂
	Hydrogen Sulfide	15	ppm	<3	ppm H₂
	Sulfur Dioxide	5	ppm	0	ppm H₂
	Nitrogen Monoxide	35	ppm	»10	ppm H₂
	Nitrogen Dioxide	5	ppm	0	ppm H₂
	Chlorine	1	ppm	0	ppm H₂
	Hydrogen Cyanide	10	ppm	»3	ppm H₂
	Hydrogen Chloride	5	ppm	0	ppm H₂
	Ethylene	100	ppm	»80	ppm H₂

19.2 Cross Calibration Flammable Gas Detector

For greater accuracy, a catalytic gas detector should be calibrated using a certified gas/air mixture equal to 50% LEL of the actual target gas intended to be monitored.

However, it is not always practical to obtain every detectable type of hydrocarbon gas in a calibration-ready, certified and verifiable form. Therefore, it is possible to carry out a “cross calibration” using another hydrocarbon gas/air mixture.

When the Sensepoint XCD Combustible LEL sensor is to be calibrated with a gas which is different to the gas or vapour to be detected, the following cross calibration procedure may be followed:

Caution: Where the user calibrates any sensor using a different gas, responsibility for identifying and recording calibration rests with the user. Refer to the local regulations where appropriate.

Notes:

1. Table 11 lists a selection of hydrocarbon compounds and states a reference figure or “Star Rating” according to the reaction they produce in relation to other hydrocarbons.
2. An eight star (8*) gas produces the highest output, while a one star (1*) gas produces the lowest output.

No.	Gas	Star Rating
1	Acetone	4*
2	Ammonia	7*
3	Benzene	3*
4	Butanone	3*
5	Butane	4*
6	Butyl acetate	2*
7	Butyl acrylate	2*
8	Cyclohexane	3*
9	Cyclohexanone	<1*
10	Diethyl ether	4*
11	Ethane	6*
12	Ethanol	5*
13	Ethyl acetate	3*
14	Ethylene	6*
15	Heptane	3*
16	Hexane	4*
17	Hydrogen	6*
18	Methane	7*
19	Methanol	5*
20	MIBK	2*
21	Octane	3*
22	Pentane	4*
23	Propane	5*

24	Propan-2-ol	4*
25	Styrene	1*
26	Tetra hydrafuran	4*
27	Toluene	3*
28	Triethylamine	3*
29	Xylene	1*

Table 14 . Star Rating of Gases

To cross calibrate the SG16B flammable gas detector catalytic bead:

- (1) Obtain the star rating for both the calibration test gas and the gas to be detected from Table 14
- (2) These values may then be used in Table 15 to obtain the required calibration span setting when a 50% LEL test gas is applied to the detector.

*Rating of Calibration Gas	*Rating of Gas to be Detected							
	8*	7*	6*	5*	4*	3*	2*	1*
8*	50	62	76	95	-	-	-	-
7*	40	50	61	76	-	-	-	-
6*	33	41	50	62	78	-	-	-
5*	26	33	40	50	63	79	-	-
4*	-	26	32	40	50	63	80	-
3*	-	-	26	32	40	50	64	81
2*	-	-	-	25	31	39	50	64
1*	-	-	-	-	25	31	39	50

Note: These settings must only be used with a calibration gas concentration of 50% LEL.

Table 15 Calibration span setting

(3) If a sensor is to be used to detect a gas other than that for which it was calibrated and there is no intention to use an equivalent calibration gas to re-calibrate the sensor, then the required correction factor may be obtained from Table 16.

The reading shown on the gas detector controller or transmitter display should be multiplied by this number in order to obtain a more accurate gas concentration result.

Sensor calibrated to detect	Sensor used to detect							
	8*	7*	6*	5*	4*	3*	2*	1*
8*	1.00	1.24	1.52	1.89	2.37	2.98	3.78	4.83
7*	0.81	1.00	1.23	1.53	1.92	2.40	3.05	3.90
6*	0.66	0.81	1.00	1.24	1.56	1.96	2.49	3.17
5*	0.53	0.66	0.80	1.00	1.25	1.58	2.00	2.55
4*	0.42	0.52	0.54	0.80	1.00	1.26	1.60	2.03
3*	0.34	0.42	0.51	0.64	0.80	1.00	1.27	1.62
2*	0.26	0.33	0.40	0.50	0.63	0.79	1.00	1.28
1*	0.21	0.26	0.32	0.39	0.49	0.62	0.78	1.00

Table 16. Correction factors

Notes:

1. *Since catalytic sensors require oxygen for correct operation, a mixture of gas in air should always be used for calibration purposes.*
2. *Assuming average performance of the sensor, the sensitivity information in Tables 14 To 16 is normally accurate to + or - 30%.*

Working Example:

If the target gas to be detected is 0-100%LEL Ethylene and the only calibration gas available to re-calibrate the sensor is Methane (at 50% LEL concentration), the procedure is as follows:

(1) Look up the star rating for each gas in Table 14:

Gas No. 14, Ethylene = 6*
Gas no. 18, Methane = 7*

(2) Then, look up the span settings for a 50% LEL calibration gas in Table 15 by selecting the row of figures next to the 7* in the "calibration gas" column. Select the figure in the 6* column of the "gas to be detected" section. The figure is 61.

(3) This means that during re-calibration, the span gas setting on the gas detector transmitter or controller should be set to 62% LEL to give an accurate measuring scale for 0-100%LEL Ethylene, when using 50% LEL Methane as the calibration gas.

Section 19.1 is used for Sensepoint XCD Catalytic Sensor only, please refer to Sensepoint Technical Manual for using Sensepoint flammable gas senso.

Please contact your local Honeywell Analytics sales or service distributor, or regional office should further clarification or additional information be required.

IRRELEVANT

19.3 Meter Multiplication Factors for Sensepoint XCD-IR Propane

It is possible to apply a linear cross reference factor to the output of a sensor characterized for propane and achieve the results shown in the graph below. Reasonable accuracy is maintained to at least the 50% LEL equivalent values of the cross-referred gasses.

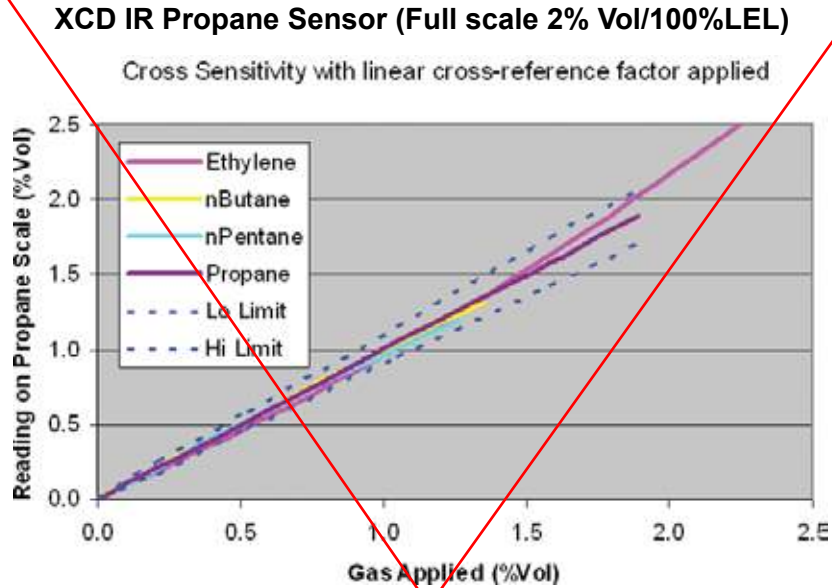


Diagram 18. Sensepoint XCD-IR (Propane) Sensor with linear cross-reference factor applied

Use the following multiplying factors to cross-refer to the propane reading:

Gas	Multiplication Factor
Ethylene	3.43
nButane	0.97
nPentane	0.89

Table 17. Multiplying Factors

Caution: These factors only apply to gas concentrations expressed in % Volume terms. When using a linear cross reference factor the temperature compensation is based upon propane, and there may be errors at temperatures away from the calibration temperature.

NOTE

Honeywell Analytics recommends that users verify the accuracy of their instruments using test gasses wherever possible. Cross-referred measurements should be used as a guide only, not as absolute values.

IRRELEVANT

XCD Transmitter

Appendix A - Modbus® Protocol A-2

A.1 Modbus and the XCD

The XCD gas detector may be fitted with the optional Modbus board. Authoritative information on the MODBUS Upgrade Kit can be found at www.modbus.org. The XCD supports Modbus/RTU over an RS-485 physical layer. The interface is isolated and includes a switchable 120 Ohm termination resistor. Baud rates 9600 or 19,200 are supported with 19,200 as the default. Most of the operations that are possible with local user interfaces can also be performed using the Modbus interface. This includes configuration operations. However, this Appendix only describes how to monitor XCD status using Modbus.

See Section 4.1.1 for information on installing the optional Modbus hardware. See Section 4.1.1 Configure Menu – Set ID Settings for information on setting the Modbus baud rate and Parity using the local user interface.

IRRELEVANT

A.2 Modbus Registers

ModBus Register Address	Information	R/W	Type	Size	Note
30001	Main SW Version of XCD	R	u8	1	
30002	EEP Version of XCD	R	u8	1	
30003	WatchDog s/w Version of XCD	R	u8	1	
30004	Location string	R	string[12]	6	
30010	ModBus slave ID	R	u8	1	
30011	Monitor Status	R	u16	1	Upper byte : Function Lower byte : Instrument Mode
30012	Inhibit current(mA)	R	u8	1	20 means 2.0mA
30013	Reserved	R	u16	1	
30014	Active Alarm	R	u32	2	bit 0 Alarm 1 is active bit 1 Alarm 2 is active
30016	Latched Alarm	R	u32	2	bit 0 Alarm 1 is active bit 1 Alarm 2 is active
30018	Active Fault	R	u32	2	Upper Byte: fault Lower Byte:warning Bit 0:W1~Bit 6:W6 Bit 7:F1~Bit 11:F5
30020	Latched Fault	R	u32	2	Upper Byte: fault Lower Byte:warning Bit 0:W1~Bit 6:W6 Bit 7:F1~Bit 11:F5
40001	System ID code	R	u16	1	Upper Byte : Type Code : 0x25 Lower Byte : My Address
40002	System ID code	R	u16	1	Upper Byte : Type Code : 0x25 Lower Byte : My Address : Dummy Spacer
40003	Gas reading	R	f32	2	
40005	Fault and Warning	R	u8	1	Fault = 1100 + Number Warning = Number as is
40006	Alarm, fault and warning state	R	u8	1	bit 0 Alarm 1 is active bit 1 Alarm 2 is active bit 2,3 for future expansion bit 4 Warning is active bit 5 Fault is active bit 6,7 for future expansion Note: Latching relay setting latches Modbus values in register 40006.
40007	Monitor state monitoring	R	u8	1	1 : Normal 2 : Warm Up after power on 3 : Inhibit 12 : Calibration
40008	Reserved	R	u16	1	
40009	Ca libration Due	R	f32	2	
40011	Measuring Unit	R	u8	1	4 : RPM 3 : %Vol 5 : %LEL 1 : mg/m3
40012	Peak Reading	R	f32	2	Peak Reading
40014	Reserved	R	u16	3	
40017	Temperature (°C)	R	s16	1	
40018	Reserved	R	u16	28	
40046	Measuring Gas name string	R	string[14]	7	
40053	Reserved	R	s16	1	
40054	Temperature (°F)	R	s16	1	
40055	Reserved	R	u16	1	
40056	Relay Status	R	u8	1	1 : Energized, 0 : De-energized
40057	Power Supply	R	f32	2	
40059	Calibration Interval	R/W	u16	1	
40060	Alarm Type	R/W	u8	1	High nibble : Alarm 2 Type Low nibble : Alarm 1 Type 0 : Disable, 1: Rising, 2:Falling
40061	Inhibit timeout	R/w	u16	1	
40062	Relay configuration	R/w	u8	1	Bit: 0 ~ 2: Relay Type1 ~ Relay Type3 Bit: 3~5 : Relay Sstatus1 ~ Relay Status 3 Bit: 6 : Relay Latch Status

Note: Latching relay setting latches Modbus values in register 40006.

LYTLE TUNNEL RENOVATIONS &
UPGRADES
SUBMITTED 12/22/15,
MANUFACTURER: 3S INC.
BID ITEM 281

Find out more:

Customer business centre

Asia Pacific

~~Honeywell Analytics Asia Pacific Co., Ltd.
#508, Kolon Science Valley (I)
187-10 Guro-Dong,
Guro-Gu
Seoul 152-050,
Korea
Tel: +82-2-2025-0307
Fax: +82-2-2025-0329
Email: analytics.ap@honeywell.com
Website: www.honeywellanalytics.co.kr~~

Customer business Centre

Europe, Middle East, Africa and India

~~Honeywell Analytics A.G.
Wilstrasse 11 U11
CH 8610 Uster
Switzerland
Tel: +41 (0)1 943 4300
Fax: +41 (0)1 943 4398
Email: gasdetection@honeywell.com
Website: www.honeywellanalytics.com~~

Customer Business Centre

Americas

Honeywell Analytics Inc.
405 Barclay Blvd.
Lincolnshire, IL 60069
USA
Tel: 1-847-955-8200
Toll free: 1-800-538-0363
Fax: 1-847-955-8210
Email: detectgas@honeywell.com
Website: www.honeywellanalytics.com

Please Note:

While every effort has been made to ensure accuracy in this publication, no responsibility can be accepted for errors or omissions. Data may change, as well as legislation and you are strongly advised to obtain copies of the most recently issued regulations, standards and guidelines. This publication is not intended to form the basis of a contract.

Technical Services

AP: ha.ap.service@honeywell.com
EMEA: ha.emea.service@honeywell.com
US: ha.us.service@honeywell.com
www.honeywell.com

Issue 4 06/2010
3001M5001_4
SPXCDHMANEN
© 2010 Honeywell Analytics

ZEROING AND SPAN CALIBRATION / TEST PROCEDURE

CAUTION: BEFORE INITIAL CALIBRATION THE 3S INCORPORATED TECHNICIAN WILL ALLOW THE DETECTOR TO STABILIZE FOR 30 MINUTES AFTER APPLYING POWER. WHEN IN ZEROING AND SPAN CALIBRATION MODE THE CURRENT OUTPUT FROM THE DETECTOR IS INHIBITED (DEFAULT 2mA) TO AVOID FALSE ALARMS.

TO CALIBRATE THE DETECTOR, AN APPROPRIATE SPAN GAS CYLINDER, CONSTANT FLOW REGULATOR, AND THE SENSEPOINT XCD GASSING CAP (PROVIDED IN THE XCDTOXKIT CALIBRATION KIT) WILL BE UTILIZED. THE FLOW RATES USED FOR THE CALIBRATION GAS ARE AS FOLLOWS:

GAS TYPE FLOW RATE (L / MIN)
 AIR OR N2 FOR ZERO 0.5 TO 1.0
 CO 0.5 TO 1.0

A COMPRESSED AIR CYLINDER (20.9% VOL OXYGEN) SHOULD BE USED TO PERFORM THE ZERO CALIBRATION. CONTACT 3S INCORPORATED FOR DETAILS OF SUITABLE CALIBRATION KITS.

THE 3S TECHNICIAN WILL CALIBRATE THE DETECTORS FOLLOWING THE PROCEDURE BELOW:

ZERO CALIBRATION

1. REMOVE THE WEATHER PROTECTION AND FIT THE GASSING CAP ACCESSORY ONTO THE SENSOR AND APPLY A CLEAN SOURCE OF ZERO GAS OR COMPRESSED AIR.
2. TO ACCESS THE CALIBRATION MENU, HOLD THE END OF THE MAGNET OVER THE SWITCH LOCATED AT THE TOP CENTER OF THE DETECTOR DISPLAY () FOR AT LEAST 3 SECONDS AND THEN REMOVE.
3. THE DISPLAY WILL INDICATE THE FIRST CONFIGURATION MODE MENU 'SEt CAL'.
4. PUT THE MAGNET OVER THE ' ' SWITCH AGAIN AND MOVE TO ENTER THE CALIBRATION MENU.
5. THE DISPLAY WILL SHOW THE CURRENT GAS READING, AND THE CALIBRATION ICON FLASHES.
6. WHEN THE ZERO GAS READING IS STABLE USE ' ' TO CONFIRM ZERO CALIBRATION.
7. IF SUCCESSFUL THE DISPLAY SHOWS 'ZEro PASS' (IF NOT SUCCESSFUL, THE DISPLAY SHOWS 'ZEro FAIL' AND RETURNS TO CONFIGURATION MODE).
8. IF USING ZERO-AIR, TURN IT OFF. ZEROING IS COMPLETE AND SAVED.
9. THE DISPLAY SHOWS 'SPAn' WITH 'YES' FLASHING.
10. IF SPAN CALIBRATION IS REQUIRED USE ' ' PROCEED TO THE NEXT STEP. IF SPAN CALIBRATION IS NOT REQUIRED, USE THE UP AND DOWN ARROWS TO SELECT 'NO' AND ' ' TO RETURN TO CONFIGURATION MODE.

SPAN CALIBRATION

1. THE DISPLAY SHOWS THE CURRENT CALIBRATION SPAN GAS CONCENTRATION WHILE FLASHING THE CALIBRATION ICON. USE THE UP AND DOWN ARROWS TO CHANGE THE CALIBRATION SPAN GAS CONCENTRATION, AND ' ' WHEN THE REQUIRED SPAN CALIBRATION LEVEL IS SET.
2. THE DISPLAY WILL SHOW THE CURRENT GAS READING, AND THE CALIBRATION ICON FLASHES.
3. CONNECT THE REGULATOR TO THE SPAN GAS CYLINDER.
4. APPLY THE SPAN GAS TO THE SENSOR USING THE SENSEPOINT XCD GASSING CAP. THE LIVE GAS READING IS DISPLAYED. WHEN THE READING IS STABLE, USE ' ' TO CONFIRM SPAN CALIBRATION.
5. IF THE SENSOR HAS BEEN REPLACED THE DISPLAY MAY SHOW 'SEnS rEPL YES'.
6. USE THE UP AND DOWN ARROW KEYS TO SELECT 'YES' IF THE SENSOR HAS BEEN REPLACED OR 'NO' IF IT HAS NOT BEEN REPLACED.
7. IF THE SPAN CALIBRATION IS SUCCESSFUL THE INSTRUMENT WILL BRIEFLY DISPLAY 'SPAn PASS' (IF THE CALIBRATION FAILS 'SPAn FAIL' IS DISPLAYED AND RETURNS TO CONFIGURATION MODE).
8. THE DISPLAY ALTERNATES BETWEEN 'Purg Gas' AND THE GAS READING TO INDICATE THAT THE UNIT IS EXPECTING THE SPAN GAS TO BE REMOVED FROM THE SENSOR.
9. PROMPTLY SWITCH OFF THE CALIBRATION SPAN GAS AND REMOVE THE SENSEPOINT XCD GASSING CAP FROM THE SENSOR TO ALLOW THE GAS TO DISPERSE.
10. WHEN THE READING FALLS BELOW 50% OF THE CALIBRATION GAS LEVEL THE DISPLAY INDICATES A COUNTDOWN (UP TO 180 SECONDS DEPENDANT ON GAS TYPE).
11. WHEN THE COUNTDOWN IS FINISHED, THE CALIBRATION PROCEDURE IS COMPLETE.
12. THE INSTRUMENT RETURNS TO THE 'SEt CAL' MENU. ACTIVATE THE THE UP OR DOWN ARROWS SWITCH TO SELECT ANOTHER MENU OR SELECT 'Quit' TO RETURN TO NORMAL MONITORING MODE.

NOTE: REMEMBER TO ALWAYS REPLACE THE WEATHER PROTECTION AND OTHER ACCESSORIES.

DRAWING LIST


DRAWING NUMBER	DESCRIPTION
2571-C01	DRAWING LIST, BILL OF MATERIAL, NOTES
2571-EL01	WIRING DIAGRAM

LYTLE TUNNEL RENOVATIONS & UPGRADES
 SUBMITTED 12/22/15,
 MANUFACTURER: 3S INC.
 BID ITEM 281

ELECTRICAL BILL OF MATERIAL

QTY.	PART NUMBER	DESCRIPTION	MANUFACTURER
8	SPXCDULNCX	CARBON MONOXIDE DETECTOR	HONEYWELL
1	XCDTOXKIT	TOXIC CALIBRATION KIT	HONEYWELL

- POWER SUPPLIED FROM THE PLC MUST BE BETWEEN 16VDC AND 32VDC
- POWER CONSUMPTION OF EACH DETECTOR IS 5.0W
- THE CABLE SHIELD SHOULD BE GROUNDED AT ONE END ONLY - EITHER AT THE DETECTOR(S) OR AT THE PLC.

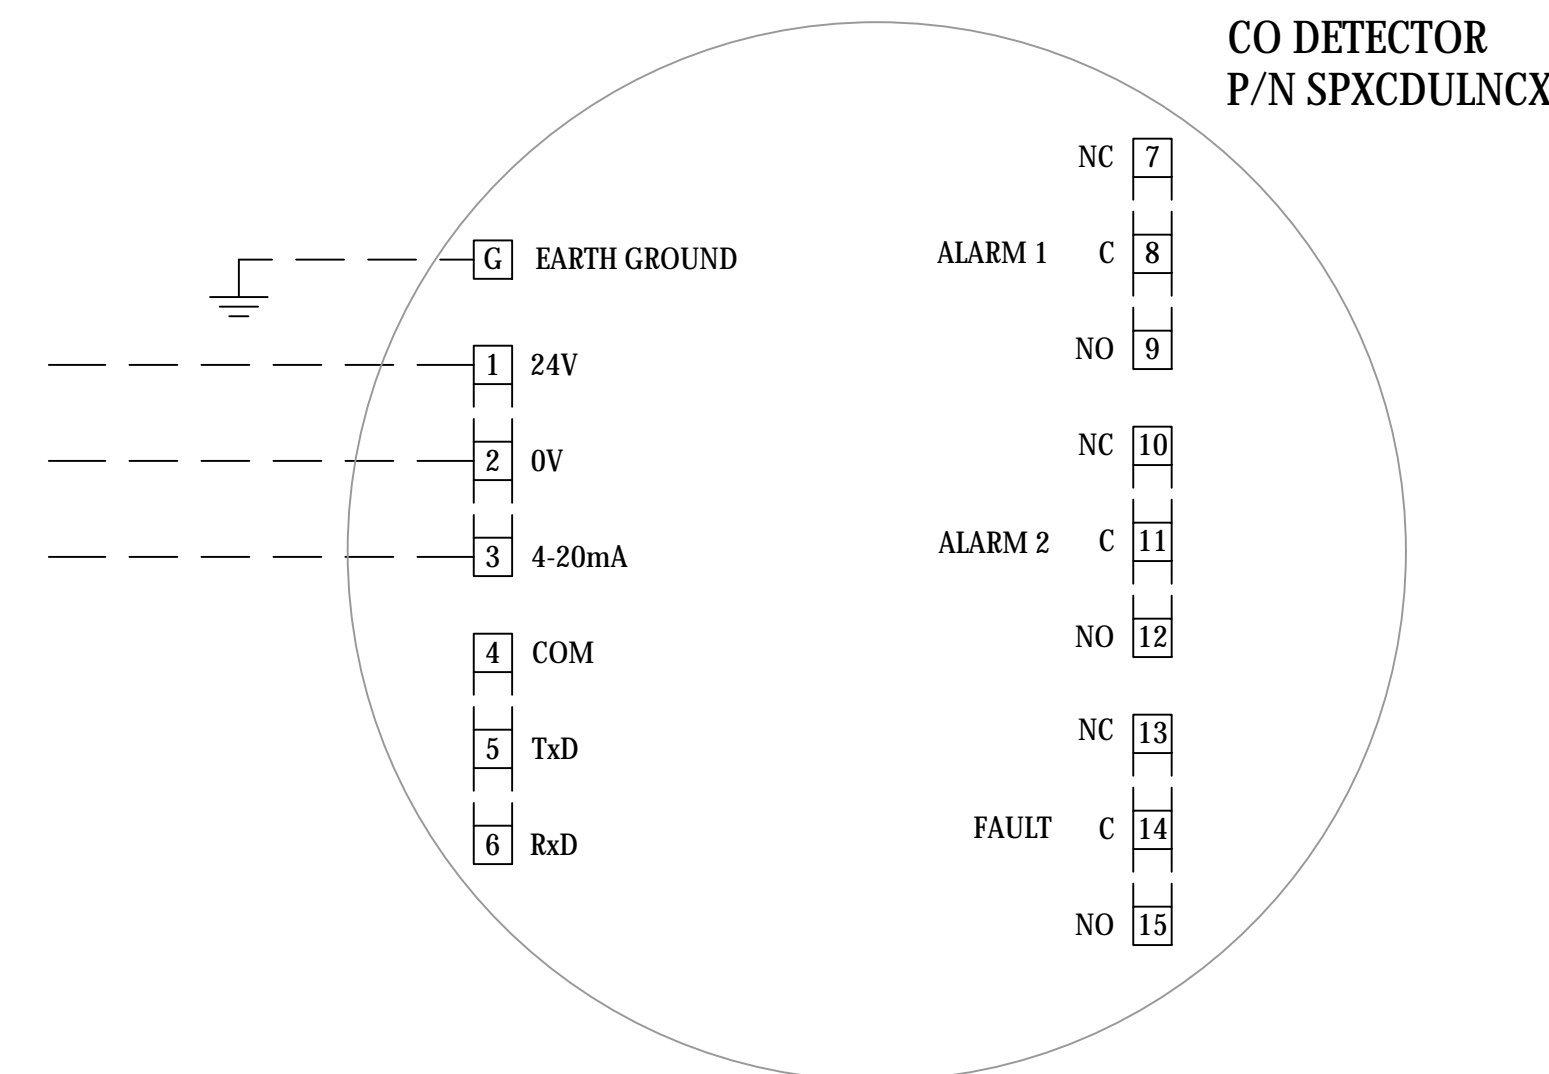


CO DETECTOR WIRING TO PLC USING 4-20mA CONNECTION

MOUNTING THE TRANSMITTER

THE SENSEPOINT XCD TRANSMITTER HAS AN INTEGRAL MOUNTING PLATE CONSISTING OF FOUR MOUNTING HOLES ON THE TRANSMITTER BODY. THE TRANSMITTER MAY BE FIXED DIRECTLY TO A SURFACE MOUNTING, OR TO A HORIZONTAL OR VERTICAL PIPE/STRUCTURE, 40.0-80.0MM (1.6 TO 3.1 INCHES) IN DIAMETER/CROSS SECTION. THE PIPE MOUNTING BRACKET ACCESSORY (OPTIONAL ACCESSORY) MAY BE USED FOR THIS PURPOSE.


TO MOUNT THE SENSEPOINT XCD TRANSMITTER TO A VERTICAL OR HORIZONTAL PIPE/STRUCTURE, USE THE OPTIONAL XCD MOUNTING KIT (CONTACT 3S FOR PRICING) AND THE FOLLOWING PROCEDURE:

1. FIT THE FOUR SPRING WASHERS, THEN THE PLAIN WASHERS TO THE M8 X 80MM SS316 BOLTS.
2. PASS THE FOUR BOLTS THROUGH THE FOUR MOUNTING HOLES OF THE TRANSMITTER HOUSING.
3. NOTE: IF THE XCD SUNSHADE IS TO BE USED THEN FIT THE SUNSHADE AND THE TWO LOCKING BOLTS AND WASHERS TO THE M8 X 80 BOLTS.
4. PLACE THE TRANSMITTER HOUSING AGAINST THE MOUNTING POSITION AND FIT THE TWO "U" CHANNEL MOUNTING BARS THE OTHER SIDE OF THE PIPE/STRUCTURE.
5. SECURE BOLTS TO THE THREADED HOLES OF THE "U" CHANNEL MOUNTING BARS.
6. TIGHTEN THE FOUR BOLTS SECURELY, (BUT DO NOT OVER-TIGHTEN) UNTIL THE TRANSMITTER HOUSING
7. CANNOT BE MOVED BY HAND ON ITS MOUNTING POSITION.

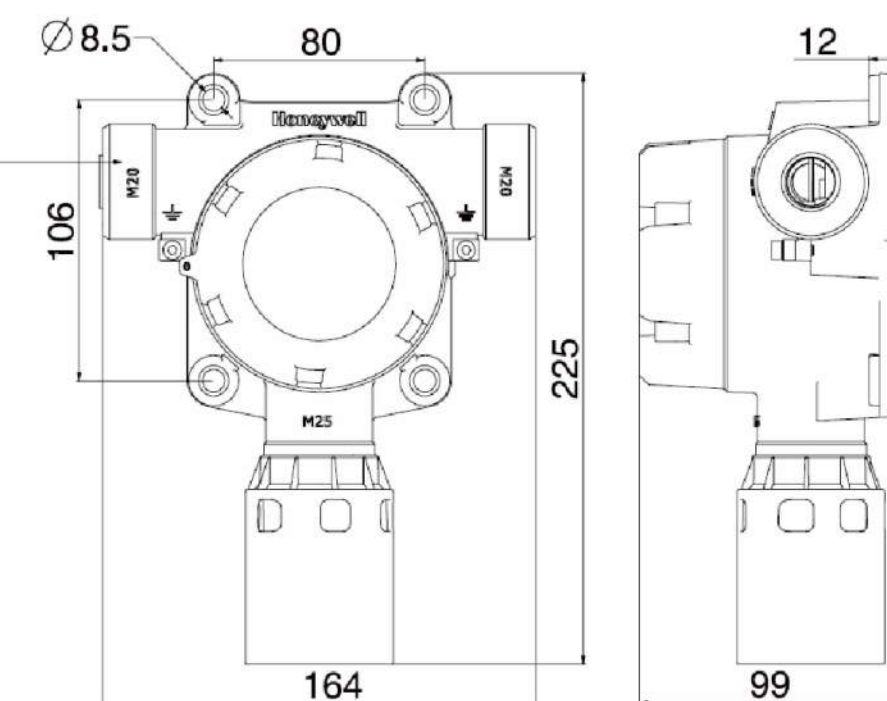

M20 entries for ATEX/IECEX/AP Versions and 3/4"NPT cable/conduit entries on UL/CSA versions

All dimensions are shown in mm.

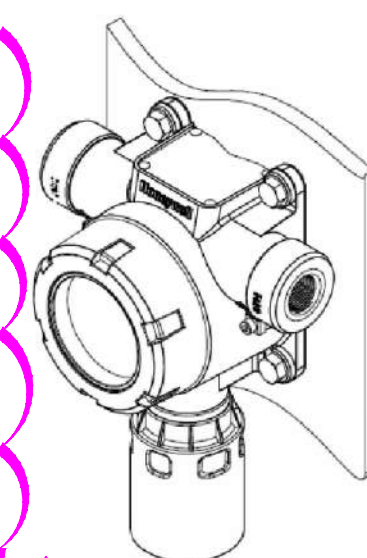

REV.	DATE	BY	DESCRIPTION
B	12-18-15	KAL	REVISED PER HATCH MOTT MACDONALD REVIEW
A	10-22-15	KAL	ISSUED FOR REVIEW
PROJECT: OHIO DEPARTMENT OF TRANSPORTATION I-71 LYTLE TUNNEL CINCINNATI, OHIO			
DESCRIPTION: CARBON MONOXIDE DETECTION SYSTEM WIRING DIAGRAM			
DRAWN BY: KAL	DATE: 10-20-2015	SCALE: NONE	
CHECKED BY: JJW	PROJECT NO.: 15-2571	DRAWING: 1 OF 1	
3S DRAWING NO.: 2571-C01	CUSTOMER DRAWING NO.:	REV: B	

3S Incorporated
 Engineered Fire Protection Systems

8686 Southwest Parkway • Harrison, OH 45030
 Office: 812-656-8045 • Fax: 812-656-8545
www.3s-incorporated.com